



# iAquaLink™

## Web Connect Device

For use with AquaLink RS for Systems with Rev R Firmware or later  
For use with PDA Control Systems with Rev 6.0 Firmware or later

### **WARNING**

**FOR YOUR SAFETY - This product must be installed and serviced by a contractor who is licensed and qualified in pool equipment by the jurisdiction in which the product will be installed where such state or local requirements exist. The maintainer must be a professional with sufficient experience in pool equipment installation and maintenance so that all of the instructions in this manual can be followed exactly. Before installing this product, read and follow all warning notices and instructions that accompany this product. Failure to follow warning notices and instructions may result in property damage, personal injury, or death. Improper installation and/or operation will void the warranty.**

**Improper installation and/or operation can create unwanted electrical hazard which can cause serious injury, property damage, or death.**

### **ATTENTION**

**This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.**

**NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:**

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an electrical source on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Modifications made to this equipment, which are not authorized by the manufacturer, may void the user's authority to operate this equipment.**



# Table of Contents

**NOTE** Some of the features described in this Manual DO NOT apply to all AquaLink RS models.

<b>Section 1. Important Safety Instructions .....</b>	<b>6</b>	<b>Section 5. Using the OneTouch™ Menu ....</b>	<b>19</b>
<b>Section 2. Overview of the iAquaLink Web Connect Device.....</b>	<b>8</b>	5.1 OneTouch.....	19
2.1 System Overview .....	8	5.2 All Off.....	19
2.2 iAquaLink Apps and Web Interface.....	8	5.3 Spa Mode.....	19
2.2.1 Mobile Smart Device Apps .....	8	5.4 Clean Mode.....	19
2.2.2 Web Browser Interface.....	8	<b>Section 6. Using the Help Menu.....</b>	<b>20</b>
<b>Section 3. Home Screen .....</b>	<b>9</b>	6.1 Help Menu.....	20
3.1 Title Bar.....	9	6.2 Help Sensors .....	20
3.2 Middle Info Panel .....	9	6.3 Help Remotes .....	20
3.3 Navigation Bar .....	9	6.4 Help Errors.....	20
3.4 Dialog Boxes.....	9	6.5 iAquaLink Status .....	21
<b>Section 4. Using the Menu Screen .....</b>	<b>10</b>	<b>Section 7. Using the Status Menu .....</b>	<b>21</b>
4.1 Menu Screen.....	10	7.1 Equipment Status .....	21
4.1.1 To Display the Menu Screen .....	10	<b>Section 8. Using Other Devices On/Off.....</b>	<b>22</b>
4.2 To Set Up Date/Time.....	10	8.1 Filter Pump .....	22
4.2.1 Date.....	10	8.2 Variable Speed.....	23
4.2.2 Time .....	10	8.3 Spa.....	23
4.3 Schedule .....	11	8.4 Pool Heat .....	23
4.3.1 Adding Devices to the Circuit List .....	11	8.5 Spa Heat (Dual Equipment).....	24
4.3.2 Deleting Devices from the Circuit List .....	12	8.6 Solar Heat .....	24
4.3.3 ON/OFF Times .....	12	8.7 Auxiliary Equipment .....	25
4.4 Set Temperature (For Pool and Spa Only System).....	12	8.8 Using Color Lights.....	25
4.4.1 Pool Heat .....	13	8.9 TEMP1 / TEMP2 (Pool or Spa Only) .....	26
4.4.2 Spa Heat .....	13	8.9.1 To Set Up TEMP1.....	26
4.4.3 Chiller .....	13	8.9.2 To Set Up TEMP2 (For Pool and Spa Only System) .....	26
4.5 Customize Home .....	13	8.10 Two Speed Operation (*Not Available for Export Models*) .....	27
4.5.1 Customize General, Aux and OneTouch Items .....	14	8.10.1 Two Speed Manual Operation.....	27
4.6 Lockouts and Password.....	14	8.10.2 High Speed Filtration Pump .....	27
4.6.1 To Lockout Devices .....	14	8.10.3 Low Speed Filtration Pump .....	27
4.6.2 To Set Lockout Password.....	15	<b>Section 9. System Setup .....</b>	<b>28</b>
4.6.3 How to Use the System when a Password is Enabled.....	15	9.1 System Setup Screen .....	28
4.7 AquaPure® .....	16	9.1.1 To Access System Setup.....	28
4.7.1 To Set Up Pool/Spa.....	16	9.2 Label Auxiliary Functions .....	28
4.7.2 To Set Up Quick Boost .....	16	9.2.1 To Set Up Label Auxiliary .....	28
4.7.3 To Pause, Restart and Stop Quick Boost..	16	9.3 Color Lights.....	29
4.7.4 Boost Setup.....	17	9.3.1 To Set Up Color Lights .....	29
4.8 Program Group .....	17	9.4 ESP Link (Seasonal Adjust).....	30
4.8.1 A and B Groups.....	17	9.4.1 To Set Up Seasonal Adjust.....	30
4.8.2 Program Auto Switch.....	17	9.4.2 ESP Link Operation.....	30
4.8.3 Custom Label Group .....	17	9.5 Set Dimmers .....	31
4.9 Custom Label.....	18	9.5.1 To Set Dimmers.....	31
4.9.1 Using the Alpha Keyboard.....	18		
4.9.2 Using the Numeric Keyboard .....	18		

9.6	OneTouch™	31
9.6.1	Set Devices	31
9.6.2	Select Name	32
9.7	Spa Remotes	32
9.7.1	Spa Side Switch	32
9.7.2	SpaLink® Setup	33
9.8	Device Runtime	33
9.8.1	To Set Up Device Runtime	34
9.9	Maintain Temp	34
9.9.1	To Set Up Maintain Temp	34
9.10	RS InterLink	34
9.10.1	To Set Up RS Intelink	35
9.11	Freeze Protection	35
9.11.1	To Set Up Freeze Protection	35
9.12	Assign JVs	36
9.12.1	To Set Up Assign JVs	36
9.13	Dusk Setup	36
9.13.1	Dusk Setup Off Time	36
9.13.2	City/Time Zone	37
9.13.3	Assign Devices	37
9.14	All Off Time	37
9.14.1	To Set Up All Off Time	37
9.15	Pump Lockout	37
9.15.1	To Set Up Pump Lockout	37
9.16	Daylight Savings Time (DST)	38
9.16.1	To Set Up DST	38
9.17	Product Information	38
9.17.1	Customize Product and Service Info	38
9.17.2	Customize Service Phone	38
9.18	Air Temperature	39
9.18.1	To Set Up Air Temperature	39
9.19	Temperature Calibrate	39
9.19.1	To Set Up Temp Calibrate	39
9.20	Degrees C/F	39
9.20.1	To Set Up Degrees	39
9.21	In-Floor Cleaning	39
9.21.1	To Set Up In Floor Cleaning	40
9.22	Clear Memory	40
9.22.1	To Set Up Clear Memory	40
9.23	Cancel Delay	40
<b>Section 10. Heat Pump Setup</b>		<b>41</b>
10.1	Solar Priority/Heat Pump Priority	41
10.2	Heat Pump (Heat Mode)	41
10.2.1	Heat Pumps Controlled by Extra Aux/Solar Boost Relay	41
10.2.2	Heat Pumps Controlled by the RS485 Interface	41
10.2.3	Heat Mode	42
10.3	Heat Pump (Chiller Mode)	42
10.3.1	Heat Pumps (Chiller) Controlled by the Extra Aux/Solar Boost Relay	42
10.3.2	Heat Pumps (Chiller) Controlled by the RS485 Interface	42
10.3.3	Chill Mode	43

## Section 11. Variable Speed Pump Setup..... 44

11.1	To Select the Pump/Model	44
11.2	To Set Up the Pump Application	45
11.3	To Set Up MIN/MAX Parameters	45
11.4	To Set Up the Priming Speed	45
11.5	To Set Up the Priming Duration Time	46
11.6	To Assign a Pump Speed to an AUX	46
11.7	To Set Up Pump Speed	46
11.8	To Re-label the Speed Preset	47
11.9	Default Preset Speed Labels (RS Combo and RS only)	47
11.9.1	Default Preset Speed Labels (Dual Equipment)	48
11.10	Variable Speed Pump Detail Operation	49
11.10.1	Filtration Mode	49
11.10.2	Auxiliary Pump Mode	50

## Section 12. Sprinkler System Setup..... 51

12.1	Running the Sprinkler System	51
12.1.1	Cancel Today - 24 Hour Sprinkler Delay	51
12.1.2	Enabling the Sprinkler System	51
12.1.3	Manually Starting a Sprinkler Program	52
12.1.4	Disabling the Sprinkler System	52
12.2	Programming Sprinkler System	52
12.2.1	To Set Up the Water Days	53
12.2.2	To Set Up the Sprinklers Program Start Time Menu	53
12.2.3	To Set Up the Sprinkler Valve Duration	53

## Section 13. ChemLink™ Setup ..... 54

13.1	To Set Up the ChemLink	54
13.2	To Configure the ORP Controller	54
13.2.1	ORP Feeder Type	55
13.2.2	ORP Feeder Times	55
13.2.3	ORP Delay On Time	55
13.2.4	ORP Setpoint	55
13.2.5	ORP Alarm - High Alert	56
13.2.6	ORP Alarm - Low Alert	56
13.2.7	Wait or Stop pH	56
13.2.8	ORP Next Cleaning	57
13.3	To Configure the pH Controller	57
13.3.1	pH Feeder Type	57
13.3.2	pH Feeder Times	57
13.3.3	pH Delay On Time	58
13.3.4	pH Setpoint	58
13.3.5	pH Alarm - High Alert	58
13.3.6	pH Alarm - Low Alert	58
13.3.7	pH Acid or Base Feed	59
13.3.8	pH Next Cleaning	59
13.3.9	pH Next Calibration	59
13.3.10	pH Calibration	59
13.4	Manual Feed Activation	60
13.4.1	To Perform an ORP Manual Feed	60
13.4.2	To Perform a pH Manual Feed	60
13.4.3	To Enable the ChemLink™ Feeder Tank Level Switch	60

**Section 14. Glossaries ..... 61**

14.1 Safety Delays and Lockouts .....61

14.2 Special Auxiliary Labels .....61

14.3 Controller Messages .....62

**Section 15. iAquaLink Menu Flow Chart ..... 64**

**EQUIPMENT INFORMATION RECORD**

DATE OF INSTALLATION \_\_\_\_\_

INSTALLER INFORMATION \_\_\_\_\_

INITIAL PRESSURE GAUGE READING (WITH CLEAN FILTER) \_\_\_\_\_

PUMP MODEL \_\_\_\_\_ HORSEPOWER \_\_\_\_\_

FILTER MODEL \_\_\_\_\_ SERIAL NUMBER \_\_\_\_\_

CONTROL PANEL MODEL \_\_\_\_\_ SERIAL NUMBER \_\_\_\_\_

NOTES: \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

## Section 1. Important Safety Instructions

### READ AND FOLLOW ALL INSTRUCTIONS

All electrical work must be performed by a licensed electrician and conform to all national, state, and local codes. When installing and using this electrical equipment, basic safety precautions should always be followed, including the following:

#### DANGER

To reduce the risk of injury, do not remove the suction fittings of your spa or hot tub. Never operate a spa or hot tub if the suction fittings are broken or missing. Never replace a suction fitting with one rated less than the flow rate marked on the equipment assembly.

#### WARNING

Prolonged immersion in hot water may induce hyperthermia. Hyperthermia occurs when the internal temperature of the body reaches a level several degrees above the normal body temperature of 98.6°F (37°C). The symptoms of hyperthermia include dizziness, fainting, drowsiness, lethargy, and an increase in the internal temperature of the body. The effects of hyperthermia include: 1) unawareness of impending danger; 2) failure to perceive heat; 3) failure to recognize the need to exit spa; 4) physical inability to exit spa; 5) fetal damage in pregnant women; 6) unconsciousness resulting in a danger of drowning.

#### WARNING

##### To Reduce the Risk of Injury -

- a) The water in a spa should never exceed 104°F (40°C) (40°C). Water temperatures between 100°F (38°C) and 104°F (40°C) (40°C) are considered safe for a healthy adult. Lower water temperatures are recommended for young children and when spa use exceeds 10 minutes.
- b) Since excessive water temperatures have a high potential for causing fetal damage during the early months of pregnancy, pregnant or possibly pregnant women should limit spa water temperatures to 100°F (38°C).
- c) Before entering a spa or hot tub, the user should measure the water temperature with an accurate thermometer since the tolerance of water temperature-regulating devices varies.
- d) The use of alcohol, drugs, or medication before or during spa or hot tub use may lead to unconsciousness with the possibility of drowning.
- e) Obese persons and persons with a history of heart disease, low or high blood pressure, circulatory system problems, or diabetes should consult a physician before using a spa.
- f) Persons using medication should consult a physician before using a spa or hot tub since some medication may induce drowsiness while other medication may affect heart rate, blood pressure, and circulation.

#### WARNING

**Risk of electric shock** - Install the power center at least five (5) feet (1,52m) from the inside wall of the pool and/or hot tub using non-metallic plumbing. Canadian installations must be at least three (3) meters from the water.

Children should not use spas or hot tubs without adult supervision.

Do not use spas or hot tubs unless all suction guards are installed to prevent body and hair entrapment.

People using medications and/or having an adverse medical history should consult a physician before using a spa or hot tub.

 **WARNING**

People with infectious diseases should not use a spa or hot tub.  
To avoid injury, exercise care when entering or exiting the spa or hot tub.  
Do not use drugs or alcohol before or during the use of a spa or hot tub to avoid unconsciousness and possible drowning.  
Pregnant or possibly pregnant women should consult a physician before using a spa or hot tub.  
Water temperature in excess of 100°F (38°C) may be injurious to your health.  
Before entering a spa or hot tub, measure the water temperature with an accurate thermometer.  
Do not use a spa or hot tub immediately following strenuous exercise.  
Prolonged immersion in a spa or hot tub may be injurious to your health.  
Do not permit any electric appliance (such as a light, telephone, radio, or television) within five (5) feet (1,52m) of a spa or hot tub.  
The use of alcohol, drugs or medication can greatly increase the risk of fatal hyperthermia in hot tubs and spas.  
Water temperature in excess of 100°F (38°C) may be hazardous to your health.

 **WARNING**

To avoid injury ensure that you use this control system to control only packaged pool/spa heaters which have built-in operating and high limit controls to limit water temperature for pool/spa applications. This device should not be relied upon as a safety limit control.

 **WARNING**

A terminal bar marked "GROUND" is provided within the power center. To reduce the risk of electrical shock which can cause serious injury or death, connect this terminal bar to the grounding terminal of your electric service or supply panel with a continuous copper conductor having green insulation and one that is equivalent in size to the circuit conductors supplying this equipment, but no smaller than no. 12 AWG (3,3mm<sup>2</sup>). In addition, a second wire connector should be bonded with a no. 8 AWG (8,4mm<sup>2</sup>) copper wire to any metal ladders, water pipes, or other metal within five (5) feet (1,52 m) of the pool/spa. In Canada the bonding wire must be minimum 6 AWG (13,3mm<sup>2</sup>).

 **CAUTION**

A ground-fault circuit-interrupter must be provided if this device is used to control underwater lighting fixtures. The conductors on the load side of the ground-fault circuit-interrupter shall not occupy conduit, boxes, or enclosures containing other conductors unless the additional conductors are also protected by a ground-fault circuit-interrupter. Refer to local codes for complete details.



**Attention installer:** Install to provide drainage of compartment for electrical components.

**SAVE THESE INSTRUCTIONS**

## Section 2. Overview of the iAquaLink Web Connect Device

Welcome, and thank you for purchasing the iAquaLink Web Connect Device!

The iAquaLink Web Connect Device can be added to your existing internet network via WiFi or via network cable directly to your existing router.

The iAquaLink web-based automation solution allows you to control the pool anytime, anywhere. The iAquaLink Web Connect Device is a configurable system that can be accessed anywhere internet connection is available. It's an ideal modern system to control pool, spa, sprinklers, salt chlorinators and much more equipment from a remote location.

This document gives instructions for operating the iAquaLink Web Connect Device on your personal computer or any device with access to the web.

**The instructions must be followed exactly. Read through the instructions completely before operating the equipment.**

### 2.1 System Overview

The iAquaLink Web Connect Device can be used in addition to an existing AquaLink RS control system, however, the firmware, in the power center must be updated to revision R or later.

The iAquaLink Web Connect Device can be used in addition to an existing PDA control system, however, the firmware, in the power center must be updated to revision 6.0 or later.

The iAquaLink system is a scalable system that may be customized in any of the following ways:

1. Activate the equipment manually through the DEVICES menu.
2. Program the equipment to turn on and off at specific times.
3. Use the OneTouch™ buttons to create scene settings with just "one touch" of a button. For example, you can program the spa heater to heat to 101 degrees, spa light on, jets on, water features on, and then name the result Romantic Scene.

### 2.2 iAquaLink Apps and Web Interface

The iAquaLink Web Connect Device must be installed prior to using the iAquaLink Web Interface and prior to registration of the product.

If you are installing the device yourself, please follow the online installation and registration instructions at [www.iAquaLink.com](http://www.iAquaLink.com) and refer to the Quick Start Guide (P/N H0364300) and the Installation Manual (P/N H0364100).

For additional assistance, contact our Technical Support Department at 1-800-822-7933.

#### 2.2.1 Mobile Smart Device Apps

##### IMPORTANT

Prior to accessing the Smart Device App and Web Browser Interface, make sure the installation and registration of the iAquaLink Web Connect Device has been completed successfully.

The smart device apps offer basic automation solution to control the pool and spa features anytime, anywhere.

Free iAquaLink smart device apps are available for devices such as Android®, iPhone®, iPad®, iPod Touch®, or any other HTML5 enabled device.

##### To download your App:

- Go to iTunes App Store<sup>SM</sup> and search Zodiac iAquaLink, for iPhone®, iPad®, or iPod Touch®.
- Go to the Android Market and search Zodiac iAquaLink, for any Android® device.

For instructions on how to use the smart device app, see the Welcome Brochure (P/N H0369500) included in your iAquaLink package.

#### 2.2.2 Web Browser Interface


Using your home personal computer or laptop, you can use the iAquaLink web interface to program, customize, control, and configure every device and feature available with your AquaLink RS and PDA systems.

##### How to Access the Web Browser Interface:

- Go to [www.iAquaLink.com](http://www.iAquaLink.com) and login your account to enter the "Welcome to iAquaLink Owner's Center".
- On this screen, click "Locations". If you have not done this step yet, follow the online instructions to add your device.



- Once your device is added to the list, click on it then a separate window browser will display a "Waiting for connection..." message followed by the HOME screen of your iAquaLink Web Interface.

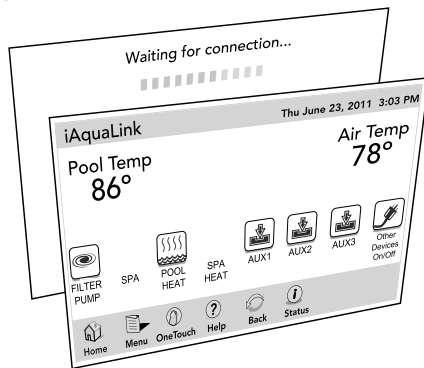


## Section 3. Home Screen

This screen functions primarily as the log-on screen and starting point for each session, providing access to the main navigation bar.

This screen displays the current time, date, temperature, and some user defined features.

As shown in the figure below, the iAquaLink menu screen displays the following layout:

- The title bar.
- The middle info panel.
- The navigation bar.

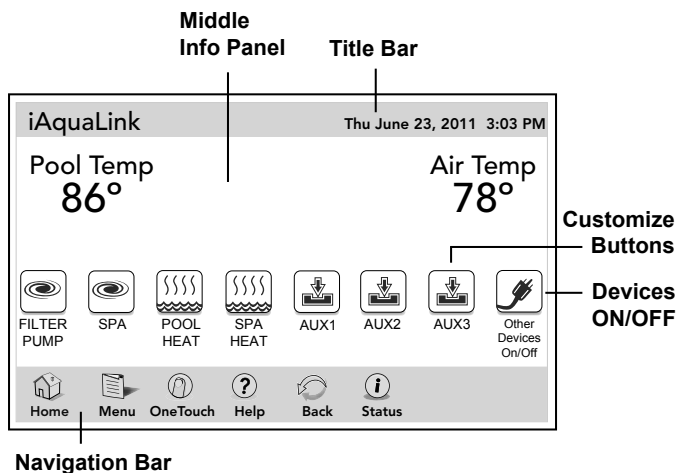

### 3.1 Title Bar

The title bar displays the title of the screen and the current date/time. The title of the current menu in use will always be shown on the title bar. This portion of the screen is a read only bar and does not respond to commands.

### 3.2 Middle Info Panel

The middle info panel on the HOME screen displays temperatures, user defined features and access to the OTHER DEVICES ON/OFF screen.


### 3.3 Navigation Bar

The navigation bar displays the following links:

- HOME** Returns the user to the HOME screen.
- MENU** Displays the main menu setup and programming.
- ONETOUCH** Turns on/off preset mood/scene settings.
- HELP** Displays the service and equipment information.
- BACK** Returns the user to the previous screen.
- STATUS** Displays information about the equipment.

### 3.4 Dialog Boxes

These are secondary windows that provide additional information or alerts about an operation in progress.

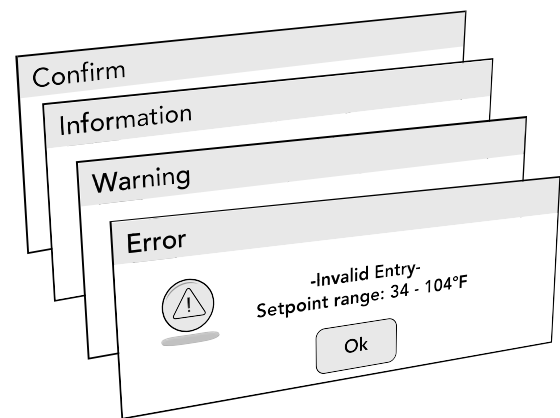

- CONFIRM** Asks if the user wants to proceed with an action.
- INFORMATION** Informs the user of events that are related to the current user activity.
- WARNING** Alerts the user of a condition that might cause a problem.
- ERROR** Alerts the user of an error.

## Section 4. Using the Menu Screen


### 4.1 Menu Screen

The MENU screen provides access to the main links to program, setup, schedule, and customize your pool/spa system.

#### 4.1.1 To Display the Menu Screen

HOME > MENU

On the HOME screen, click the MENU button to display the main MENU screen.

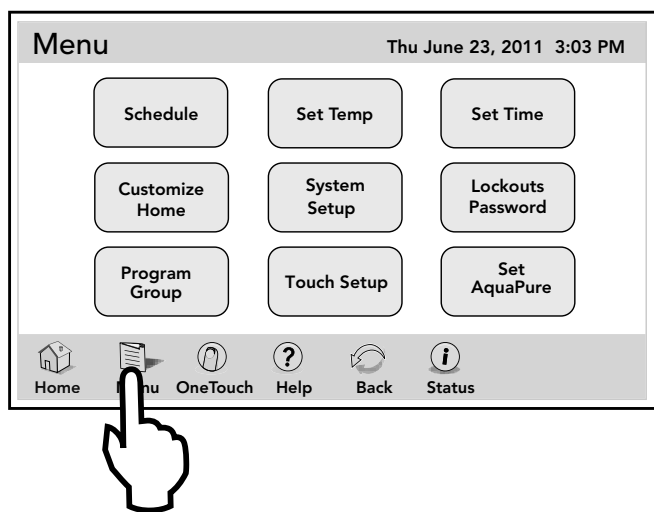

### 4.2 To Set Up Date/Time

The DATE/TIME screen allows the current date and time to be entered.

The correct time and date ensures that programming will work properly.

#### CAUTION

Make sure DATE and TIME are set up correctly before programming and scheduling any devices.


### 4.2.1 Date

MENU > SET DATE/TIME

On the MENU screen, click the SET DATE/TIME button to display the SET DATE/TIME screen.

On this screen, click the DATE button. Use the numeric keypad to enter a date in Month-Day-Year format.

Click ENTER when finished.

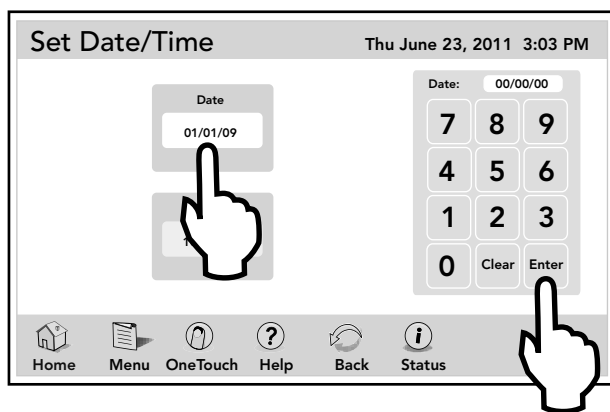


### 4.2.2 Time

MENU > SET DATE/TIME

On the SET DATE/TIME screen, click the TIME button.

Use the numeric keypad to enter new time. Click the AM/PM button to select your choice.

Click ENTER when finished.

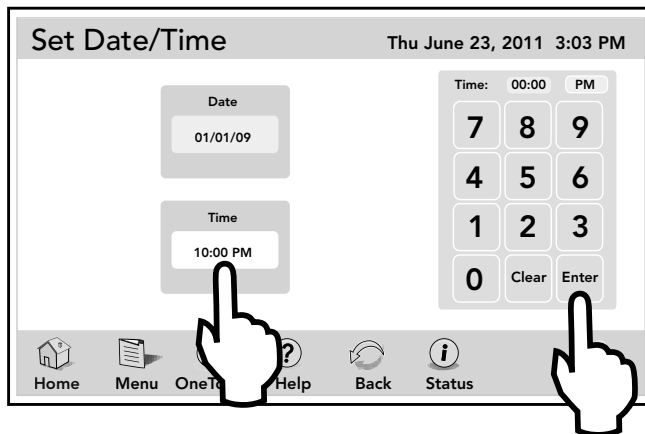

## 4.3 Schedule

### CAUTION

Make sure DATE and TIME are set up correctly before programming and scheduling any devices.

The SCHEDULE screen allows ON and OFF times to be programmed for any circuit (equipment) controlled by the iAquaLink.

The circuit can be scheduled to turn ON or OFF all days, weekends, weekdays, or any specific day of the week. Circuits are not listed in the SCHEDULE box until a START and STOP time are entered.

Each piece of equipment can be programmed for two (PDA) or multiple (AquaLink RS) on/off times each day or any specific day of the week.

### MENU > SCHEDULE

The SCHEDULE screen displays each circuit schedule list and a run days, START and STOP time, along with run days. Use PAGE UP/DOWN to scroll the circuit list. Select the RUN DAYS, then set the START and STOP times.

**Schedule** Thu June 23, 2011 3:03 PM

Circuit	Start Time	Stop Time	Days
VSP	7:00 AM	6:00 PM	Th, Wknd
Pool	8:00 AM	5:00 PM	All
Spa	7:00 PM	10:00 PM	F, Sa
Spa	5:00 PM	9:00 PM	M, W
Spa Heat	6:00 PM	8:00 PM	All
Pool Light	6:00 PM	8:00 PM	All

Run Days: All, M, Tu, W, Th, F, Sa, Su

Week Days: Start Time, Stop Time

Weekends: Start Time, Stop Time

Buttons: Add, Edit, Delete, Page Down, Page Up, Save

Navigation: Home, Menu, OneTouch, Help, Back, Status

### 4.3.1 Adding Devices to the Circuit List

Adding new devices to the circuit list on the SCHEDULE screen is a two-step procedure. First, you add the device to the circuit list and then you program the device as desired.

#### First Step - Selecting the new device

### MENU > SCHEDULE

On the SCHEDULE screen, in the circuit schedule list, click the ADD button to display the SCHEDULE DEVICES screen.

On this screen, use PAGE UP/DOWN to scroll the devices list. Click the SELECT button to save your selection and you will be automatically returned to the SCHEDULE screen.

**Schedule Devices** Thu June 23, 2011 3:03 PM

Devices:

- Filter Pump
- VSP Pump
- Spa
- Pool Heat
- Spa Heat
- Chiller
- Aux 1
- Aux 2

Buttons: Page Up, Page Down, Select

Navigation: Home, Menu, OneTouch, Help, Back, Status

**NOTE** Only one piece of equipment can be selected at a time.

#### Second Step - Programming the new device

On the SCHEDULE screen, the added equipment will be displayed and highlighted in the circuit list. Also, the EDIT button will be highlighted.

Enter the run day for the new device. Click SAVE when finished.

Repeat this procedure to add more devices to the circuit list.

**Schedule** Thu June 23, 2011 3:03 PM

Circuit	Start Time	Stop Time	Days
VSP	7:00 AM	6:00 PM	Th, Wknd
Pool	8:00 AM	5:00 PM	All
Spa	7:00 PM	10:00 PM	F, Sa
Spa	5:00 PM	9:00 PM	M, W
Spa Heat	6:00 PM	8:00 PM	All
Pool Light	6:00 PM	8:00 PM	All

Run days: All, M, Tu, W, Th, F, Sa, Su

Week Days: Start Time, Stop Time

Weekends: Start Time, Stop Time


Buttons: Add, Edit, Delete, Page Down, Page Up, Save

Navigation: Home, Menu, OneTouch, Help, Back, Status

### 4.3.2 Deleting Devices from the Circuit List

**MENU > SCHEDULE**

On the SCHEDULE screen, in the circuit schedule list, click the device you want to delete, then click the DELETE button. Click the OK button on the CONFIRMATION dialog box.

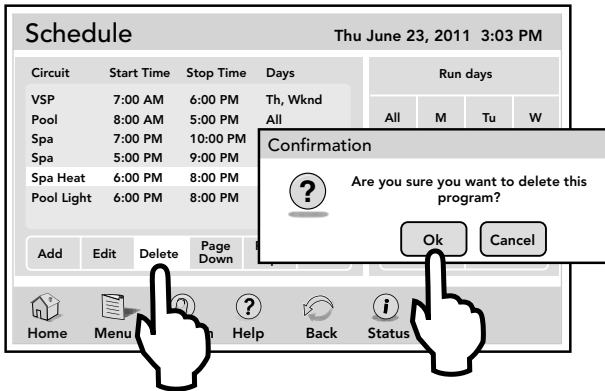

When finish setting all schedules click ENTER to store.



### 4.4 Set Temperature (For Pool and Spa Only System)

The SET TEMPERATURE allows to preset the pool and spa thermostats.

The default POOL temperature is 80°F (27°C). The default SPA temperature is 102°F (39°C).

Pool and Spa heat temperatures can be adjusted between 34°F (1°C) through 104°F (40°C).



**NOTE** If you enter temperatures outside this range, an invalid entry message will be displayed.

### 4.3.3 ON/OFF Times

**MENU > SCHEDULE**

On the SCHEDULE screen, in the circuit schedule list, click the desired equipment to be scheduled, then click the EDIT button.

On the RUN DAYS box, click the desired run day and then click the START TIME button to display the numeric keypad screen.

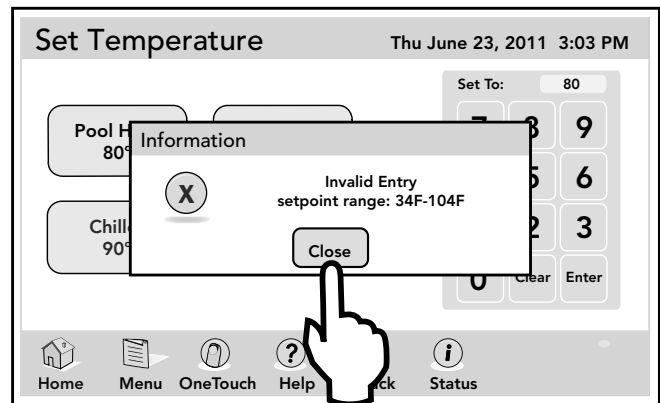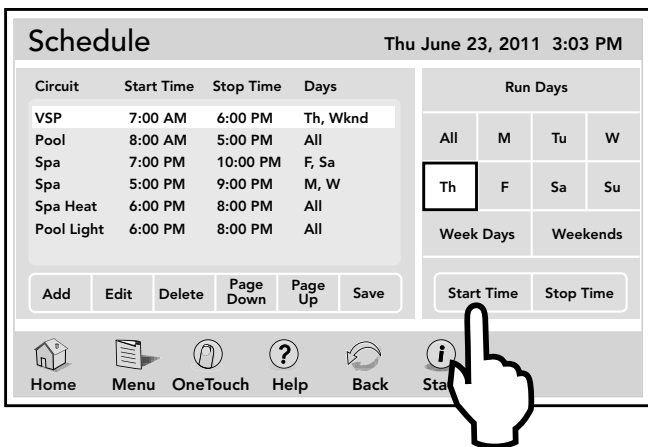

Use the NUMERIC keypad to enter the desired START TIME. Click the AM/PM button to select your choice. Do the same for the STOP TIME.


#### 4.4.1 Pool Heat

MENU > SET TEMP > POOL HEAT

On the MENU screen, click the SET TEMP button to display the SET TEMPERATURE screen.

Click the POOL HEAT button. Use the numeric keypad to enter the new temperature.

Click ENTER when finished.

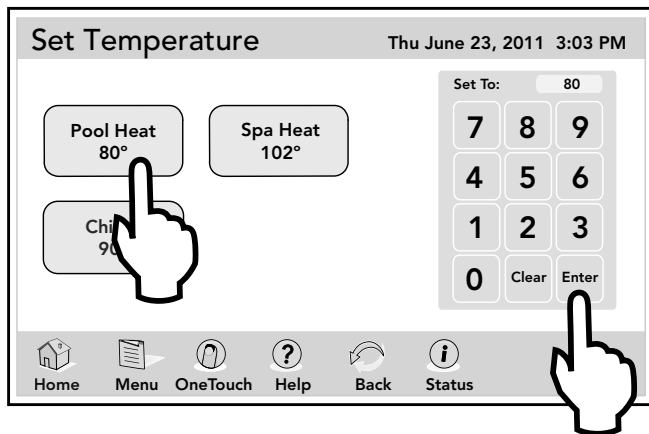


#### 4.4.2 Spa Heat

MENU > SET TEMP > SPA HEAT

On the MENU screen, click the SET TEMP button to display the SET TEMPERATURE screen.

Click the SPA HEAT button. Use the numeric keypad to enter the new temperature.

Click ENTER when finished.

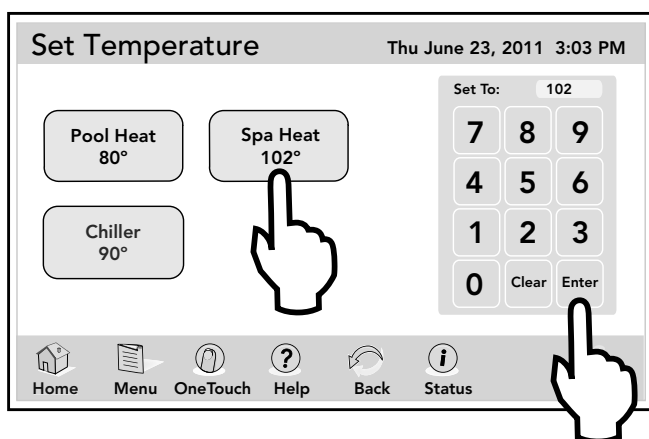

#### 4.4.3 Chiller


**NOTE** To use this feature, a Jandy EE Heat Pump/Chiller model must be installed. If not installed, the chiller button will not be displayed.

MENU > SET TEMP > CHILLER

On the MENU screen, click the SET TEMP button to display the SET TEMPERATURE screen.

Click the CHILLER button. Click the CLEAR button in the numeric pad to erase existing temperature. Use the numeric keypad to enter the new temperature.

Click ENTER when finished.

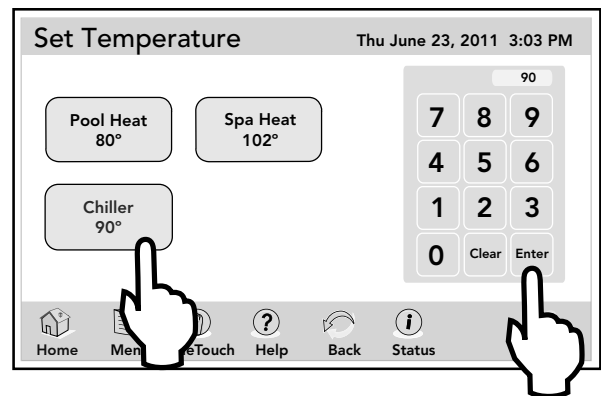


#### 4.5 Customize Home

The CUSTOMIZE HOME screen is used to link and label the icons of the HOME screen to general items, auxiliaries, and OneTouch™ settings.

MENU > CUSTOMIZE HOME

On the MENU screen, click the CUSTOMIZE HOME button to display the screen below.

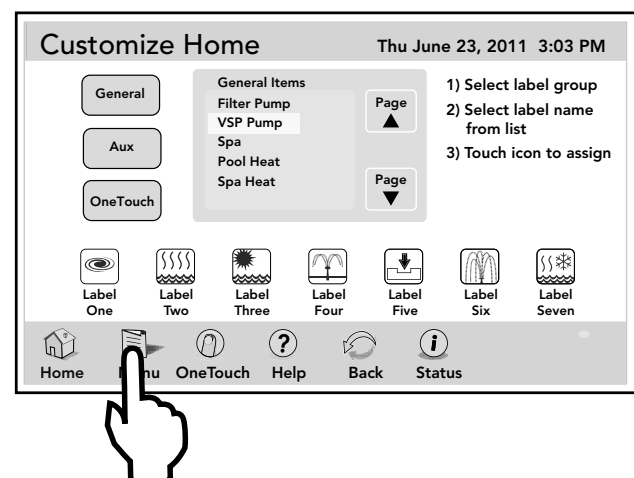

### 4.5.1 Customize General, Aux and OneTouch Items


The customization of the icons on the HOME screen is a three-step procedure:

- Select a group, either GENERAL, AUX or ONETOUCH.
- Select an item in the list.
- Click an icon to assign.


#### MENU > CUSTOMIZE HOME

On the CUSTOMIZE HOME screen, select your group, either GENERAL, AUX or ONETOUCH button.

Use the UP/DOWN arrows to scroll the item list and click the desired item.

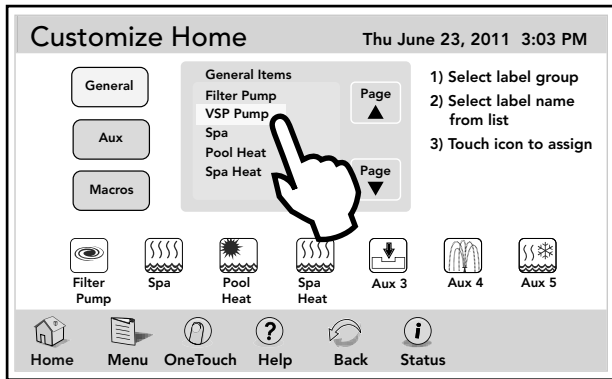

Click an unassigned icon. The label of the icon should reflect the selected item.

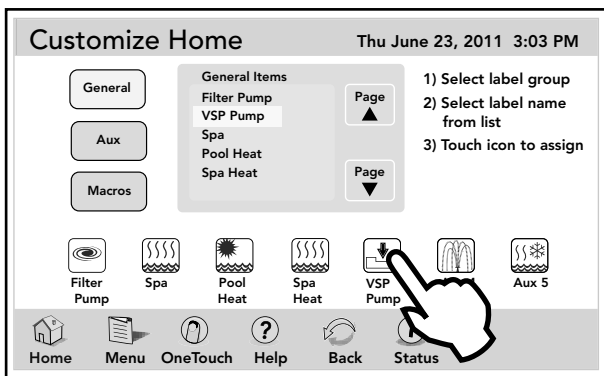

### 4.6 Lockouts and Password

The LOCKOUTS PASSWORD screen prevents changes to specific AquaLink RS operations.

#### 4.6.1 To Lockout Devices


When SYSTEM feature is on "LOCK", changes to program and system setup items are prevented. When SPALINK® RS and SPA SWITCH features are on "LOCK", all control from the SpaLink RS and Spa Side Switch are prevented.

When DEVICE feature is on "LOCK", the selected device cannot be controlled manually. However, the device can be controlled by a program.


#### MENU > LOCKOUTS PASSWORD

On the MENU screen, click the LOCKOUTS PASSWORD button to display the screen below.

Click the LOCKOUT button on the desired item to turn it ON.

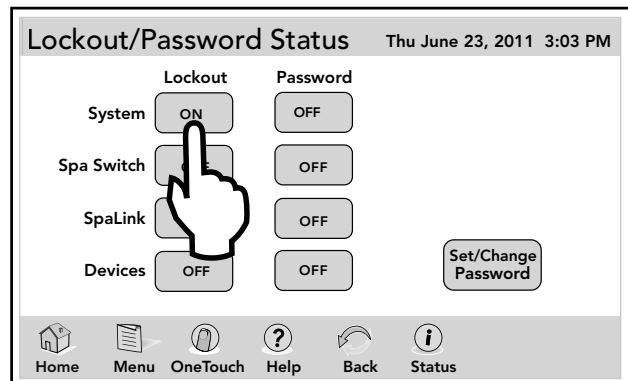

Click the PASSWORD button on the desired item to turn it ENABLE or OFF.

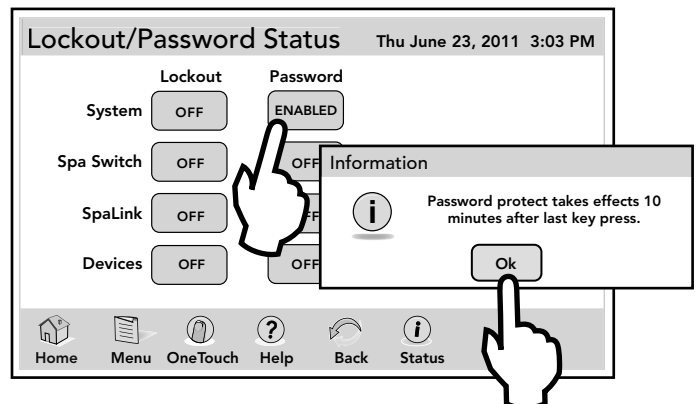

## 4.6.2 To Set Lockout Password


With LOCKOUT PASSWORD, the user may restrict access to programs, temperature settings, group settings, and system setup. One practical use of this feature might be to allow an owner to restrict the control of equipment located at a rental property.

**NOTE** Password must be a four (4) digit number and the same password is used for System, Programs, Spa Side Switch, SpaLink® and Devices.

### MENU > LOCKOUTS PASSWORD

On the MENU screen, click the LOCKOUTS button to display the LOCKOUTS PASSWORD screen.

Click the CHANGE PASSWORD button to display the PASSWORD screen. Enter a new password in the numeric keypad. If you make any mistake with your entry, click the CLEAR button to reset and enter your new password again. Click ENTER to save your new password.

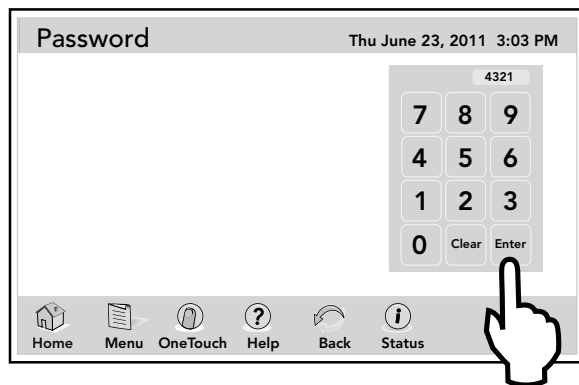

## 4.6.3 How to Use the System when a Password is Enabled

If a password is enabled for the system and a user tries to access: Set Temperature, Set Time, Programs, Program Groups, or System Setup, a Password Entry Screen will appear to allow the user to continue with their selection.


If a password is enabled for a device, and a user tries to access that device from a OneTouch™ control panel, a password entry screen will appear to allow the user to continue with their selection.

If a password is enabled and entered for a SpaLink or a Spa Side Remote and a user tries to use either of those devices, the units will not respond.

To enable any of these devices, click the LOCKOUT PASSWORD button in the MENU screen. Choose the equipment and click the PASSWORD button in the LOCKOUT/PSWD STATUS screen and enter the current password.

The system will accept a default password of 1234.

**NOTE** Once a password has been entered, you can access the device or menu item. If you do not press any keys for 10 minutes, then you will be required to enter the password when you try to access the device or menu item.

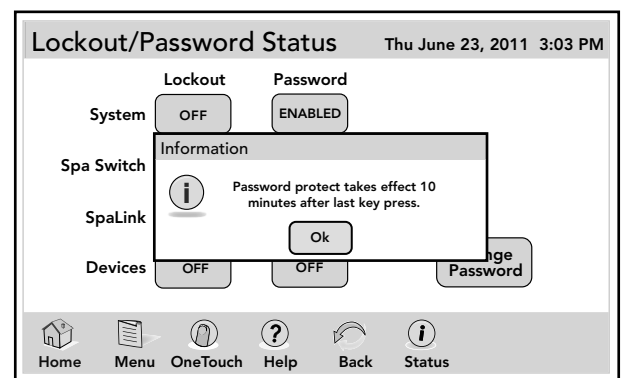

When changing the password be sure to write down this new password and save it someplace where it can be retrieved in the event that it is forgotten. If a password is forgotten, consult your dealer for instructions.

Passwords will only be applied if the PASSWORD PROTECT item is set to ENA and a PASSWORD is entered. Password protecting the system, programs, or devices does not require LOCKOUTS to be set for those devices.

## 4.7 AquaPure®

**NOTE** This equipment may not be part of your system. Please check with your installer.


The AquaPure chlorine generator system exclusively communicates with the AquaLink RS system. The SET CHLORINE PRODUCTION screen shown below will display the percentage of chlorine output.

The AquaLink RS system when interfaced with AquaPure chlorine generator system or PureLink™ allows set points for pool and spa chlorine production.

**NOTE** When the Chlorine Generator output percentage is set to a value greater than 0 and the filter pump is on, the system salinity level and output percentage appears on the equipment status screen.


### MENU > SET AQUAPURE > SET CHLORINE PRODUCTION

Turn the filter pump on, then on the MENU screen, click the SET AQUAPURE button to display the SET CHLORINE PRODUCTION screen.

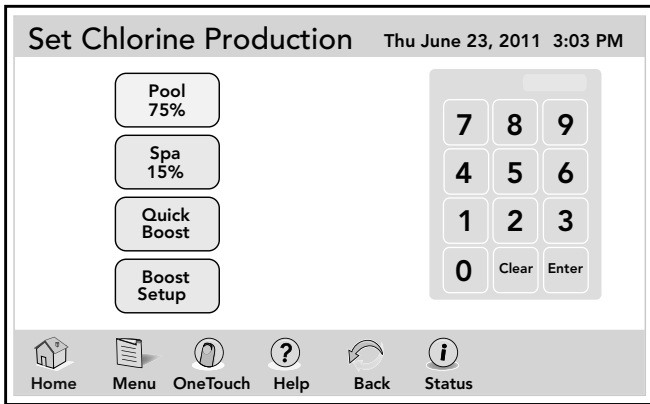


### 4.7.1 To Set Up Pool/Spa

Click the POOL or SPA button. Using the numeric keypad enter new percentage. Click ENTER when finished.

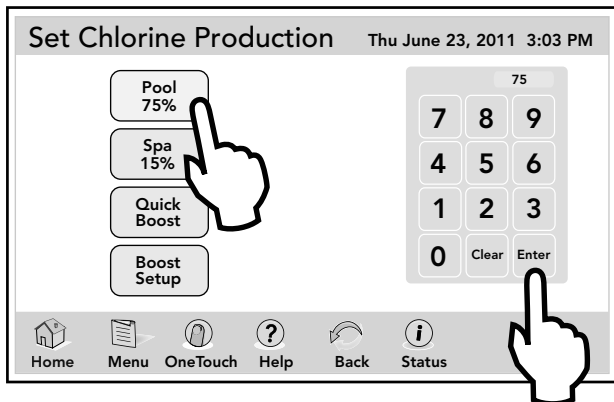


### 4.7.2 To Set Up Quick Boost

Click the QUICK BOOST button to display the AQUAPURE BOOST menu.

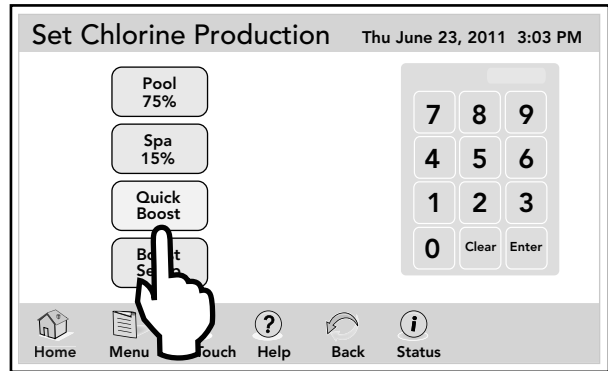

Click the START button to operate the AquaPure chlorinator.

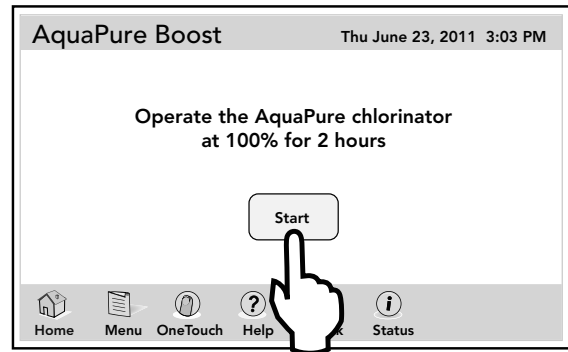


### 4.7.3 To Pause, Restart and Stop Quick Boost

On the SET CHLORINE PRODUCTION screen, click the QUICK BOOST button.

- Click the PAUSE button to pause quick boost operation.
- Click the RESTART button to restart quick boost operation after being paused.
- Click the STOP button to stop the operation.

**NOTE** This screen will appear on the iAquaLink when the AquaPure chlorinator starts operating.

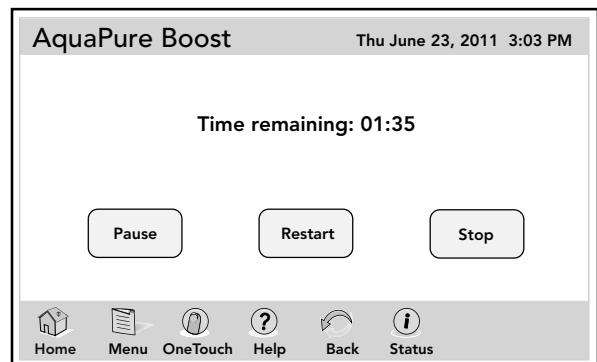



## 4.7.4 Boost Setup

Use this screen to adjust the number of hours or mode of boost pool.


The MODE selection is only available if the DIP switch S1-3 is in the ON position (Spillover mode).

**NOTE** All DIP switches are located on the left side of the AquaLink RS power center bezel.

On the SET CHLORINE PRODUCTION screen, click the BOOST SETUP button to display the screen below.

Using the numeric keypad, click the CLEAR button to erase existing hours. Enter new hours. Click ENTER when finished.

If selecting MODE, click the MODE button and choose either pool or spillover.

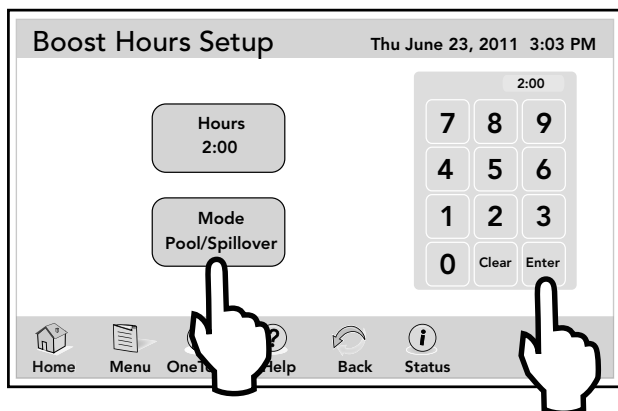

## 4.8 Program Group

The PROGRAM GROUP screen allows on and off times for any equipment controlled by the iAquaLink.

PROGRAM GROUPS are useful for changing between specific settings for summer, winter, or vacation. The iAquaLink will store on/off times for equipment in each group.


Use the PROGRAM GROUP menu to switch between program group A and program group B. Group A is the default. PROGRAM GROUP A or B will not appear unless PROGRAM GROUP has been selected. Confirm you are in the right program group before programming equipment.

### MENU > PROGRAM GROUP

On the MENU screen, click the PROGRAM GROUP button to display the PROGRAM GROUP screen.


### 4.8.1 A and B Groups

Click the GROUP A or B button to manually switch groups.

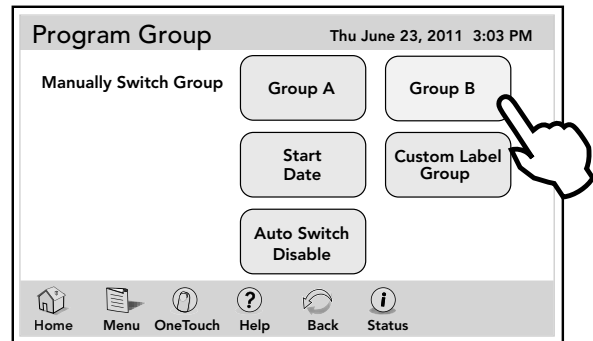

### 4.8.2 Program Auto Switch

If you like the Program Groups to switch automatically, select a group and enter new date using the numeric keypad. Click SAVE when finished.

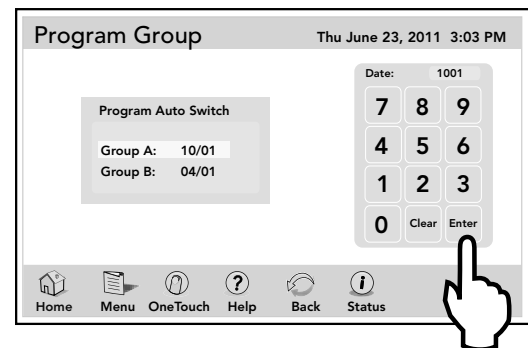


### 4.8.3 Custom Label Group

The names of the PROGRAM GROUPS can be customized using the CUSTOM LABEL screen.

On the PROGRAM GROUP screen, click the CUSTOM LABEL GROUP button to display the screen below.

Use this screen to enter your new label as explained in the following section.

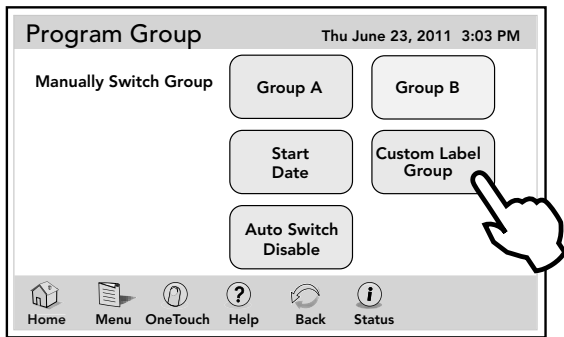

## 4.9 Custom Label

The CUSTOM LABEL screen displays a virtual keyboard and allows users to type data by touching the keys.

The keyboard displays alpha and numeric keys in the standard layout. By clicking the ALPHA/NUMERIC key, the screen switches between alpha and numeric keyboard.

A customized label may contain any combination of letters, numbers and special characters. By switching back and forth between the alpha and numeric keyboards, you can enter your customized label combining letters, numbers and special characters.

The maximum number of characters, including empty spaces, allowed in the text field is 16.

### 4.9.1 Using the Alpha Keyboard

Use the alpha keyboard as follows:

- Click the CLEAR button to erase existing label.
- Enter letters by clicking the keys directly.
- Use the SHIFT key to enter letters in upper case.
- Use the SPACE key to space letters or words.
- Click the BACK key to erase one letter.
- Click the SAVE key when finished.



### 4.9.2 Using the Numeric Keyboard

On the CUSTOM LABEL screen, click the ALPHA/NUMERIC button to display the numeric keyboard.

The numeric keyboard, besides the number keys, has extra characters available.

Use the numeric keyboard as follows:

- Clicking CLEAR key erases the existing label.
- Enter numbers by clicking the keys directly.
- Clicking the BACK key erases one number.
- Use the SPACE key to space numbers.
- Click the SAVE key when finished.

**NOTE** The SHIFT key has no effect in the numeric keyboard.




## Section 5. Using the OneTouch™ Menu

### 5.1 OneTouch

Each individual OneTouch mood/scene setting will allow the user to run multiple devices and heat the water to preset temperatures with the click of one button.

#### HOME > ONETOUCH

To display the OneTouch screen, click the OneTouch button on the navigation bar.

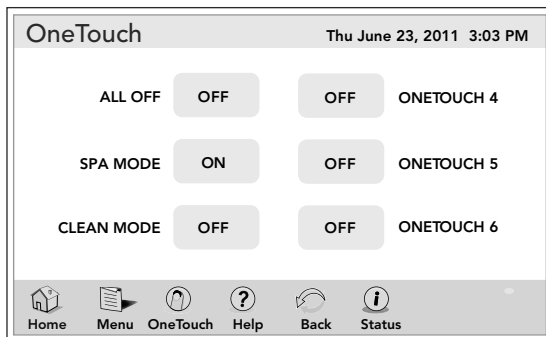

Use this menu to turn ON or OFF any of six (6) mood/scene settings.


If a OneTouch button is not assigned to any equipment, clicking this button will trigger a warning dialog box with the message "NO DEVICES have been Assigned to this OneTouch button".

### 5.2 All Off

The ALL OFF mode will turn off equipment that has been turned on by any means (manual or pre-programmed). This includes any of the heaters that were on (unless in use by Maintain function).

#### HOME > ONETOUCH > ALL OFF


On the HOME menu, click ONETOUCH button to display the ONETOUCH screen. Click the ALL OFF button.

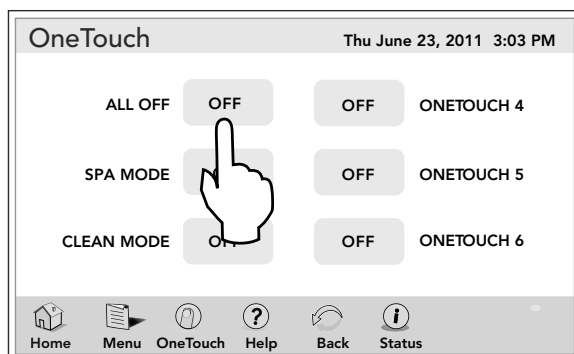

### 5.3 Spa Mode

#### HOME > ONETOUCH > SPA MODE

To activate a mood/scene setting of the SPA MODE, click SPA MODE button on the ONETOUCH screen and the ONETOUCH SPA MODE screen will appear.

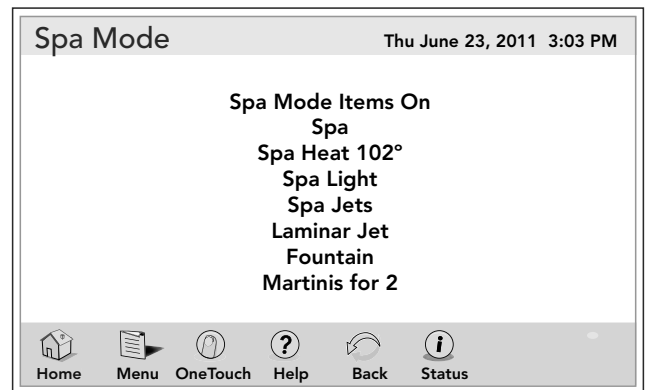

### 5.4 Clean Mode


The CLEAN MODE, when selected, will turn on just the filter pump, unless DIP switch S1-1 is in the ON position.

If the DIP switch S1-1 is in the ON position, the CLEAN MODE will turn on the FILTER PUMP followed by the CLEANER PUMP after a three (3) minute delay.

**NOTE** All DIP switches are located on the left side of the AquaLink RS power center bezel.

#### HOME > ONETOUCH > CLEAN MODE

On the HOME menu, click the ONETOUCH button to display the DEVICES screen. Click the CLEAN MODE button to display the equipments on cleaning mode.

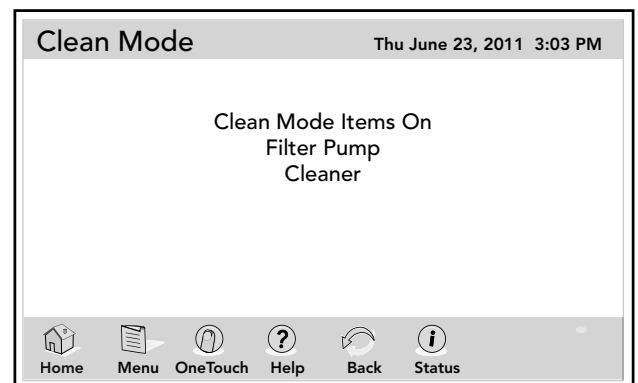

## Section 6. Using the Help Menu

### 6.1 Help Menu

The HELP menu displays service information about your local service provider as entered in the PRODUCT INFORMATION system setup section.

See Section 9.17, "Product Information".


The HELP menu screen also provides diagnostic system information such as connection of devices, operation state of sensors, and errors of the system, if any.

#### HOME > HELP

On the HOME screen, click the HELP button to display the HELP screen.

Use PAGE UP/DOWN to scroll the list, if additional items are available.

The NEXT button will display the HELP SENSORS screen.

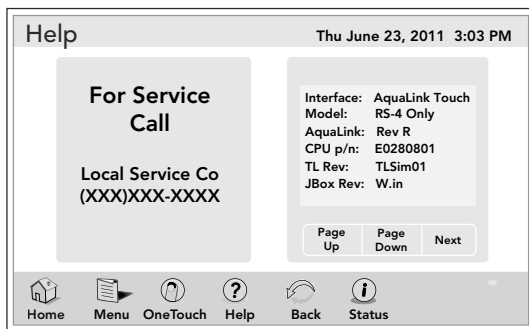

Click the BACK button to return to the previous screen.


### 6.2 Help Sensors

This screen displays the operation state of the sensors.

#### HOME > HELP > HELP SENSORS

On the HELP menu, click the NEXT button to display the HELP SENSORS screen.

Use PAGE UP/DOWN to scroll the list, if additional items are available.

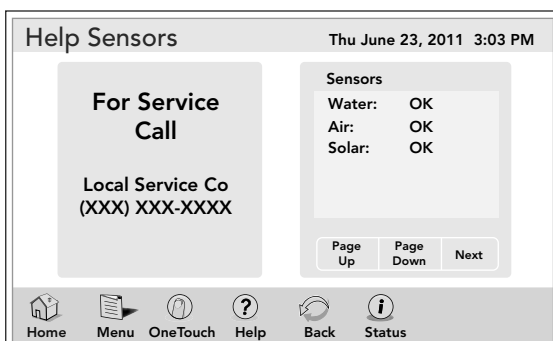


### 6.3 Help Remotes

This screen lists all the equipment available through the RS485 Network.

#### HOME > HELP > HELP REMOTES

On the HELP menu, click the NEXT button to display the HELP REMOTES screen.

Use PAGE UP/DOWN to scroll the list, if additional items are available.

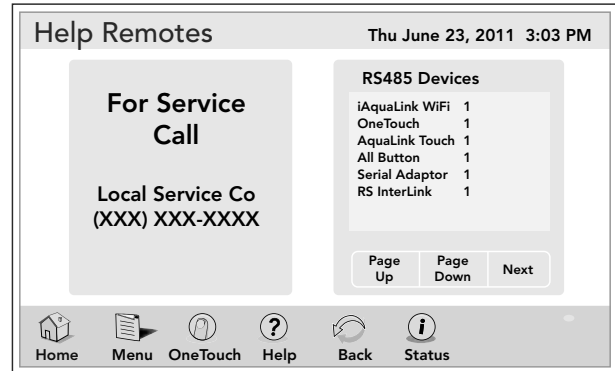


### 6.4 Help Errors

The ERRORS screen lists all equipment with possible faults.

#### HOME > HELP > ERRORS

On the HELP menu, click the NEXT button to display the HELP ERRORS screen.

Use PAGE UP/DOWN to scroll the list, if additional items are available.

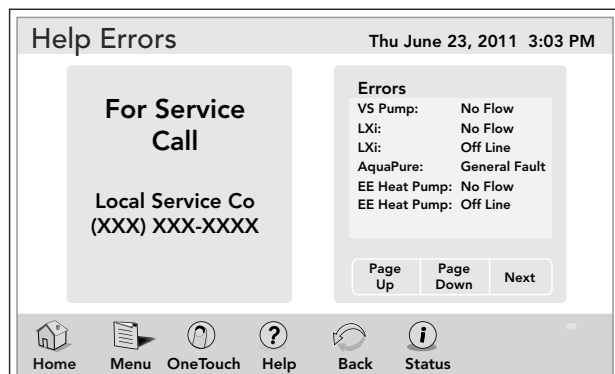


## 6.5 iAquaLink Status

The iAquaLink status screen monitors network information.

HOME > HELP > IAQUALINK STATUS

On the HELP menu, click the NEXT button to display the HELP ERRORS screen.

Use PAGE UP/DOWN to scroll the list, if additional items are available

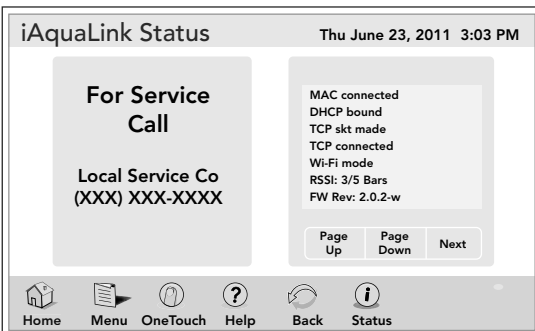


## Section 7. Using the Status Menu


### 7.1 Equipment Status

HOME > STATUS

On the HOME screen, click the STATUS button to display the EQUIPMENT STATUS screen.

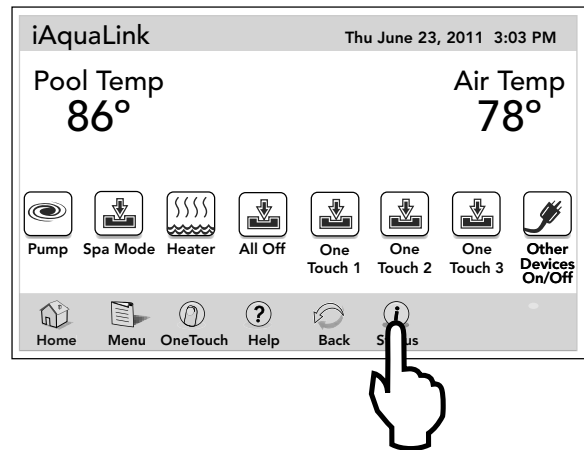

The EQUIPMENT STATUS screen provides the current status of all equipment.

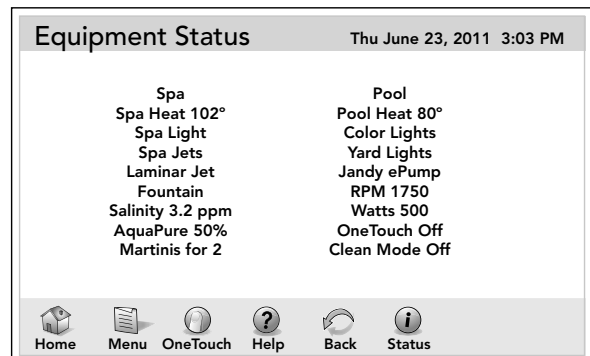

Click the HOME or BACK button to return to the HOME screen.


**NOTE** The EQUIPMENT STATUS screen will timeout after approximately 25 seconds at which time the previous screen will be displayed.

If no devices are turned ON, the message "No devices are currently on." will appear on the EQUIPMENT STATUS screen.

## Section 8. Using Other Devices On/Off


Use this menu to turn on or off manually any equipment or all equipment through the ALL OFF function.

Note that on this screen you can also override the settings for POOL HEAT, SPA HEAT and SOLAR HEAT when enabling.

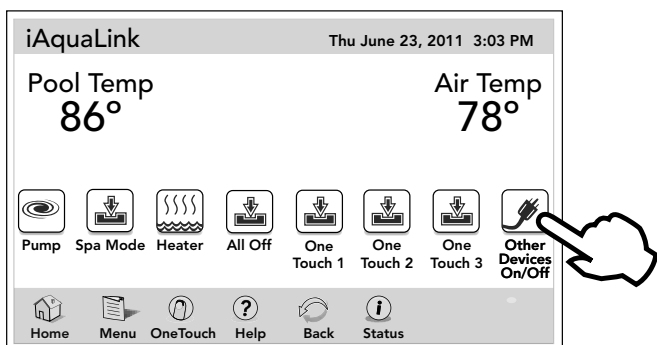

### HOME > OTHER DEVICES ON/OFF

On the HOME menu, click the OTHER DEVICES ON/OFF button to display the DEVICES screen. Click the UP/DOWN arrows to scroll to the next page.

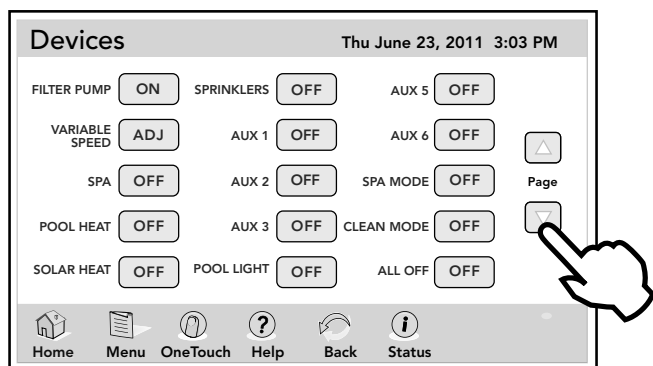

Click the HOME or BACK button in the navigation bar to return to the HOME screen.


## 8.1 Filter Pump

The FILTER PUMP selection turns the main filtration pump on or off for circulation to the pool. The filter pump also activates if the spa is turned on, if the pool cleaner is turned on, or if the spa spill-over effect is activated.


The main filtration pump circulates the pool or spa water through the filter and heater. The pump must be on if you want to display the pool temperature, or if you want to heat the pool.

### HOME > OTHER DEVICES ON / OFF > FILTER PUMP

On the HOME menu, click the OTHER DEVICES ON/OFF button to display the DEVICES screen. Click the FILTER PUMP button to turn the main filtration pump ON. The pump will turn ON after a delay.

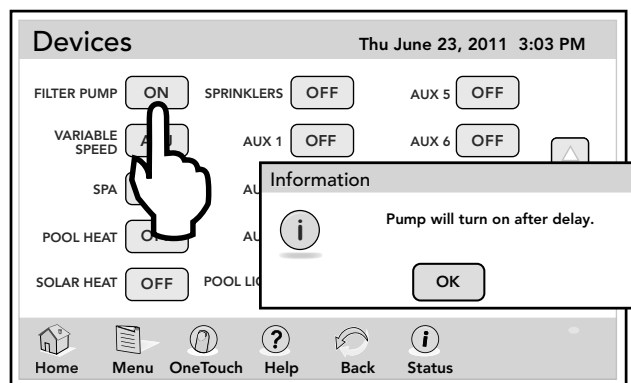

When you turn OFF the FILTER PUMP, the pump will remain ON while the heater cools down.

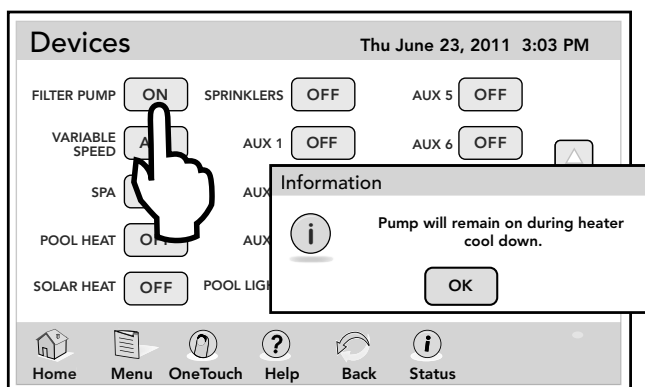


Click the HOME or BACK button in the navigation bar to return to the HOME screen.

## 8.2 Variable Speed

**NOTE** This equipment may not be part of your system. Please check with your installer.

**HOME > OTHER DEVICES ON / OFF > ADJ**

On the HOME menu, click the OTHER DEVICES ON/OFF button to display the DEVICES screen. Click the ADJ button to turn the variable speed ON.

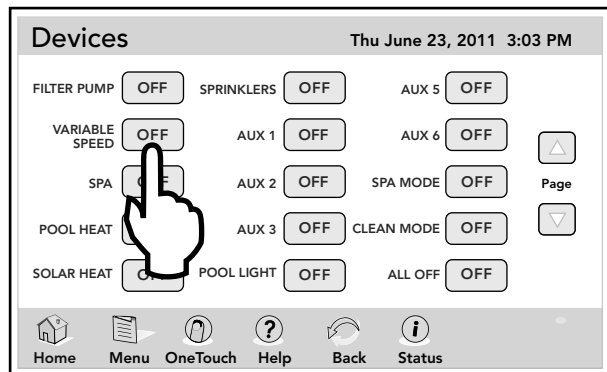

Click the HOME or BACK button in the navigation bar to return to the HOME screen.


## 8.3 Spa

The SPA switches water circulation from the pool to spa (pool/spa combination models only). Turning on the spa also activates the filter pump (after a delay for valve rotation) and deactivates the pool cleaner if it is on.


Activation takes place after a 30 seconds delay (while valves are turning).

**HOME > OTHER DEVICES ON / OFF > SPA**

On the HOME menu, click the OTHER DEVICES ON/OFF button to display the DEVICES screen. Click the SPA button to turn the spa ON. Activation will take place after a 30 seconds delay.

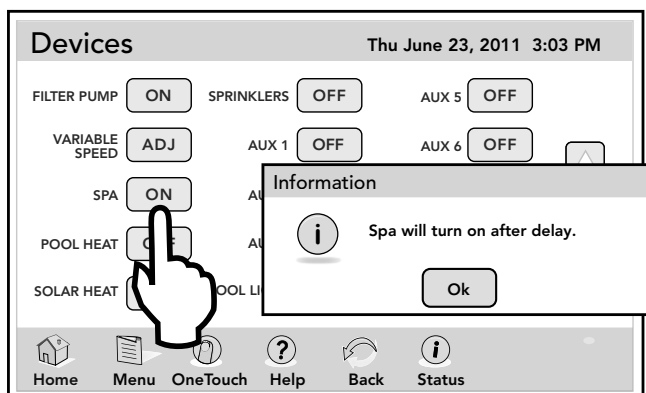

When you turn the spa OFF, the spa will remain on while the heater cools down for a few seconds.

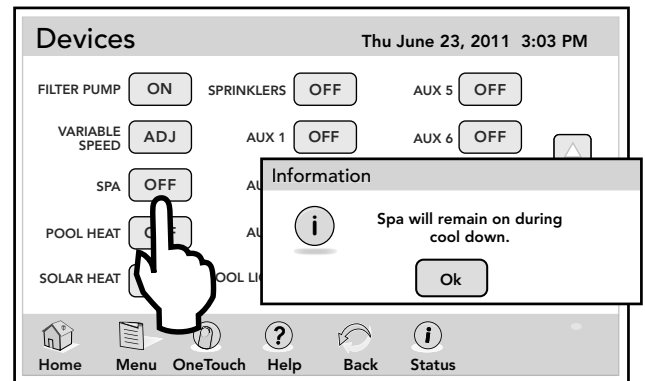

Click the HOME or BACK button in the navigation bar to return to the HOME screen.

## 8.4 Pool Heat


The POOL HEAT selection enables the heater for the pool. The POOL HEAT uses the setting from SET TEMP menu and also gives you the option to increase or decrease the pool heater temperature.

**HOME > OTHER DEVICES ON / OFF > POOL HEAT**

On the HOME menu screen, click the OTHER DEVICES ON/OFF button to display the DEVICES screen.

Click the POOL HEAT button and the SET TEMPERATURE screen will be displayed.

On the SET TEMPERATURE screen you have the option to change the temperature or click the ENTER button to turn ON the pool heater at the preset temperature.

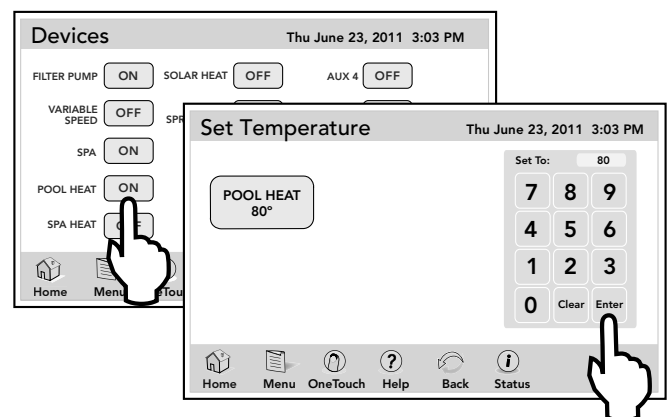

The default pool temperature is 80°F (27°C).

The pool and spa heat temperatures can be adjusted between 34°F (1°C) through 104°F (40°C).

**NOTE** If you enter temperatures outside this range, an invalid entry message will be displayed.

Click the HOME or BACK button in the navigation bar to return to the HOME screen.

## 8.5 Spa Heat (Dual Equipment)


This feature is also available on the HOME screen for pool and spa systems.

The SPA HEAT enables the heater for the spa. The SPA HEAT uses the setting from SET TEMP menu and also gives you the option to increase or decrease the spa heater temperature.

### HOME > OTHER DEVICES ON / OFF > SPA HEAT

On the HOME menu screen, click the OTHER DEVICES ON/OFF button to display the DEVICES screen.

Click the SPA HEAT button and the SET TEMPERATURE screen will be displayed, on this screen you have the option to change the temperature or you may click the ENTER button to turn ON the spa heater at the preset temperature.

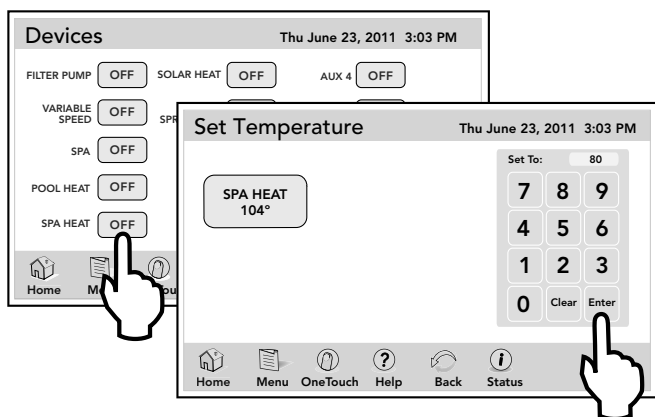

The default spa temperature is 102°F (39°C).

The pool and spa heat temperatures can be adjusted between 34°F (1°C) through 104°F (40°C).

**NOTE** If you enter temperatures outside this range, an invalid entry message will be displayed.

Click the HOME or BACK button in the navigation bar to return to the HOME screen.

## 8.6 Solar Heat


**NOTE** If a Heat Pump is properly connected to this system, HEAT PUMP will appear on the screen in place of SOLAR HEAT.

The SOLAR HEAT selection controls solar heating. A solar heating system and optional solar sensor are required for SOLAR HEAT selection to operate.

### HOME > OTHER DEVICES ON / OFF > SOLAR HEAT

On the HOME menu screen, click the OTHER DEVICES ON/OFF button to display the DEVICES screen.

Click the SOLAR HEAT button to turn solar heat ON or OFF.

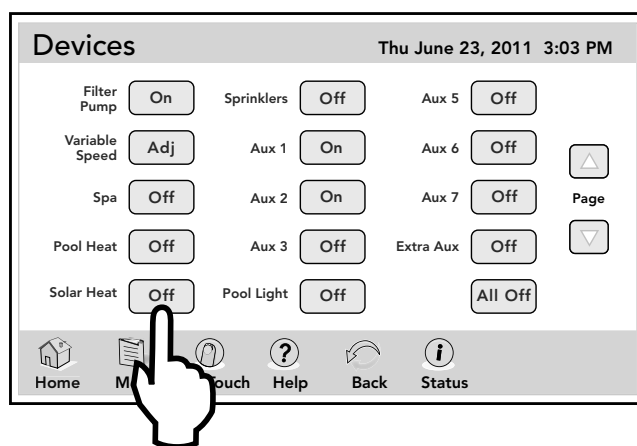

Click the HOME or BACK button in the navigation bar to return to the HOME screen.

**NOTE** If a solar sensor is not installed, EXTRA AUX replaces SOLAR HEAT and may be used to control an auxiliary piece of equipment (see the following Section 9.7, "Auxiliary Equipment" to turn on or off EXTRA AUX).

For solar heating to take place, the SOLAR HEAT (DEVICES ON/OFF) must be enabled, and also the filter pump must be on.

Solar temperature must be at least 5°F/5°C above the water temperature and the water must be cooler than the thermostat setting.




## 8.7 Auxiliary Equipment

The AUX modes control each of the auxiliary devices. To assign a different name to an auxiliary device, use the SYSTEM SETUP and LABEL AUX screen.

### HOME > DEVICES > AUX3

On the HOME menu screen, click the OTHER DEVICES ON/OFF button to display the DEVICES screen.

On the DEVICES screen, click the AUX3 button to turn the auxiliary device ON or OFF.

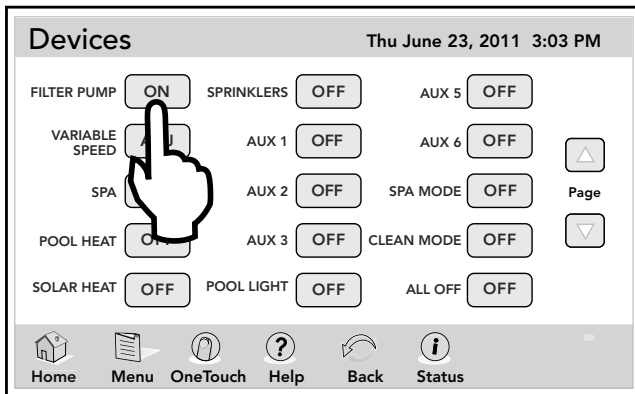

Click the HOME or BACK button in the navigation bar to return to the HOME screen.

## 8.8 Using Color Lights

**NOTE** This equipment may not be part of your system. Please check with your installer.

The SET COLOR menu is used to set the color of a color light and then turn the light on.

**NOTE** Prior to setting the color of the light, the light must be assigned and controlled by an auxiliary (for example, AUX 1). Please note that the auxiliary control can be custom labeled.


### HOME > OTHER DEVICES ON/OFF > AUX1 > SET COLORS

On the HOME screen, click the OTHER DEVICES ON/OFF button to display the DEVICES screen.


Click the auxiliary assigned to the color light on the DEVICES screen to display the SET COLORS screen and click the desired color light.

#### IMPORTANT Information

Do not activate this feature unless you are certain that color lights are installed on your system

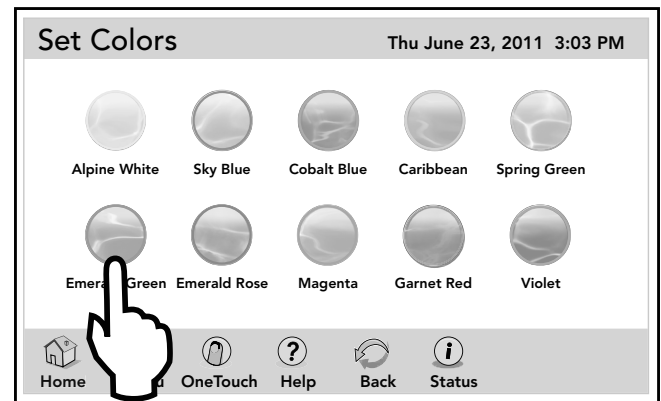

If you select POOL LIGHT or SPA LIGHT on the EQUIPMENT ON/OFF menu and the light is already ON, clicking the color light on the SET COLOR screen will display a confirmation message "LIGHT WILL TURN OFF IN 5 SECONDS. IF YOU WANT TO CHANGE THE COLORS PRESS OK NOW".

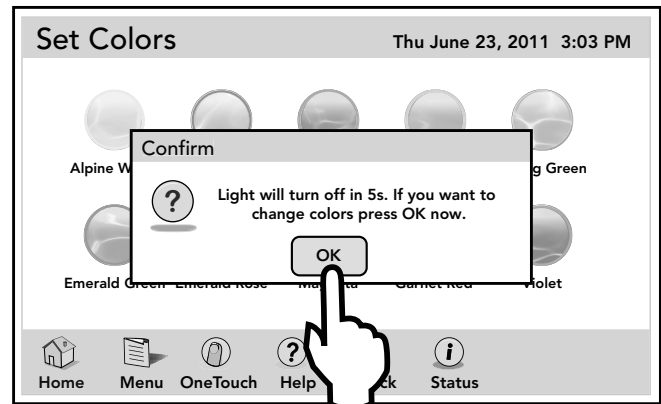

If you click the OK button, the SET COLOR screen will be displayed and will allow you to select a different color. If a different color is chosen, the light will reset to Alpine White, rotate to the selected color, and then automatically lock on to that color.

During the color rotation, the message "PLEASE WAIT...CYCLING TO CHOSEN COLOR" will be displayed.

**NOTE** When a pool or spa light is turned ON manually, by the OneTouch™ control panel, or by a program, the last used color will automatically be chosen unless you press SELECT to change the color.

If you press the BACK key when in the EQUIPMENT ON/OFF menu, the light will turn on the *last* selected color. If the SELECT key or the BACK key is not pressed, and if it has been 15 seconds since the UP/DOWN keys have been pressed, then the most recently selected color will be selected again.

## 8.9 TEMP1 / TEMP2 (Pool or Spa Only)

TEMP1 is the priority temperature. It must be set higher than TEMP2, and it overrides TEMP2 whenever it is enabled.

Set temperature for TEMP1 before setting temperature for TEMP2.


### 8.9.1 To Set Up TEMP1

**NOTE** The valid temperature setpoint range is between 34° - 104°F (1°C - 40°C). If you enter a value outside this range, an invalid entry message will appear on screen.

#### HOME > OTHER DEVICES ON / OFF > DEVICES > TEMP1


On the HOME menu screen, click the OTHER DEVICES ON/OFF button to display the DEVICES screen.

On the DEVICES screen, click the TEMP1 button to display the SET TEMPERATURE screen.

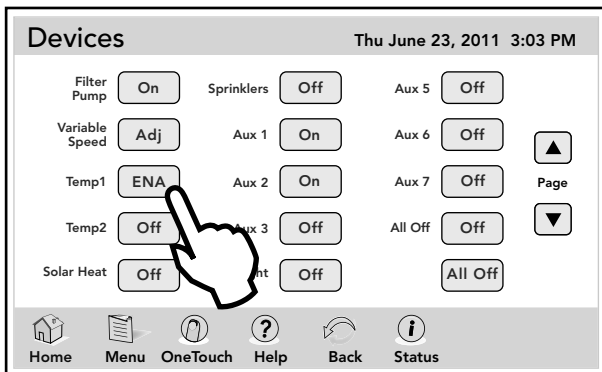

On the SET TEMPERATURE screen, use the numeric keypad to enter the desired water temperature.

Click ENTER when finished to make new temperature to take effect.

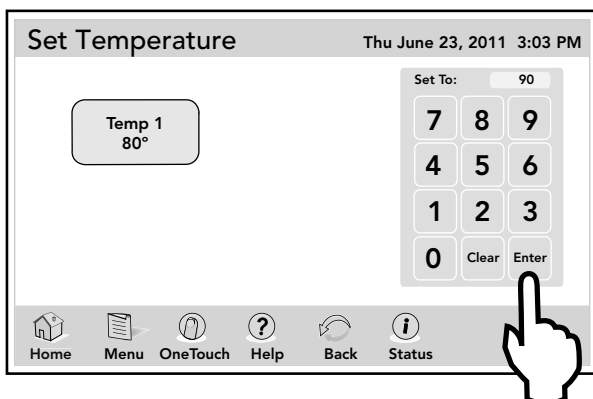

## 8.9.2 To Set Up TEMP2 (For Pool and Spa Only System)

The TEMP2 is the maintenance (low) temperature. It must be set lower than TEMP1.

If TEMP2 is on and TEMP1 is activated, TEMP2 will turn off. When TEMP1 is turned off again, TEMP2 will reactivate.

**NOTE** The valid temperature setpoint range is between 34° - 104°F (1°C - 40°C). If you enter a value outside this range, an invalid entry message will appear on screen.


#### HOME > OTHER DEVICES ON / OFF > DEVICES > TEMP2

On the HOME menu screen, click the OTHER DEVICES ON/OFF button to display the DEVICES screen.

On the DEVICES screen, click the TEMP2 button to display the SET TEMPERATURE screen.

On the SET TEMPERATURE screen, use the numeric keypad to enter the desired water temperature.

Click ENTER when finished to make new temperature to take effect.

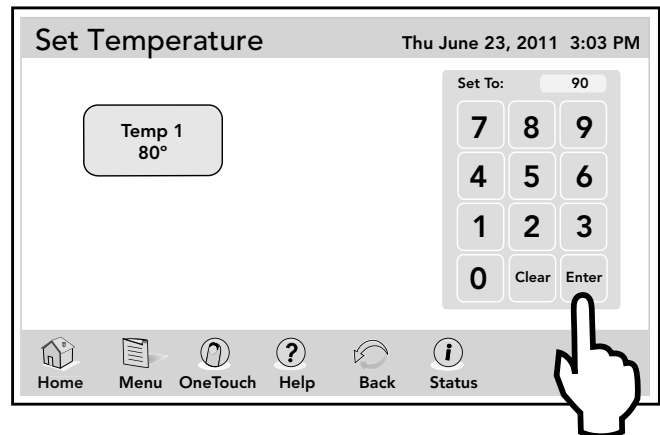

## 8.10 Two Speed Operation (\*Not Available for Export Models\*)

**NOTE** This equipment may not be part of your system. Please check with your installer.  
- Optional TWO SPEED RELAY required.

### 8.10.1 Two Speed Manual Operation

**NOTE** In order to label AUX2 as LOW SPEED, it is required to have the DIP switch S1-2 turned in the ON position.

**NOTE** All DIP switches are located on the left side of the AquaLink RS power center bezel.

- **For Pool and Spa Combination Units**

If your control is a Pool and Spa combination with a 2-speed filtration pump, the control will operate as follows: High Speed (Filter Pump) must be on before Low Speed. Filter pump button, as well as the Spa button, turns it to High Speed. Low Speed (AUX 2) button toggles back and forth from low to high.

- **For Pool or Spa Only Units**

To use High/Low Speeds, Filter Pump turns on High Speed, AUX 2 turns on Low Speed. Whatever mode last used is the OFF button. To toggle, click whichever speed is not on.

- **For Dual Equipment Units**

AquaLink RS 2/6 operates the same as the Pool/Spa Only units; i.e., Filter Pump turns on HIGH SPEED and AUX 2 turns on LOW SPEED. The mode last used is the OFF button. To toggle, click whichever speed is not on. 2-speed works only on spa filter pump.

- **Two Speed Programming for All Units**

When programming HIGH and LOW Speeds to operate together, think of HIGH SPEED (Filter Pump) as total duration of filtration time, then set Low Speed (AUX 2) to operate within that duration. For example, if you want High Speed on for 2 (two) hours and Low Speed for 10 hours, program the Filter Pump (High Speed) from 8 AM to 8 PM and Low Speed from 10 AM to 8 PM.


**NOTE** It is not necessary to program both HIGH and LOW Speeds, even with a combo control system. If only LOW SPEED is programmed, HIGH SPEED will turn on at the LOW SPEED on time to prime the pump. After three (3) minutes the system will switch to LOW SPEED for the remainder of its programmed time.

## 8.10.2 High Speed Filtration Pump

HOME > OTHER DEVICES ON / OFF > FILTER PUMP/ SPA

On the HOME menu, click the OTHER DEVICES ON/OFF button to display the DEVICES screen.

Click the FILTER PUMP or SPA button to turn the main filtration pump ON to HIGH SPEED.

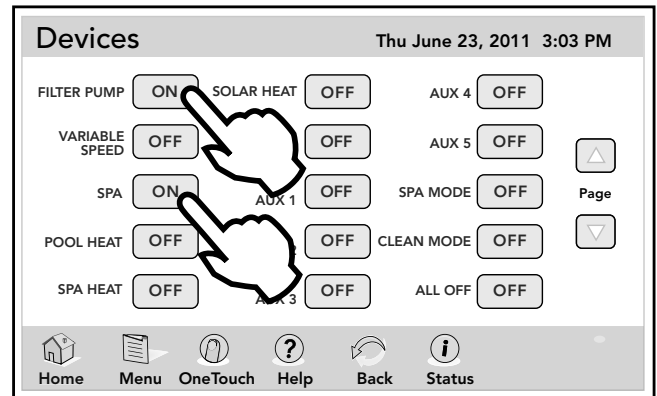


## 8.10.3 Low Speed Filtration Pump

HOME > OTHER DEVICES ON / OFF > AUX 2

On the HOME menu, click the OTHER DEVICES ON/OFF button to display the DEVICES screen.

Click the FILTER PUMP button to turn the main filtration pump ON to LOW SPEED.

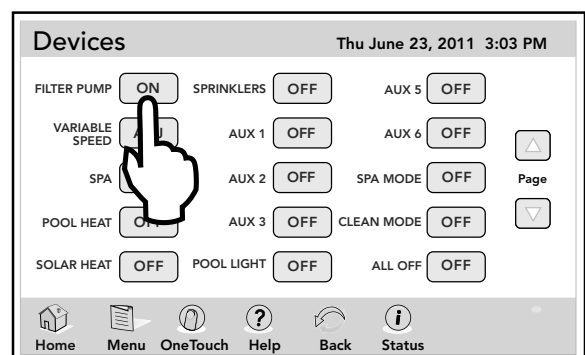

Click the BACK button to return to the previous screen.

## Section 9. System Setup

### 9.1 System Setup Screen

The SYSTEM SETUP menu screen allows you to configure pool/spa equipment, devices and iAquaLink features. This section of the manual provides instructions to set up most of these equipment.

For the following equipment, see their corresponding section.

See Section 10, "Heat Pump Setup".

See Section 11, "Variable Speed Pump Setup".

See Section 12, "Sprinkler System Setup".


See Section 13, "ChemLink™ Setup".

**NOTE** Some equipment may not be part of your system. Please check with your installer.


#### 9.1.1 To Access System Setup

MENU > SYSTEM SETUP


On the MENU screen, click the SYSTEM SETUP button to display the SYSTEM SETUP menu.

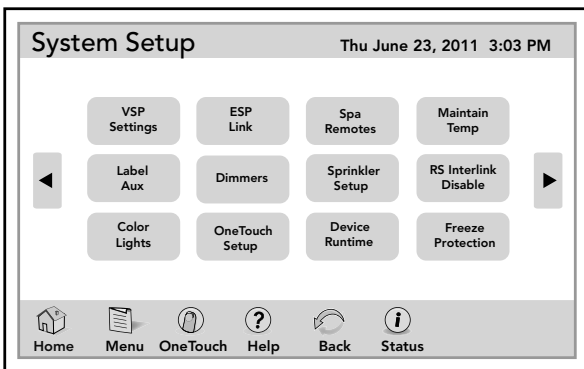

Use the ARROW buttons to display additional equipment.

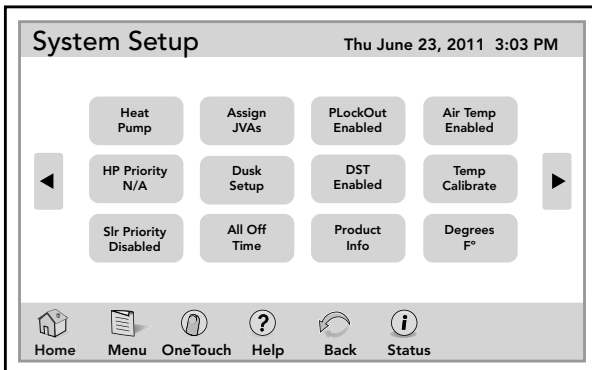

Use the ARROW buttons to display additional equipment.

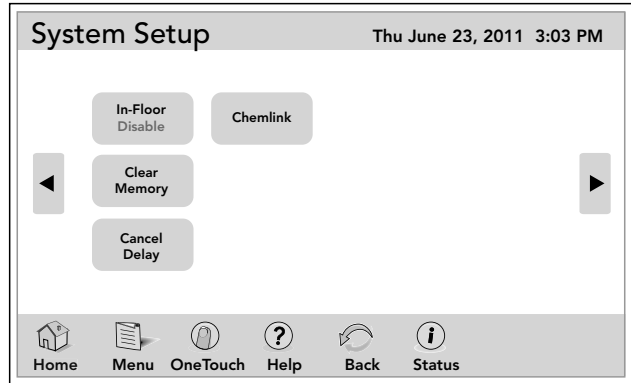

### 9.2 Label Auxiliary Functions


The LABEL AUX menu allows custom naming of auxiliary equipment. For example, you can set the display to read Pool Light JL instead of AUX 4.

#### 9.2.1 To Set Up Label Auxiliary

MENU > SYSTEM SETUP > LABEL AUX

On the SYSTEM SETUP screen, click the LABEL AUX button to display the LABEL AUXILIARIES screen.

Click and highlight the circuit of your choice, then click the either GENERAL, LIGHTS, WATER FEATURE, or CUSTOM.

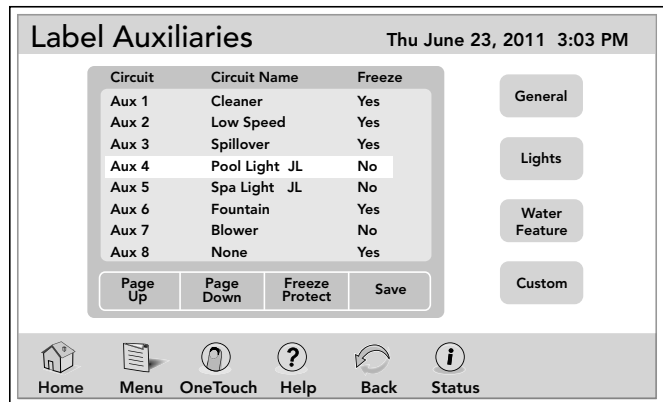


**NOTE** Please be aware that if the label NOT USED in the GENERAL LABEL menu is used on an AUX relay, the relay will not engage.

On the LABELS screen, click the label of your choice and click SELECT.

Use PAGE UP/PAGE DOWN to view additional labels.

Use the CUSTOM screen to assign your own labels.

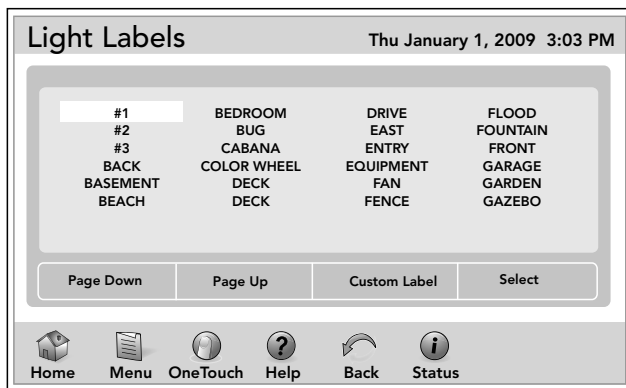

## 9.3 Color Lights


**NOTE** This equipment may not be part of your system. Please check with your installer.

The COLOR LIGHTS screen is used to select the color light type (Jandy Colors, Jandy LED Light, SAM™/SAL®, or Color Logic®), and to assign the color light to an available auxiliary relay.


### 9.3.1 To Set Up Color Lights

**MENU > SYSTEM SETUP > COLOR LIGHTS**

On the SYSTEM SETUP screen, click COLOR LIGHTS screen to display the COLOR LIGHT SETUP screen. This screen shows four (4) choices: Jandy LED Light, Jandy Colors, Hayward® Color Logic, and Pentair® SAM/SAL.

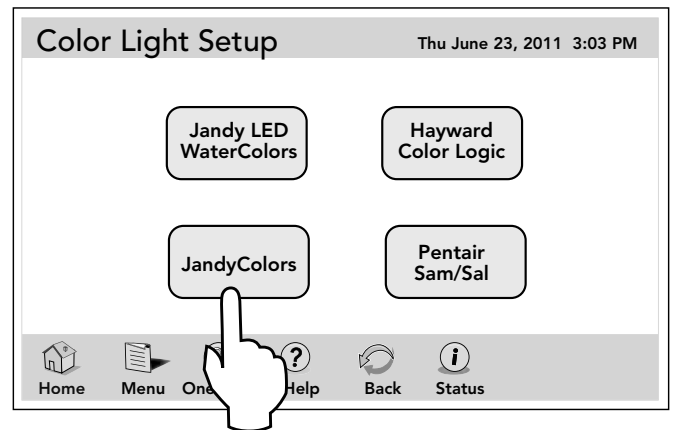

Click your choice of color light type to display the COLOR LIGHT ASSIGN AUX screen. This screen shows a list of available auxiliaries.

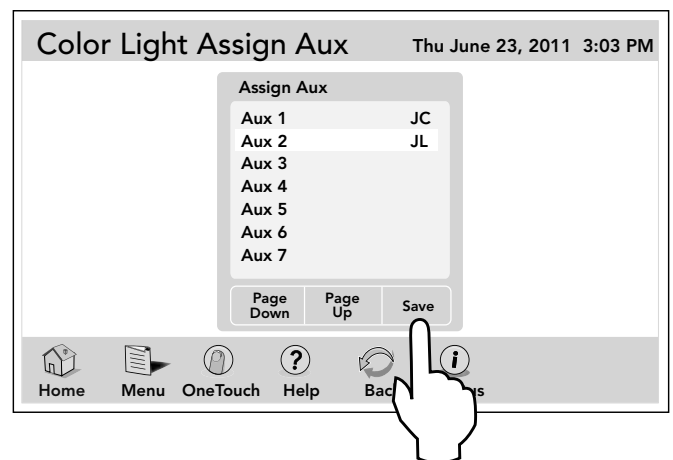

Click an auxiliary to be assigned to a color light. "JC" will appear next to the AUX if a Jandy Colors has been assigned.

“JL” will appear next to the AUX if a Jandy LED Light has been assigned. "SL" will appear next to the AUX if a SAam/SAL Light has been assigned. "CL" will appear next to the AUX if a Color Logic Light has been assigned. If the AUX is touched again, while on the same selected item, the “JC”, "JL", "SL", or "CL" will disappear meaning that a color light is no longer being controlled by the auxiliary.

Use PAGE UP/PAGE DOWN to view additional auxiliaries.

Click the SAVE button when finished.

### 9.4 ESP Link (Seasonal Adjust)

The SEASONAL ADJUST menu is a feature that will automatically adjust filtration cycles, chlorine levels, water leveling, and sprinkler times based on the seasons, when outdoor temperatures typically change.


**NOTE** The table below shows the various default seasonal adjust values and their respective adjustable range.

	DEFAULT ADJUST VALUE	ADJUSTABLE RANGE
FILTRATION	1 hour	0.5 hr, 1 hr, 1.5 hrs, 2 hrs
CLEANER	1 hour	0.5 hr, 1 hr, 1.5 hrs, 2 hrs
AQUAPURE®	15%	10%, 20%
SPRINKLERS	5 minutes	1 - 10 minutes
FILL LINE	5 minutes	not adjustable

#### 9.4.1 To Set Up Seasonal Adjust

MENU > SYSTEM SETUP > ESP LINK > SEASONAL ADJ

On the SYSTEM SETUP screen, click the ESP LINK button to display the ESP LINK screen.

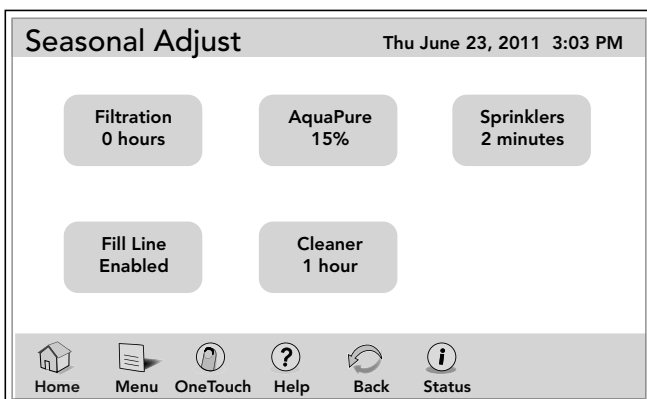


Click the appropriate button to choose FILTRATION, SPRINKLERS, FILL LINE, and CLEANER.

### 9.4.2 ESP Link Operation

The following example shows how the feature operates when the FILTRATION ADJUSTMENT value has been set to one (1) hour.

In our example we will assume that a program for the FILTER PUMP is entered in the month of March, with the program parameter shown.

- When the month changes from April to May, one (1) hour is added to the OFF time.
- When the month changes from June to July, another one (1) hour is added to the OFF time.
- When the month changes from August to September, one (1) hour is subtracted from the OFF time.
- When the month changes from September to October, another one (1) hour is subtracted from the OFF time.
- When the month changes from October to November, one (1) hour is subtracted from the OFF time.
- When the month changes from November to December, another one (1) hour is subtracted from the OFF time.
- When the month changes from December to January, one (1) hour is added to the OFF time.
- When the month changes from January to February, another one (1) hour is added to the OFF time.
- When the month changes from February to March, one (1) hour is added to the OFF time and we are back where we started.

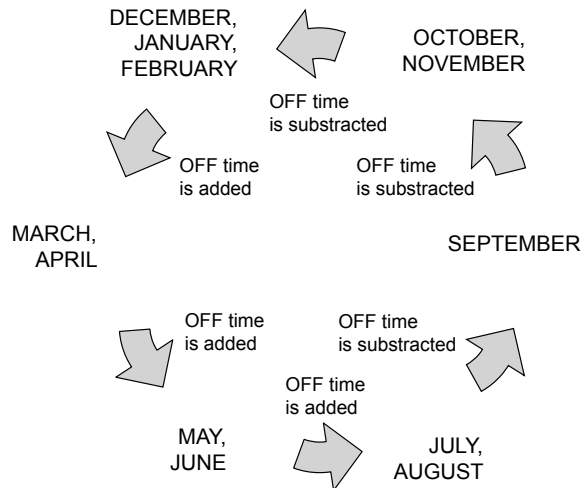

This chart shows when the seasonal adjust offset is added or subtracted from the programmed OFF time.

## 9.5 Set Dimmers


This menu is used to assign an auxiliary to control a dimmable light. A light dimming relay must be installed in order for your light(s) to be dimmable.

**NOTE** An optional Light Dimming Relay must be installed and only 120 VAC lighting (or suitable transformer-driven incandescent lights) can be dimmed.

### 9.5.1 To Set Dimmers

#### MENU > SYSTEM SETUP > DIMMERS

On the SYSTEM SETUP screen, click the DIMMERS button to display the DIMMERS setup screen. In the ASSIGN DIMMERS box, click the auxiliary to be dimmable. An "X" will appear next to selected item. Use PAGE DOWN/PAGE UP to view additional items. Click SAVE when finished.

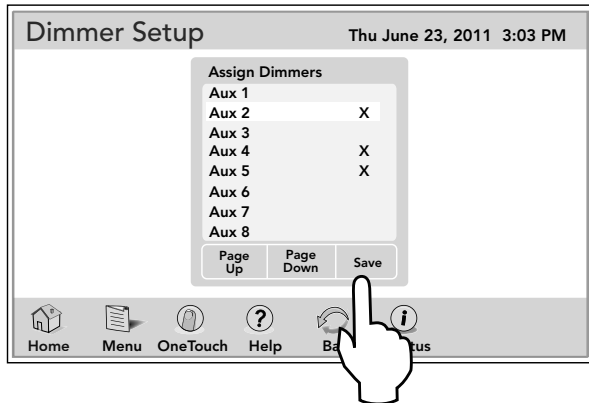


## 9.6 OneTouch™

This screen allows custom configuration of the six (6) OneTouch mood/scene buttons. Each mood setting allows for an independent thermostat setting. OneTouch setting can also be assigned to any SpaLink® button.

#### MENU > SYSTEM SETUP > ONETOUCH SETUP


On the SYSTEM SETUP menu, click the ONETOUCH button to display the ONETOUCH SETUP screen.

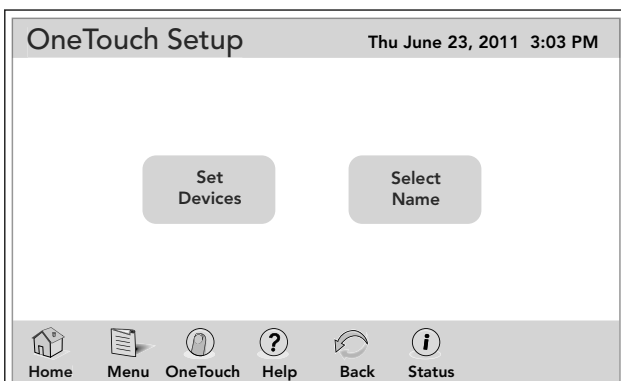

## 9.6.1 Set Devices


On the ONETOUCH SETUP menu, click the SET DEVICES button to display the menu shown below.

Click any of the six (6) ONETOUCH buttons to display the device list. In the device list, when a device is selected for a particular mood/scene setting, the ON or ENA will be displayed.

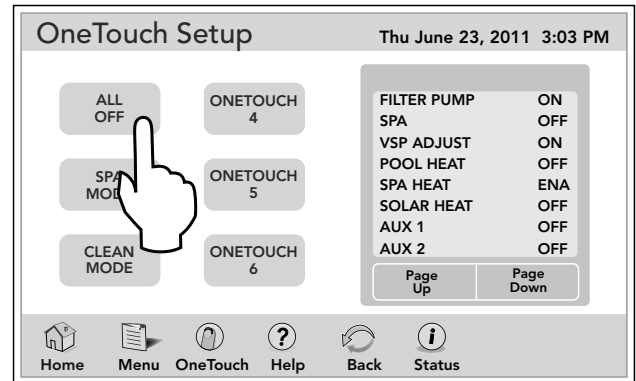

To change the settings in the device list:

- Click a device, this will be highlighted and will be either turned ON/ENA or OFF, depending on your selection.
- The POOL HEAT or SPA HEAT gives you the option to change the SET TEMP settings when turn ON. You may want to change the temperature on the SET TEMP screen or just click ENTER to proceed with the preset temperature.
- Use PAGE UP/DOWN to scroll the device list.
- Repeat this procedure to assign devices to the rest of ONETOUCH buttons.

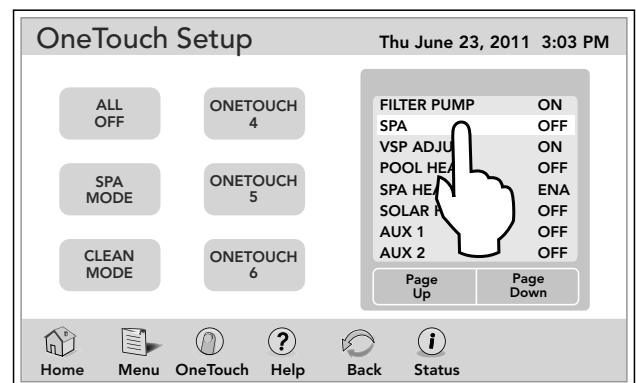


Click the BACK button to return to ONETOUCH SETUP menu.

### 9.6.2 Select Name

On the ONETOUCH SETUP menu, click the SELECT NAME button to display the menu shown below.

On this screen, you can assign a label to any of the six (6) ONETOUCH buttons as follows:

- Click the ONETOUCH button to be assigned.
- In the label list, click a label of your choice and it will be highlighted, then click the SELECT button to assign.

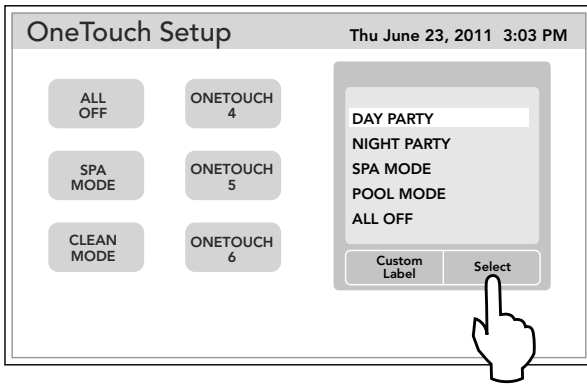


If you want to customize a label:

- Click the ONETOUCH button to be assigned.
- In the label list, click the CUSTOM LABEL button to display the CUSTOM screen.
- On the CUSTOM screen, enter your customized label and click SAVE.

**NOTE** The customized label will be assigned to ONETOUCH button but will not added to label list.

- Repeat this procedure to assign devices to the rest of ONETOUCH buttons.

See Section 4.9, "Custom Label".

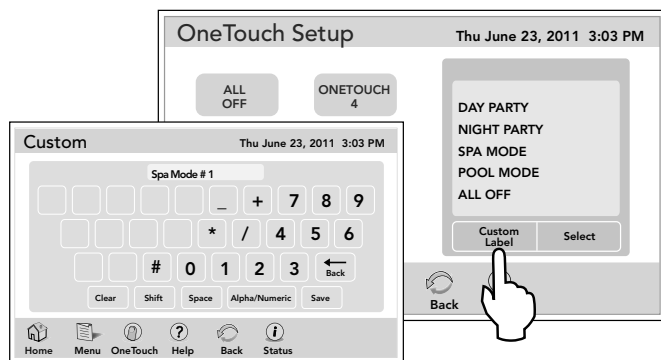


Click the BACK button to return to ONETOUCH SETUP menu.

### 9.7 Spa Remotes

The SPA REMOTES SETUP is used to set up the 4-Function Spa Switch or the 8-Function SpaLink.

#### MENU > SYSTEM SETUP > SPA REMOTES

On the SYSTEM SETUP screen, click the SPA REMOTES button to display the SPA REMOTES SETUP screen.

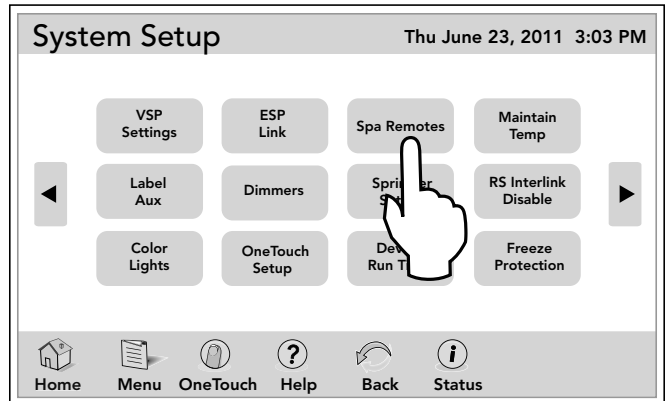


#### 9.7.1 Spa Side Switch

The 4 Function Spa Switches are spa, spa heat, aux1 and aux2. Write down the spa side switch button assignments to label the buttons on the switch with the label pack provided.

#### MENU > SYSTEM SETUP > SPA REMOTES

On the SPA REMOTES SETUP screen, click the 4 FUNCTION SPA SWITCH button and the number of spa remotes you have and then click the NEXT button to continue.

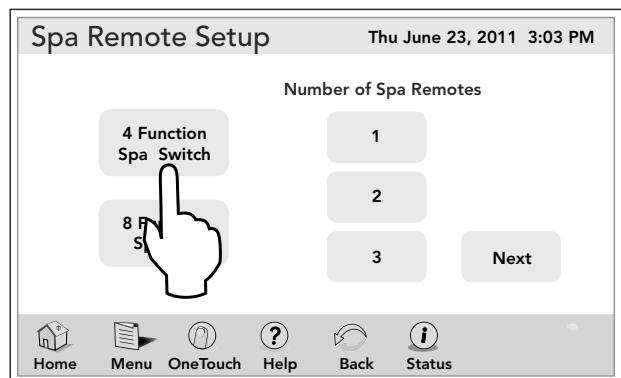




In the BUTTON/DEVICE list, click the button of your choice. In the DEVICES LIST, click the equipment of your choice.

Click the SAVE button to save this setting.

Use PAGE UP/PAGE DOWN to view additional items.

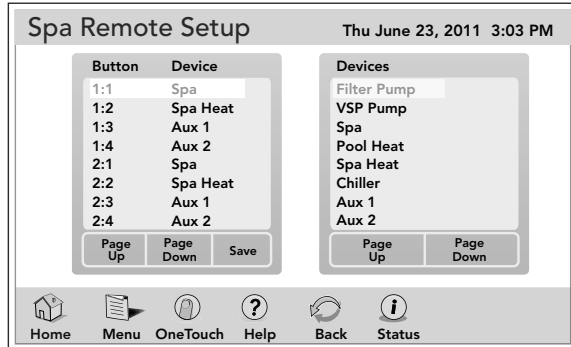


## 9.7.2 SpaLink® Setup

The 8 Function SpaLink are spa, spa heat, aux1, aux2, aux3, aux4, aux5, and aux6.

You can now assign a OneTouch™ macro setting to any button on the SpaLink remote. Write down your SpaLink button assignments so that you can label the buttons on the switch with the label pack provided.

### MENU > SYSTEM SETUP > SPA REMOTES


On the SPA REMOTES SETUP screen, click the 8 FUNCTION SPA SWITCH button and the number of spa remotes you have and then click the NEXT button to continue.

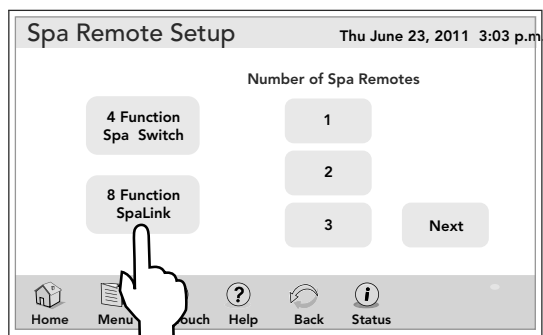

In the BUTTON/DEVICE list, click the button of your choice. In the DEVICES LIST, click the equipment of your choice.

Click the SAVE button to save this setting.

Use PAGE UP/PAGE DOWN to view additional items.

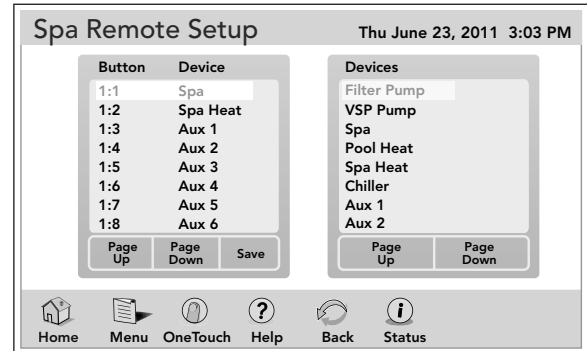

## 9.8 Device Runtime

The DEVICE RUNTIME menu is used to assign a runtime for a device or auxiliary.

When the device is turned on from the OTHER EQUIPMENT ON/OFF menu, it will run for the duration specified on the DEVICE RUNTIME menu.

**NOTE** A device runtime can be assigned to SPA, AUX1 - AUX31, EXTRA AUX, and macros ONETOUCH1 - ONETOUCH6 from a minimum of one (1) minute to a maximum of five (5) hours.


The default runtime of 30 minutes will be displayed.

## 9.8.1 To Set Up Device Runtime

### MENU > SYSTEM SETUP > DEVICE RUNTIME

On the SYSTEM SETUP screen, click the DEVICE RUNTIME button to display the screen below. On this screen, click the device of your choice. Enter your new time using the numeric keypad and click the ENTER button when finished.

Use PAGE DOWN/PAGE UP to view additional devices. Click the SAVE button to save the updated settings and to exit this screen.

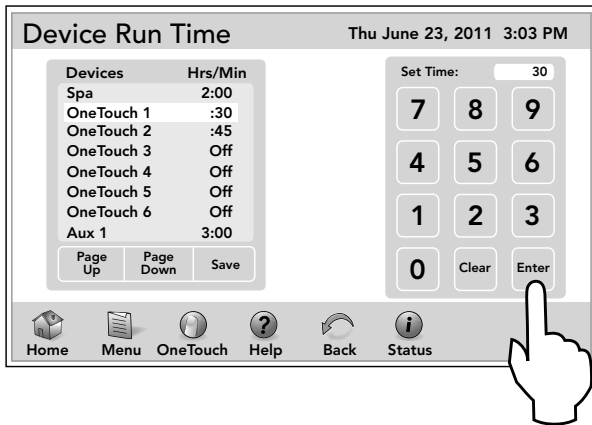

## 9.9 Maintain Temp

**NOTE** Maintain Temp is designed to operate outside (before or after) the normal filtration pump times.

The MAINTAIN TEMP menu provides the ability to specify how often the filter pump is turned on to sample the water temperature. This feature allows for the sampling interval to be set to one (1), two (2), or four (4) hours. The default value will be two (2) hours.


### 9.9.1 To Set Up Maintain Temp

Note that the MAINTAIN TEMP will run the pump for the chosen body of water to keep the water at the desired temperature, if this function is ON and the heater/chiller (if installed) is enabled. The system will automatically turn on the pump every couple of hours for just enough time to test the water temperature.

If the temperature meets the set point, the pump will return to off. If the measured temperature is different than the set temperature, the pump will stay on and the heater/chiller will operate long enough to bring the water to the set temperature.

### MENU > SYSTEM SETUP > MAINTAIN TEMP

On the SET TEMPERATURE screen, click the MAINTAIN TEMP button to display the MAINTAIN TEMP screen.

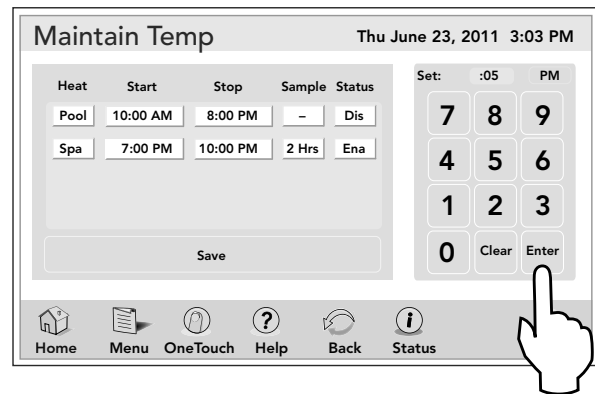

Schedule the MAINTAIN TEMP as follows:

- On the MAINTAIN TEMP screen, click the START time of the selected equipment, and use the numeric keypad to enter the new time.
- If you make a mistake, click the CLEAR button and re-enter new time again. Click the ENTER button when finished.
- To set the stop time, click the STOP time of the selected equipment and use the numeric keypad to enter the new time.
- To set the sample time, click the SAMPLE time of the selected equipment and use the numeric pad to enter the new sampling interval.
- Click the ON/OFF button to enable or disable the MAINTAIN TEMP schedule of the selected equipment.
- Click SAVE when finished.

## 9.10 RS InterLink

**NOTE** This equipment may not be part of your system. Please check with your installer.

The RS InterLink menu allows a single controller to access two (2) main power centers on the AquaLink RS system.

For ease of operation, it is suggested that each power center be given a custom product name that would allow a user to identify to which power center the controller is connected. During operation, this name will appear on the iAquaLink Date/Time screen.

**NOTE** The RS InterLink feature must be enabled before it may be accessed on the OTHER EQUIPMENT ON/OFF screen.


## 9.10.1 To Set Up RS Intelink

### MENU > SYSTEM SETUP > RS INTERLINK

On the SYSTEM SETUP screen, click the RS INTERLINK button and the INTERLINK SETUP screen will be displayed. On this screen, click the ENABLED button to set the RS INTERLINK.

If you want to rename the power center, click the CUSTOM LABEL to display the keyboard screen.

**NOTE** By factory default the power center(s) is labeled as power center "B". When labeling remember you are creating a label for the power center to which you will be switching.

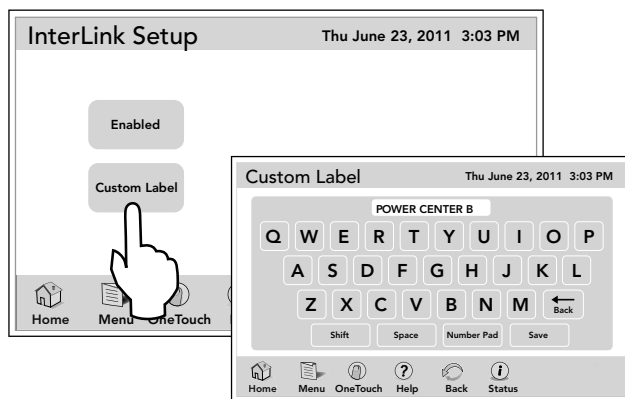

## 9.11 Freeze Protection

**NOTE** By factory default the filter pump circuit is freeze protected and cannot be removed from the freeze protection.

Use Freeze Protection menu to assign freeze protection to your pool and spa equipment. When a piece of equipment is assigned to freeze protection, it will turn on when the iAquaLink detects freezing conditions. The main filter pump is freeze-protected as a default.


Activation temperature can be adjusted between 34°F (1°C) and 42°F. Default freeze protection activation temperature is 38° F (3°C) and will deactivate within two degrees..

### 9.11.1 To Set Up Freeze Protection

The FREEZE PROTECT menu can be accessed on the SYSTEM SETUP screen as well as the LABEL AUXILIARES screen.


### MENU > SYSTEM SETUP > FREEZE PROTECT

Click the FREEZE PROTECT button on the SYSTEM SETUP menu to display the FREEZE PROTECT menu.

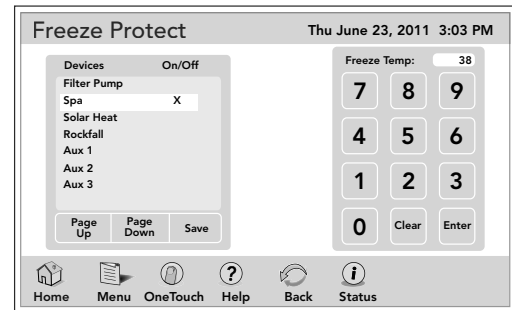

### MENU > SYSTEM SETUP > LABEL AUX

On the SYSTEM SETUP screen, click the LABEL AUX button to display the LABEL AUXILIARIES screen. Click the FREEZE PROTECT button on the LABEL AUXILIARIES menu to display the FREEZE PROTECT menu.

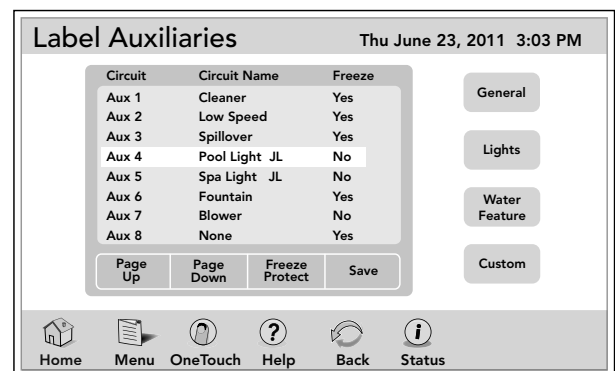

Select any piece of equipment in the DEVICE list and change the temperature using the numeric keypad. Once the temperature is set, click the ENTER button to move to the next screen to assign freeze protection to a selected piece of equipment. If an incorrect value was entered, click the CLEAR button on the keypad and try again.

**NOTE** The filter pump is always assigned to freeze protection.

### IMPORTANT Information on Freeze Protection

Freeze protection is intended to protect equipment and plumbing for short periods of freezing only. It does this by activating the filtration pump and circulating the water to prevent freeze inside equipment or plumbing. Freeze protection does **not** guarantee that equipment will not be damaged by extended periods of freezing temperatures or power outages. In these conditions, the pool and spa should be shut down completely (e.g. drained of water and closed for the winter) until warmer weather exists.

## 9.12 Assign JVAs

The ASSIGN JVAs menu allows Jandy® Valve Actuators (JVAs) to be assigned to any auxiliary button. This means that whenever you press that auxiliary button, a valve turns. On pool/spa combination models, there are commonly two (2) extra JVAs that can be assigned to auxiliary buttons: the Cleaner JVA and the Solar JVA.

On pool/spa only models, there are four (4) JVAs that can be assigned to auxiliary buttons. The installer must set these JVAs for this feature to operate correctly.


Assigning JVAs lets the owner control certain features like diverting water to a waterfall or bank of spa jets.

Multiple JVAs can be assigned to one (1) auxiliary button without extra hardware.

### 9.12.1 To Set Up Assign JVAs

#### MENU/HELP > SYSTEM SETUP > ASSIGN JVAs

Click the ASSIGN JVAs button on the SYSTEM SETUP screen to display the ASSIGN JVAs menu.

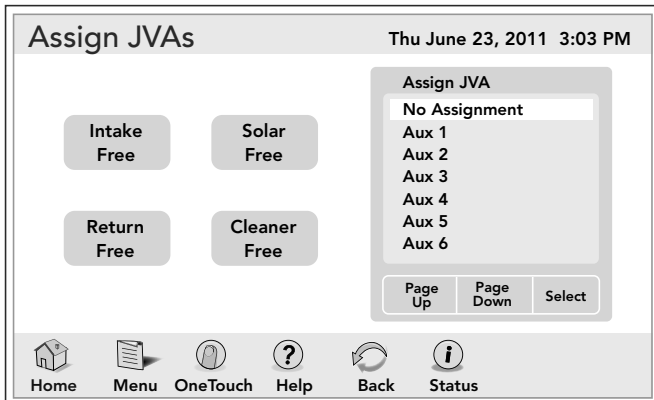

Click the JVA button you wish to assign. Click SAVE when finished.

**NOTE** If a solar sensor is installed, the solar JVA will automatically be assigned and will be marked as USED.

## 9.13 Dusk Setup

The DUSK SETUP screen is used to set a device to automatically turn on after sunset.


On the DUSK SETUP screen, you can set the duration, a time adjust value if you live between major city selections or in a heavily shaded area, and set specific devices.

**NOTE** Time and Date must be correct.

See Section 4.2, "To Set Up Date/Time".

#### MENU > SYSTEM SETUP > DUSK SETUP


On the SYSTEM SETUP screen, click the DUSK SETUP button to display the DUSK SETUP screen. Toggle the ENABLED/DISABLED button and select your choice.

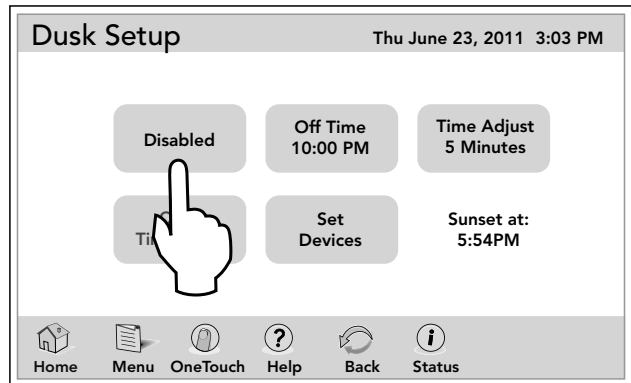

### 9.13.1 Dusk Setup Off Time

On the DUSK SETUP screen, click the OFF TIME button to display the DUSK SETUP OFF TIME screen as shown below.


On this screen, click the CLEAR button to erase existing time. Use the numeric keyboard to enter new off time. Click the AM/PM button and select your choice. Click the ENTER button to save new off time.

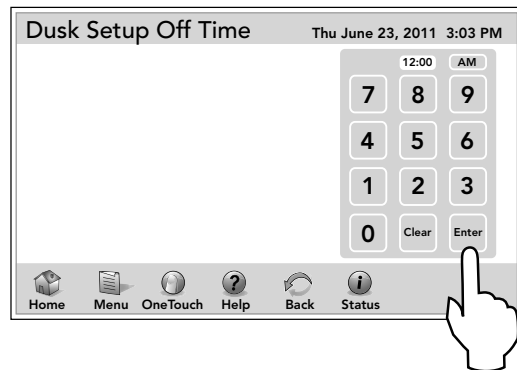

### 9.13.2 City/Time Zone

On the DUSK SETUP screen, click the CITY/TIME ZONE button to display the screen as shown below.


On this screen, click the city and choose the time zone. Use PAGE UP/PAGE DOWN to view additional cities. Click the SAVE button to save new setup.

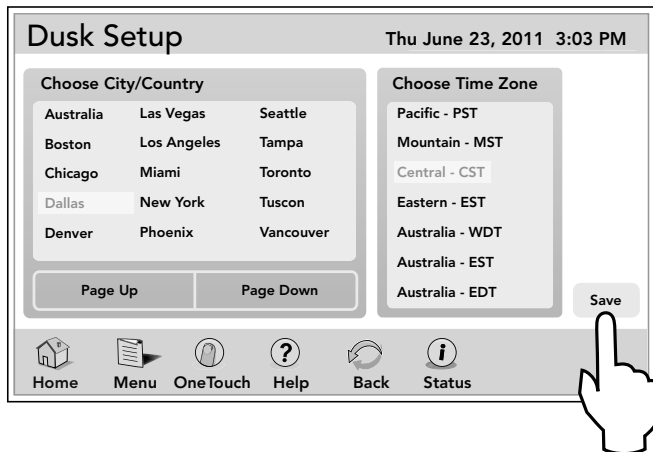

### 9.13.3 Assign Devices

On the DUSK SETUP screen, click the SET DEVICES button to display the screen as shown below.

On this screen, click the selected device to set it ON or OFF. Use PAGE DOWN/PAGE UP to view additional devices. Click the SAVE button to save new setup.

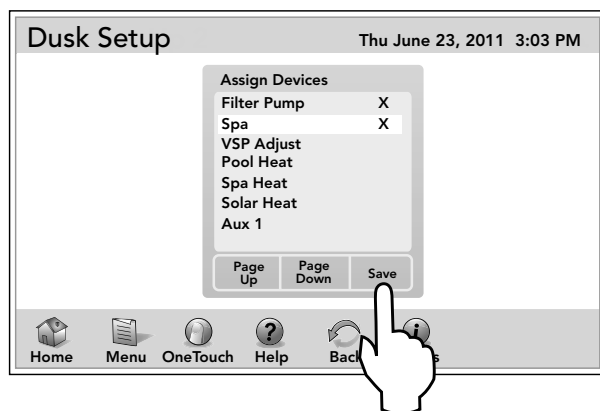

### 9.14 All Off Time


The ALL OFF TIME is used to direct the system to turn everything off at a specific time everyday.

### 9.14.1 To Set Up All Off Time

MENU > SYSTEM SETUP > ALL OFF TIME

On the SYSTEM SETUP screen, click the ALL OFF TIME button to display the ALL OFF SETUP screen. On this screen, click the ON/OFF button and set as desired.

If ALL OFF is ON, you need to set the time to turn all pool equipment off. Use the numeric keypad to enter new time. Click ENTER when finished.

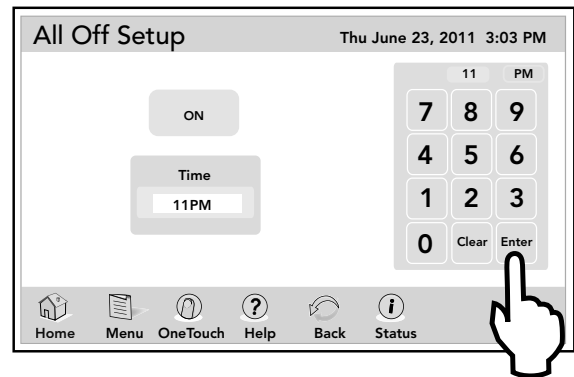

**NOTE** With this feature you can only set the hour value of the time - no minutes. The minutes will always be zero (0).


### 9.15 Pump Lockout

The PUMP LOCKOUT menu allows you to enable (pump off) or disable (pump stays on) when valves are rotating from pool to spa.

#### 9.15.1 To Set Up Pump Lockout

MENU > SYSTEM SETUP > PUMP LOCKOUT

On the SYSTEM SETUP screen, click the PUMP LOCKOUT button to enable the pump lockout.

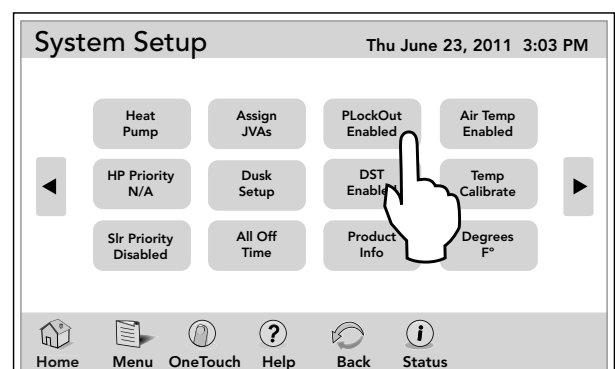

## 9.16 Daylight Savings Time (DST)


**NOTE** The factory default is ENABLED for the DST switching.

The DAYLIGHT SAVINGS menu enables the automatic adjustment for DST.

### 9.16.1 To Set Up DST

**MENU > SYSTEM SETUP > DST**

On the SYSTEM SETUP screen, toggle the DST button and select your choice.

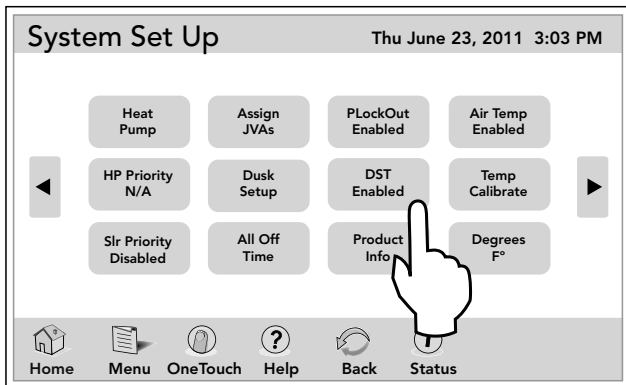


## 9.17 Product Information

The PRODUCT INFO screen is used to enter a custom product name, local service company name and telephone number.

**MENU > SYSTEM SETUP > PRODUCT INFO**

On the SYSTEM SETUP screen, click the PRODUCT INFO button to display the PRODUCT INFO screen.

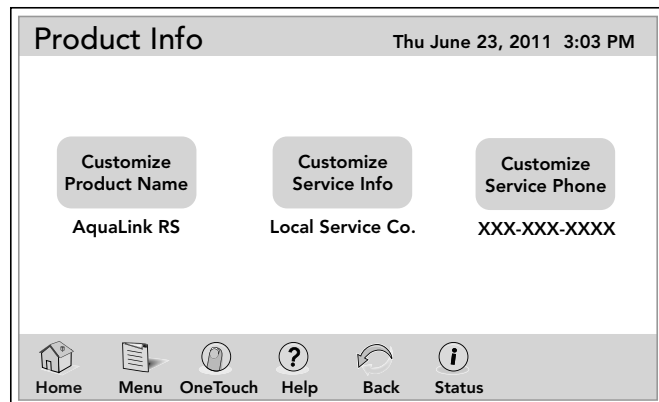

## 9.17.1 Customize Product and Service Info

**SYSTEM SETUP > PRODUCT INFO > CUSTOM LABEL**

On the PRODUCT INFO screen, click the CUSTOMIZED PRODUCT NAME or the CUSTOMIZE SERVICE INFO button to view the CUSTOM LABEL screen. On this screen, enter your product or service information.

See Section 4.9, "Custom Label".


## 9.17.2 Customize Service Phone

**SYSTEM SETUP > PRODUCT INFO**

On the PRODUCT INFO screen, click the CUSTOMIZED SERVICE PHONE to view the screen below.

On this screen click the CLEAR button to remove existing phone number.

Use the numeric keyboard to enter new phone number. Click the ENTER button to save when finished.

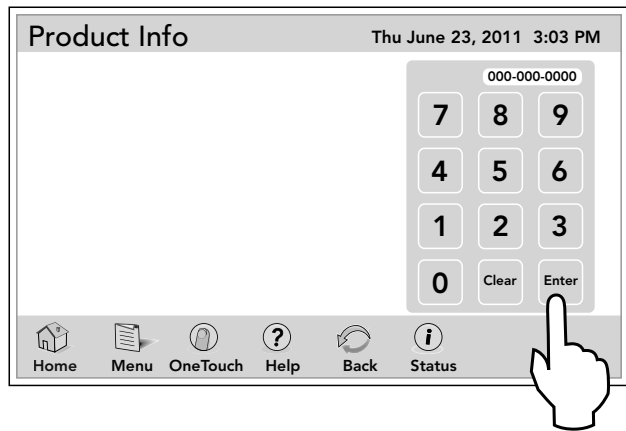


## 9.18 Air Temperature

Use the Air Temperature menu to turn the air temperature display on or off.

### 9.18.1 To Set Up Air Temperature

**MENU > SYSTEM SETUP > AIR TEMP**

On the SYSTEM SETUP screen, click the AIR TEMP to enable the air temperature.

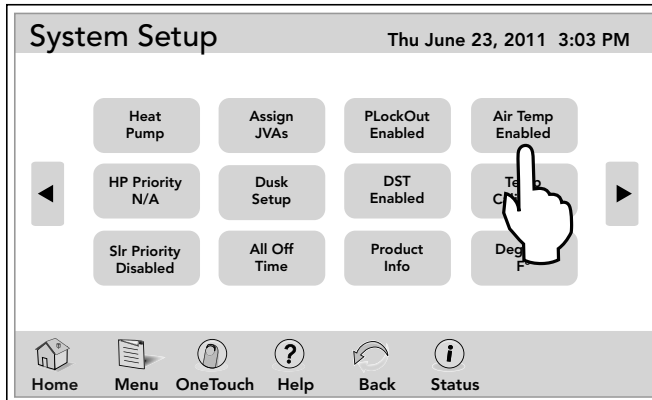

## 9.19 Temperature Calibrate


This menu allows adjustment of the temperature that is displayed on the iAquaLink. The temperature can only be adjusted up four (4) degrees Fahrenheit or down four (4) degrees Fahrenheit.

### 9.19.1 To Set Up Temp Calibrate

**MENU > SYSTEM SETUP > TEMP CALIBRATE**

On the SYSTEM SETUP screen, click the TEMP CALIBRATE button to display the screen below. Click the POOL or SPA button and use the arrow keys to set values.

**NOTE** If the temperature is off by more than four (4) degrees, contact your local service representative.

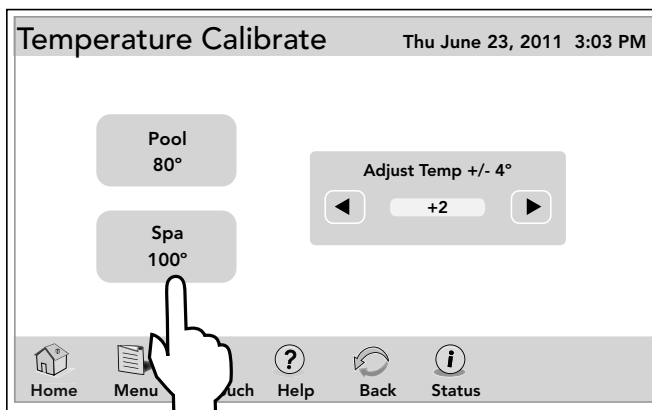


## 9.20 Degrees C/F

The Degrees C/F menu allows you to change the iAquaLink temperature display from Fahrenheit to Celsius or vice versa. When changing from Fahrenheit to Celsius, you will have to re-enter the temperature settings.

### 9.20.1 To Set Up Degrees

**MENU > SYSTEM SETUP > DEGREES**

On the SYSTEM SETUP screen, click the DEGREES button to set the desired temperature setting.

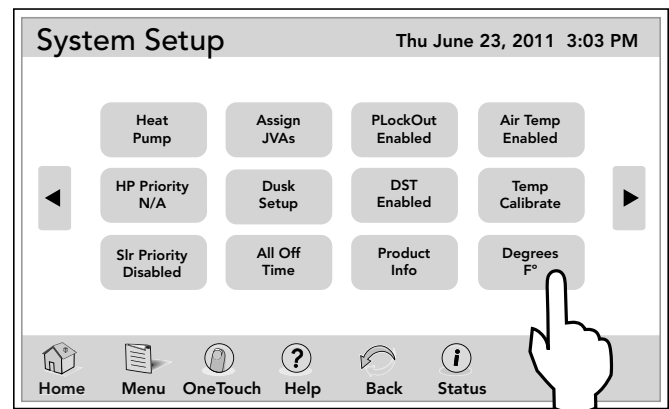

## 9.21 In-Floor Cleaning


This menu is used to enable or disable the automatic in-floor cleaning feature. When enabled, the AquaLink RS rotates the in-floor Jandy® valve actuators (JVAs) every 20 minutes. In-floor cleaning only works when the filter pump is on.

**NOTE** If activated this circuit will utilize the solar JVA relay socket and circuit to control the in-floor valve unless a solar sensor is installed, then the circuit reverts to AUX 3.

### 9.21.1 To Set Up In Floor Cleaning

**MENU > SYSTEM SETUP > IN-FLOOR**

On the SYSTEM SETUP screen, click the IN-FLOOR button to enable the in-floor cleaning feature.

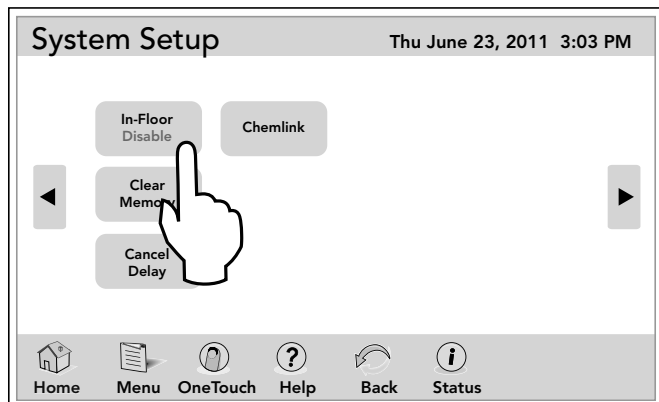


### 9.23 Cancel Delay

**NOTE** This feature is for use by service personnel only.

**MENU > SYSTEM SETUP > CANCEL DELAY**

On the SYSTEM SETUP screen, click the CANCEL DELAY button.

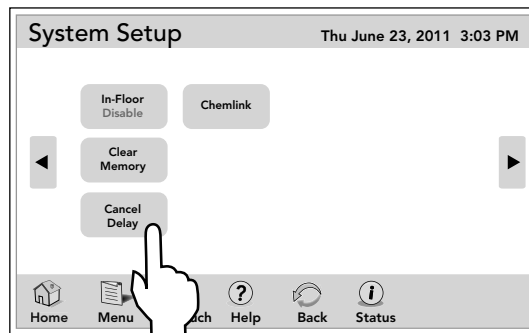

**NOTE** CANCEL DELAY should only be used by authorized service personnel. It should not be used during normal system operation.

## 9.22 Clear Memory

The CLEAR MEMORY menu will clear all stored values from the AquaLink RS memory. All settings will be reset to their default settings.


Stored values include auxiliary labels, all programs, freeze protection settings, remote settings, and thermostat settings. The time and date will not be cleared.

### 9.22.1 To Set Up Clear Memory

**MENU > SYSTEM SETUP > CLEAR MEMORY**

On the SYSTEM SETUP screen, click the CLEAR MEMORY button and a dialog box will appear. Click the YES button to clear memory.

Clicking the NO button will keep all stored settings unchanged.

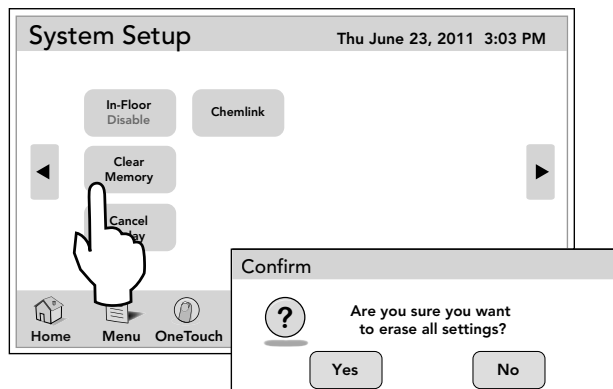




## Section 10. Heat Pump Setup

### 10.1 Solar Priority/Heat Pump Priority

The SOLAR PRIORITY/HEAT PUMP menu allows the system to use SOLAR HEAT/HEAT PUMP primarily. If Solar Heat is no longer available, the system will automatically switch to the alternate heat source.

**MENU > SYSTEM SETUP > SOLAR PRIORITY**

On the SYSTEM SETUP screen, click the SOLAR PRIORITY button to enable the solar priority feature.

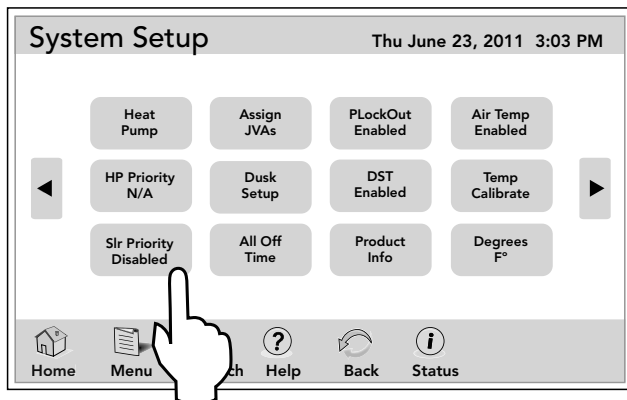

When solar and heater are enabled the solar will heat the water until either the thermostat setting has been reached or solar heat is no longer available. If the solar panel is not hot enough, solar heat will shut off and the other heat source (usually gas heater) will take over to bring the water up to the thermostat setting. This menu is used to ENABLE or DISABLE the solar priority.

**NOTE** Depending on the position of DIP switch S2-1 and the presence of a solar or heat pump sensor, SOLAR PRIORITY or HEAT PUMP PRIORITY may be displayed on the SYSTEM SETUP menu. It is not possible to have both SOLAR PRIORITY and HEAT PUMP PRIORITY displayed on SYSTEM SETUP MENU at the same time. It is one or the other.

### 10.2 Heat Pump (Heat Mode)

**NOTE** This equipment may not be part of your system. Please check with your installer.

The HEAT MODE selection controls the heat pump operation.

#### 10.2.1 Heat Pumps Controlled by Extra Aux/Solar Boost Relay

In order to use the heat pump, the filter pump must be turned on and the heat pump must be in HEAT MODE, and the switch on the heat pump on the equipment pad must also be set to HEAT MODE.

**NOTE** HEAT PUMP takes the place of EXTRA AUX or SOLAR HEAT. It is not possible to have any two (2) of these on the EQUIPMENT ON/OFF menu at the same time. To operate the HEAT PUMP in this type of configuration, set the DIP switch S2-1 to ON and connect the HEAT PUMP temperature sensor to the SOLAR SENSOR input.

#### 10.2.2 Heat Pumps Controlled by the RS485 Interface

In order to use the heat pump, the filter pump must be turned on and the heat pump must be in the HEAT MODE.

**NOTE** In this configuration, it is possible to have the HEAT PUMP and SOLAR HEAT on the DEVICES ON/OFF at the same time.


**NOTE** If both HEAT PUMP and SOLAR HEAT are to be controlled by the system then set the DIP switch S2-1 to OFF and connect the SOLAR SENSOR to the SOLAR SENSOR input.

**NOTE** If SOLAR HEAT is not to be controlled by the system then set the DIP switch S2-1 to ON and connect the HEAT PUMP temperature sensor to the SOLAR SENSOR input.


## 10.2.3 Heat Mode

### MENU > SYSTEM SETUP > HEAT PUMP


On the SYSTEM SETUP screen, click the HEAT PUMP button to display the HEAT PUMP SETUP screen. On this screen, click the HEAT MODE button to set the heat temperature.

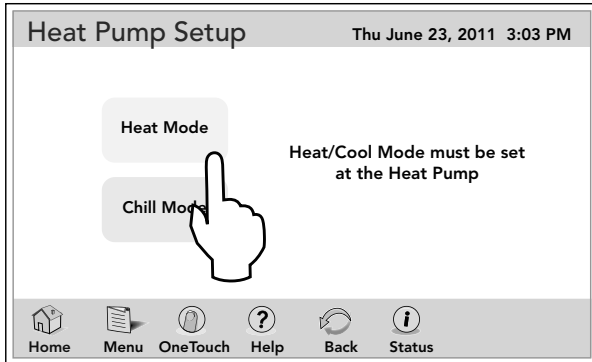

Use the numeric keypad to enter the new temperature, and then click the ENTER button to save it.

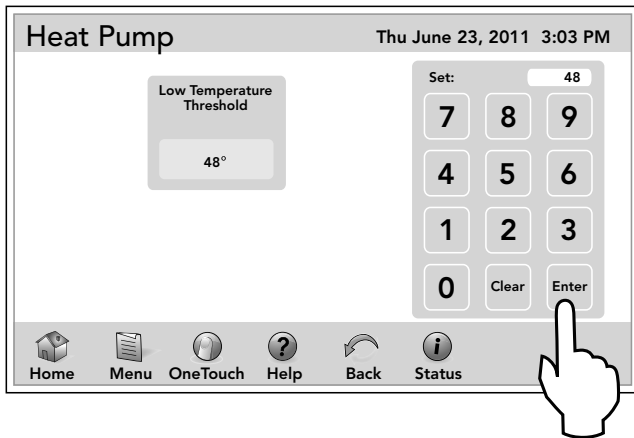

If the heat pump is not part of the system, the following warning message will be displayed.

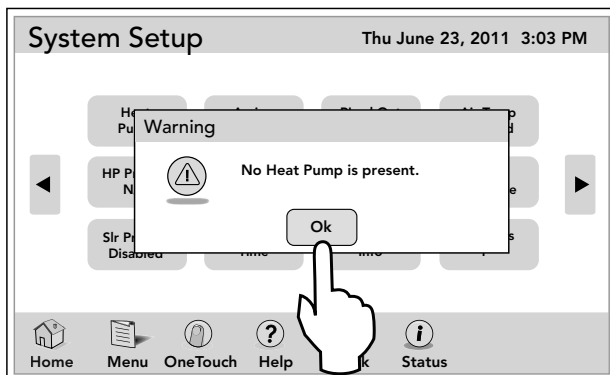

## 10.3 Heat Pump (Chiller Mode)

**NOTE** This equipment may not be part of your system. Please check with your installer.

The CHILLER selection controls the chilling operation of the heat pump.

### 10.3.1 Heat Pumps (Chiller) Controlled by the Extra Aux/Solar Boost Relay

In order to use the chiller mode of the heat pump, the filter pump must be turned on and the heat pump must be in CHILLER MODE, and the switch on the heat pump on the equipment pad must also be set to CHILLER MODE.

**NOTE** CHILLER takes the place of EXTRA AUX or SOLAR HEAT. It is not possible to have any two (2) of these on the DEVICES ON/OFF menu at the same time. To operate the HEAT PUMP in this type of configuration, set the DIP switch S2-1 to ON and connect the HEAT PUMP temperature sensor to the SOLAR SENSOR input.

#### IMPORTANT Information on Chiller

You must manually change the setting at your heat pump from Heat to Chiller.

### 10.3.2 Heat Pumps (Chiller) Controlled by the RS485 Interface

The CHILLER selection controls the chilling operation of the heat pump. In order to use the chiller mode of the heat pump, the filter pump must be turned on and the heat pump must be enabled. The heat pump will switch to chill automatically when the water temperature rises above the chiller temperature set point.

**NOTE** In this configuration, it is possible to have HEAT PUMP/CHILLER and SOLAR HEAT on the EQUIPMENT ON/OFF at the same time.

**NOTE** If both HEAT PUMP/CHILLER and SOLAR HEAT are to be controlled by the system then set the DIP switch S2-1 to OFF and connect the SOLAR SENSOR to the SOLAR SENSOR input.

**NOTE** If SOLAR HEAT is not to be controlled by the system then set the DIP switch S2-1 to ON and connect the HEAT PUMP temperature sensor to the SOLAR SENSOR input.

**NOTE** If the water temperature is greater than the chiller temperature setpoint then CHILLER is displayed on the EQUIPMENT ON/OFF screen. Otherwise HEAT PUMP is displayed.


### 10.3.3 Chill Mode

#### MENU > SYSTEM SETUP > HEAT PUMP

On the HEAT PUMP SETUP screen, click the CHILL MODE button to enable/disable the CHILLER. The CHILLER uses the desired chilling temperature set point.

**NOTE** The system will force the Chiller set point to always be at least five (5) degrees Fahrenheit higher than the heater set point.

**NOTE** If the end time of an enabled program overlaps the start time of a second enabled program, the second program will be delayed until the first program completes, and the master valve will remain activated between programs.

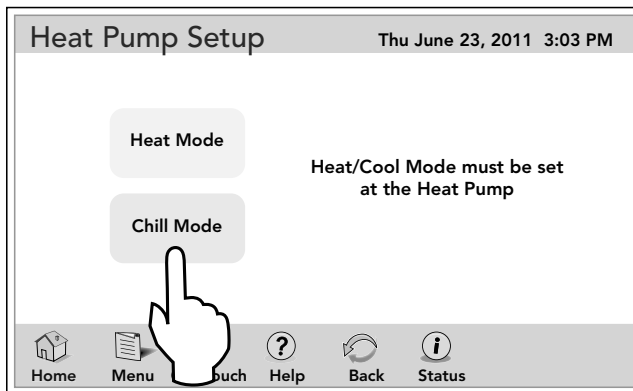

## Section 11. Variable Speed Pump Setup

**NOTE** This equipment may not be part of your system. Please check with your installer.

A VARIABLE SPEED PUMP can be programmed to run at any one (1) of its eight (8) speeds.

Power to the variable speed pump is switched on/off by a relay, so to program the pump you need to set a program time for the relay, and for any speeds that you wish to run during the pump's on cycle.

In the example shown below the variable speed pump is used for pool filtration, so it will be powered from the FILTER PUMP relay. Therefore, to program the variable speed pump you must first set a program time for the FILTER PUMP relay, then you need to program the desired pump speeds to turn on/off during the FILTER PUMP cycle.

If you do not program any speeds to run during the filtration cycle, then by default the variable speed pump will run at the POOL speed setting during its filtration cycle.

Example:

1. The total length of the filtration cycle is to be from 8am to 5pm. So program the FILTER PUMP to turn on at 8am and to turn off at 5pm.
2. To run the variable speed pump at the SPEED3 setting from 8am to 1pm, select VSP SPD1 PGM, then select SPEED3, program it to turn on at 8am and off at 1pm.
3. To run the variable speed pump at the SPEED4 setting from 1pm to 5pm, select VSP SPD1 PGM, then select SPEED4, program it to turn on at 1pm and off at 5pm.

	ON	OFF	DESCRIPTION
FILTER PUMP	8AM	5PM	Total duration of filtration cycle
SPEED3	8AM	1PM	Pump runs at the SPEED3 setting
SPEED4	1PM	5PM	Pump runs at the SPEED4 setting

The VAR SPEED PUMP menu is used to select the variable speed pump type (Jandy ePump™, Pentair® IntelliFlo® VF, Pentair IntelliFlo® VS, or Pentair IntelliPro® VS) and to select the various pump settings. To interface the IntelliPro® VS, select IntelliFlo® VS.


### 11.1 To Select the Pump/Model

#### MENU > SYSTEM SETUP > VSP SETUP


On the SYSTEM SETUP screen, click the VSP SETUP button to display the VSP SETUP screen.

On the VSP SETUP screen, click the PUMP/MODEL button to display the SELECT VSP screen.

The RESTORE SPD DEFAULTS button will set the pump speeds, prime speeds and prime duration to their factory default settings.

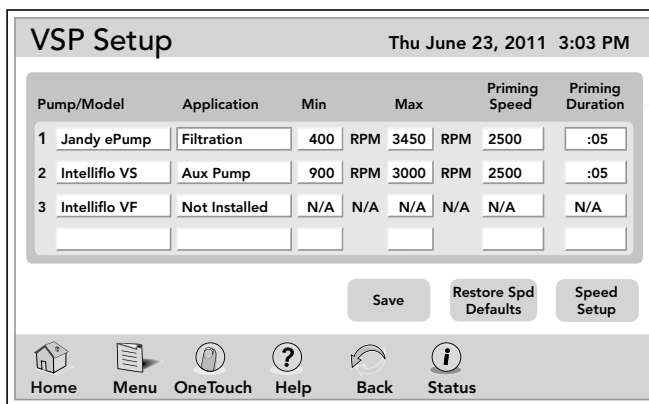

In the PUMP MODEL list, select the variable speed pump type and click the SELECT button to save it.

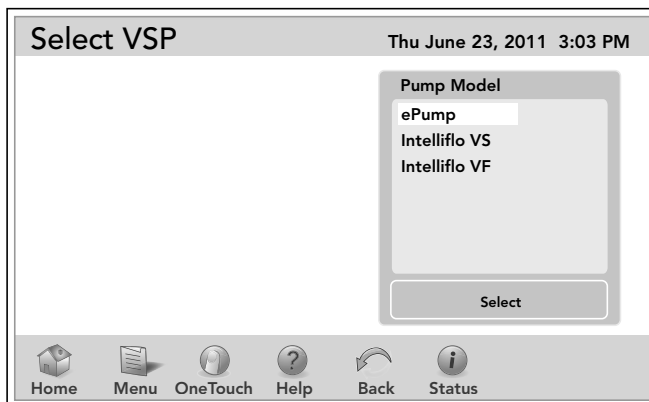

## 11.2 To Set Up the Pump Application

The iAquaLink can control up to four (4) variable speed pumps. In the PUMP SETUP menu the user can select each pump (1-4) and configure how the pump(s) are to be used. For example if the pump is to be used for pool/spa filtration then you would select FILTRATION as the pump application. If the pump is to be used for a water feature then you would select AUX. PUMP as the pump application. The default setting is NOT INSTALLED.

COMBO	POOL SPA ONLY	DUAL EQUIPMENT
FILTRATION	FILTRATION	POOL PUMP
AUX. PUMP	AUX. PUMP	SPA PUMP
NOT INSTALLED	NOT INSTALLED	AUX. PUMP
		NOT INSTALLED


If the system is not going to control a variable speed pump then leave the application set to NOT INSTALLED. If the system is going to control a variable speed pump, then you would set the application accordingly.

In the example below we are telling the system that it will be controlling one (1) variable speed pump.

### MENU > SYSTEM SETUP > VSP SETUP

On the VSP SETUP screen, click the APPLICATION button of the selected pump to display the VSP APPLICATION screen.

On the PUMP APPLICATION list choose the desired pump application and Click the SELECT button to save it.

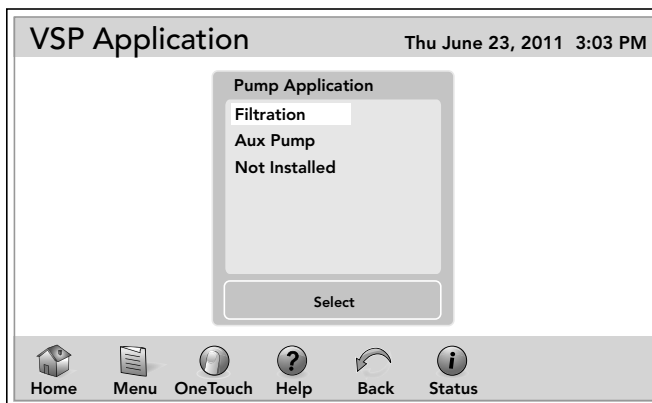


## 11.3 To Set Up MIN/MAX Parameters

This menu allows the user to set a global minimum and maximum speed or flow for the indicated pump. The SCALE setting is fixed to RPM for the Jandy® ePump™ and the Pentair® IntelliFlo VF. The SCALE setting is fixed to GPM for the Pentair IntelliFlo VF.

### MENU > SYSTEM SETUP > VSP SETUP

On the VSP SETUP screen, click the MIN / MAX button of the selected pump to display the VSP SET RPM screen.


On the VSP SET RPM screen, use the numeric keypad to enter the desired limit and Click the ENTER button.

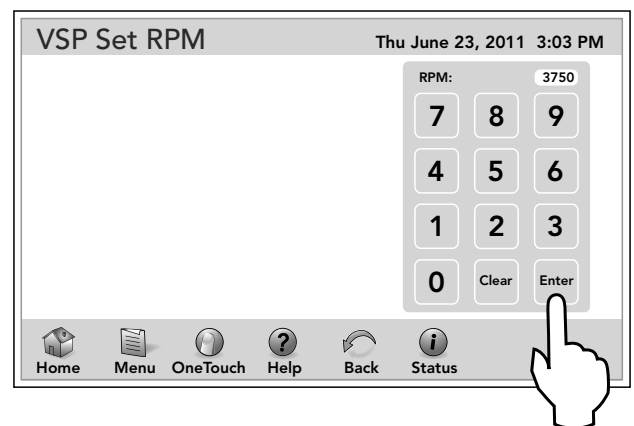

## 11.4 To Set Up the Priming Speed

### MENU > SYSTEM SETUP > VSP SETUP


On the SYSTEM SETUP screen, click the VSP SETUP button to display the VSP SETUP screen. On the VSP SETUP screen, click the PRIMING SPEED button of the selected pump to display the SELECT VSP screen. Use the numeric keypad to set the desired priming speed.

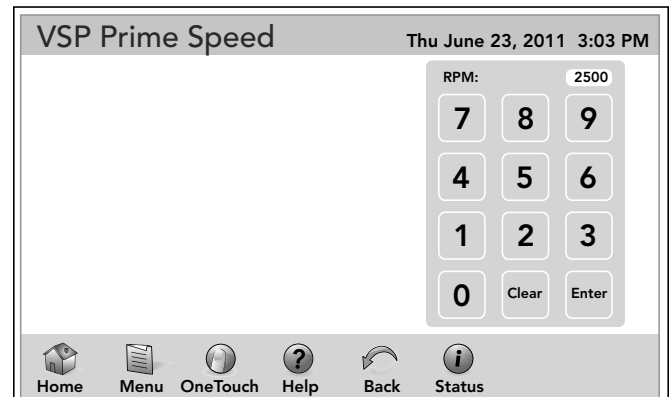

### 11.5 To Set Up the Priming Duration Time

MENU > SYSTEM SETUP > VSP SETUP

On the SYSTEM SETUP screen, click the VSP SETUP button to display the VSP SETUP screen. On the VSP SETUP screen, click the PRIMING DURATION button of the selected pump to display the VSP SET PRIMING DURATION screen. Use the numeric keypad to set the desired priming duration time.

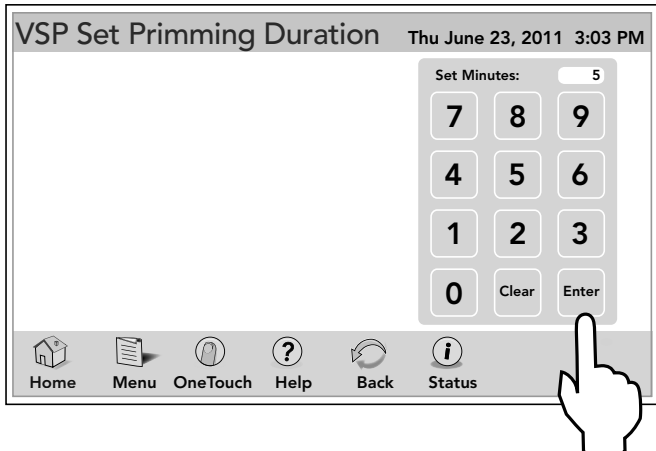


### 11.6 To Assign a Pump Speed to an AUX

MENU > SYSTEM SETUP > VSP SETUP

On the SYSTEM SETUP screen, click the VSP SETUP button to display the VSP SETUP screen. On the VSP SETUP screen click item to be assigned an AUX.

On the ASSIGN VSP to AUX/RELAY screen, click the desired AUX and Click the SAVE button.

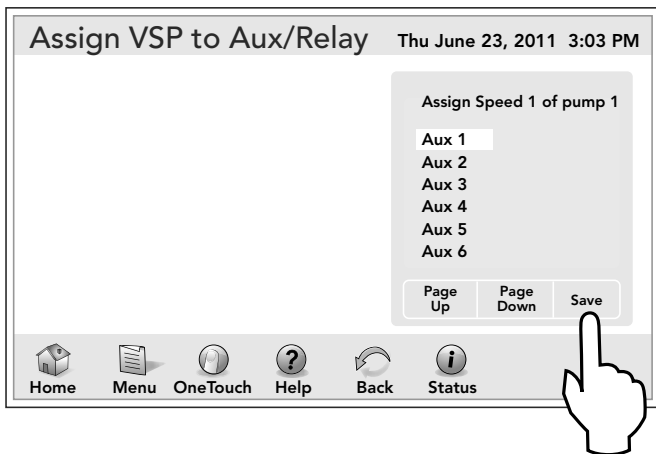


### 11.7 To Set Up Pump Speed


There are eight (8) default speed presets for each variable speed pump.

MENU > SYSTEM SETUP > VSP SETUP

On the VSP SETUP screen, click SPEED SETUP button to display the VSP SPEED SETUP screen.

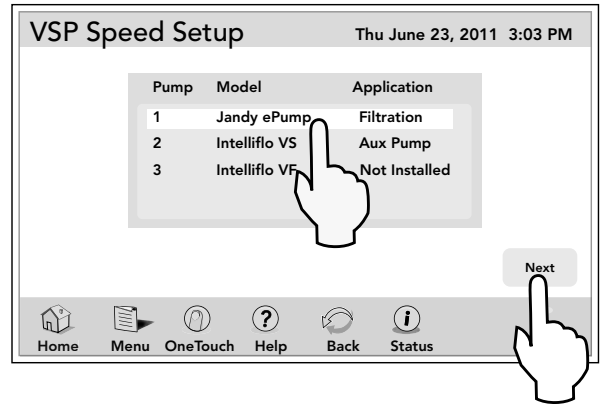

Select the pump/model and click the NEXT button to display the eight (8) speed VSP SETUP screen.

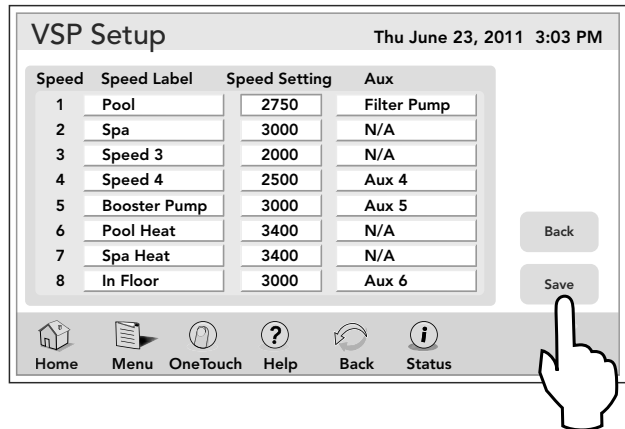

## 11.8 To Re-label the Speed Preset


Each of the eight (8) speed presets has a label and each of those labels can be changed from the default value.

### MENU > SYSTEM SETUP > VSP SETUP

On the VSP SETUP screen, click SPEED LABEL of the selected speed to display the VSP SPEED LABEL screen.

On the GENERAL LABELS list, select the desired device and click the SAVE button. Use PAGE UP / PAGE DOWN to scroll through the list. If you want to assign a new label, click the CUSTOM LABEL button.

See Section 4.9, "Custom Label".

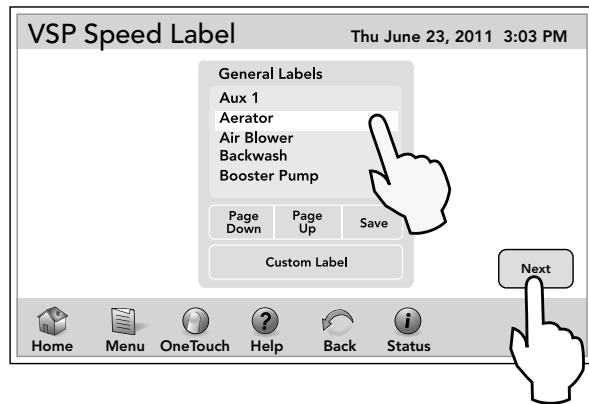

## 11.9 Default Preset Speed Labels (RS Combo and RS only)

When a pump is configured for FILTRATION, the speed presets will be labeled as shown in the table below. The presets can be relabeled.

DEFAULT Labels when Pump is configured for FILTRATION			
PRESET #	POOL/SPA COMBO	POOL/SPA ONLY	SPEED (RPM)
1	POOL	POOL	1725
2	SPA	SPEED2	2750
3	SPEED3 or CLEANER (if DIP S1-1 is on)	SPEED3 or CLEANER (if DIP S1-1 is on)	2750
4	SPEED4 or SPILLOVER (if DIP S1-3 is on)	SPEED4	2750
5	POOL HEAT	TEMP1	2250
6	SPA HEAT	TEMP2	2250
7	SOLAR HEAT (if DIP S1-7 is off) or HEATPUMP (if DIP S1-7 is on) or SPEED7	SOLAR HEAT (if DIP S1-7 is on) or HEATPUMP (if DIP S1-7 is on) or SPEED7	2750
8	INFLOOR	INFLOOR	2750

### Preset 1:

The default label for preset #1 is POOL. This label is tied to the pool filtration mode. Anytime the pool pump is supposed to turn on, this preset is selected.

### Preset 2:

On combo systems the default label for preset #2 is SPA. This label is tied to the spa filtration mode, anytime the spa pump is supposed to turn on, this preset is selected.

### Preset 3:

On combo systems, if DIP switch S1-1 is ON, then the default label for this preset is CLEANER. Anytime the cleaner mode is turned on the pump will run at the speed setting of this preset.

On a combo system, if DIP switch S1-1 is OFF, then the default label for this preset is SPEED3.

**Preset 4:**

If DIP switch S1-3 is ON, then the default label for this preset is SPILLOVER. Anytime the spillover mode is turned on the pump will run at the speed setting of this preset.

If DIP switch S1-3 is OFF, then the default label for this preset is SPEED4.

**Preset 5:**

On pool/spa combo systems the default label is POOL HEAT. When the pool heater is enabled the pump will run at this speed.

On pool/spa only systems the default label is TEMP1. When the pump is running and the heater set point TEMP1 is enabled, then the pump will run at this preset.

**Preset 6:**

On pool/spa combo systems the default label is SPA HEAT. When the system is in the SPA mode and the SPA HEATER is enabled then the pump will run at this speed.

On pool/spa only systems the default label is TEMP2. When the pump is running and the heater set point TEMP2 is enabled, then the pump will run at this preset.

**Preset 7:**

If the system is in the SOLAR HEAT mode or the HEAT PUMP mode then the pump will run at this preset speed. If the system is not configured for solar heat or a heat pump then the default label will be SPEED7.

**Preset 8:**

When the In-Floor clean mode is enabled and the pump is running, it will be running at this preset speed.

**11.9.1 Default Preset Speed Labels (Dual Equipment)**

When a pump is configured to be either a POOL PUMP or a SPA PUMP, the speed presets will be labeled as shown in the table below. The presets can be relabeled but the operation of the speeds may be changed by doing so.

DEFAULT Labels and Speeds when Pumps are configured as POOL PUMP and SPA PUMP (Dual Equipment Systems)			
PRESET #	POOL PUMP	SPA PUMP	SPEED
1	POOL	SPEED1	1725
2	SPEED2	SPA	2750
3	SPEED3 or CLEANER (if DIP S1-1 is on)	SPEED3	2750
4	SPEED4	SPEED4	2750
5	POOL HEAT	SPEED5	2250
6	SPA HEAT	SPA HEAT	2250
7	SOLAR HEAT (if DIP S1-7 is off) or HEATPUMP (if DIP S2-7 is on) or SPEED7	SPEED7	2750
8	INFLOOR	SPEED8	2750

**Preset 1:**

On a dual equipment system when a pump is configured as a POOL PUMP, the default label for preset #1 is POOL. This label is tied to the pool filtration mode. Anytime the pool pump is supposed to turn on, this preset is selected.

On a dual equipment system when a pump is configured as a SPA PUMP, the default label for preset #1 is SPEED1.

**Preset 2:**

On a dual equipment system when a pump is configured as a SPA PUMP, the default label for preset #2 is SPA. This label is tied to the spa filtration mode. Anytime the spa pump is supposed to turn on, this preset is selected.

On a dual equipment system when a pump is configured as a POOL PUMP, the default label for preset #2 is SPEED2.



**Preset 3:**

For the pool pump, if DIP switch S1-1 is ON, then the default label for this preset is CLEANER. Anytime the cleaner mode is turned on the pump will run at the speed setting of this preset. If DIP switch S1-1 is OFF, then the default label for this preset is SPEED3.

For the spa pump the default label is SPEED3.

**Preset 4:**

The default label is SPEED4.

**Preset 5:**

For the pool pump the default label is POOL HEAT. When the pool heater is enabled the pump will run at this speed.

For the spa pump the default label is SPEED5.

**Preset 6:**

For the pool pump the default label is SPEED6.

For the spa pump the default label is SPA HEAT. When the spa heater is enabled the pump will run at this speed.

**Preset 7:**

For the pool pump, if the system is in the SOLAR HEAT mode or the HEAT PUMP mode then the pump will run at this preset speed. If the system is not configured for solar heat or a heat pump then the default label will be SPEED7.

For the spa pump the default label is SPEED7.

**Preset 8:**

For the pool pump, when the In-Floor clean mode is enabled and the pump is running, it will be running at this preset speed.

For the spa pump the default label is SPEED8.

**11.10 Variable Speed Pump Detail Operation****11.10.1 Filtration Mode****a) Manual Operation****Setting speeds by turning ON auxiliaries that have speeds assigned to them.**

1. The pump is set to the speed that is assigned to the auxiliary. The exception to this rule will be when the pool/spa heater, solar heat, or heat pump is ON. To protect the heater, solar panels, or heat pump we do not allow the user to select a lower speed than the heater and solar speed settings while they are ON.
2. If you have several auxiliaries that have speeds assigned and if they are all ON, and you then turn OFF one of the auxiliaries, the pump will be set to the highest speed that is assigned to any of the auxiliaries that are ON. Once again, if the pool/spa heater, solar heat, or heat pump is ON, we do not allow the user to select a lower pump speed.

**Adjusting speeds from the “Other Devices” screen.**

1. On this screen, you can adjust the pump to the desired speed, however the pump will only stay at the speed for that manual ON time. The manual adjust pump speeds are temporary, and not saved - so if you turn the pump OFF and then ON again, the pump will revert back to the default values.

**b) Programmed Operation**

The pump will go to the speed programmed. However, if the pool/spa heater, solar heat, or heat pump is on, the pump will not go any lower than the pool/spa heater, solar heat, or heat pump speed setting.

**c) Freeze Protection**

In the freeze protect mode the pump will turn ON and be set to at least the freeze protect speed. If the filter pump speed is higher than the freeze protect speed, then the pump will run at the filtration speed. Also, if speeds have been assigned to auxiliaries and if those auxiliaries are freeze protected, the pump will be set to the highest of the speeds.

## 11.10.2 Auxiliary Pump Mode

### a) Manual Operation

#### Setting speeds by turning ON auxiliaries that have speeds assigned to them.

1. The speed assigned to the auxiliary that was pressed takes precedence. For example, if the pump is at 3000 RPM, and then AUX 1 is pressed, the pump will switch to the speed that is assigned to AUX 1 regardless of whether the speed is higher or lower than the speed that the pump is currently running at. So, referring to the table below, if all of the auxiliaries are OFF and then AUX 3 is turned ON the pump will go to 3000 RPM. Then if AUX 2 is turned ON the pump switches to 2000 RPM.
2. However, if you have several auxiliaries ON and all of them have a speed assigned to them, what speed does the pump go to when you turn OFF one of the auxiliaries? The pump will switch to the highest speed that is assigned to the auxiliaries. For example, referring to the table below, if all 3 auxiliaries are ON and the pump is at 1000 RPM, what speed will the pump go to when AUX 1 is turned OFF? The answer is 3000 RPM, the highest speed that is assigned to the auxiliaries that are ON.

AUX #	SPEED ASSIGNED TO AUX
1	1000 RPM
2	2000 RPM
3	3000 RPM

#### Setting speeds from the VSP Adjust/Set Speed menu (accessed from the other devices screen).

1. Regardless of what speed is ON, the pump will switch to the speed depending on which one of the 8 buttons on this screen is pressed.

### b) Programmed Operation

#### Programming pump SPEEDS.

1. The pump will go to the speed that is being turned ON by the program regardless of what the speed currently is. If a program time ends and there are other programs overlapping, the pump will go to the highest programmed speed.

#### Programming AUXILIARIES that have speeds assigned to them.

1. The pump will go to the speed that is assigned to the auxiliary that is being turned ON, regardless of the current speed. If several programs are overlapping for auxiliaries that have speed assigned to them, the pump will operate at the speed of the auxiliary that was most recently turned ON.
2. If several programs are overlapping for auxiliaries that have speeds assigned to them, and then one of the programs end, then the pump will switch to the highest speed of all the auxiliaries that are ON.

## Section 12. Sprinkler System Setup

**NOTE** This equipment may not be part of your system. Please check with your installer.


In addition to the individual sprinkler programming, the user may enable or disable all sprinkler programs, cancel sprinkler programs for 24 hours, or manually start one or more sprinkler programs.

### 12.1 Running the Sprinkler System

**NOTE** If there are no sprinkler programs set to ON, then SPRINKLERS does not appear in the DEVICES list.

HOME > OTHER DEVICES ON / OFF > SPRINKLERS

On the HOME screen, click the OTHER DEVICES ON/OFF button to display the DEVICES screen shown below.

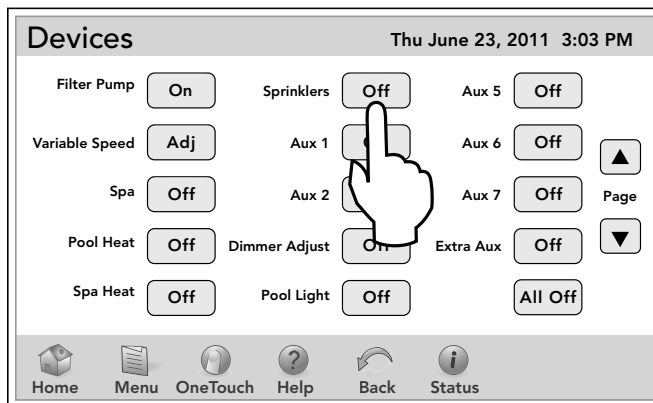

#### 12.1.1 Cancel Today - 24 Hour Sprinkler Delay


This feature is used to disable the sprinklers for a period of 24 hours. All pending programs are canceled and the system enters the delay state. After 24 hours the system returns to the ENA state.

The 24-hour time delay is reset each time CANCEL TODAY is selected.

**NOTE** This feature may also be used to quickly turn off all sprinkler valves.

OTHER DEVICES ON / OFF > SPRINKLERS > CANCEL TODAY

On the DEVICES screen, click the SPRINKLERS button to display SPRINKLER OPERATION screen. Click the CANCEL TODAY button to set a 24 - hour sprinkler delay.

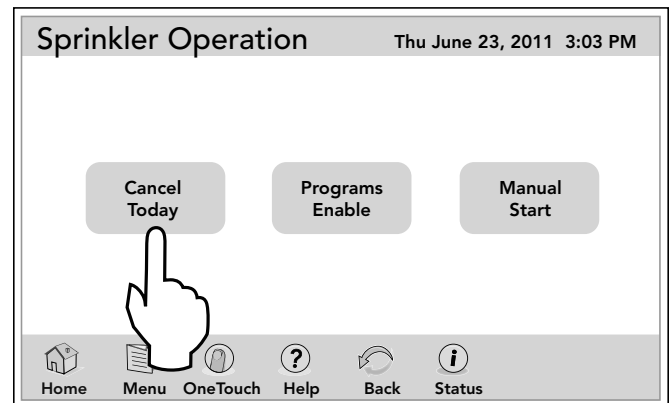


#### 12.1.2 Enabling the Sprinkler System

To automatically run programs at their start times, the sprinkler control system must be in the enabled state.

OTHER DEVICES ON/OFF > SPRINKLERS > PROGRAMS

To enable the sprinkler system, click the PROGRAMS button, on the SPRINKLER OPERATION screen.

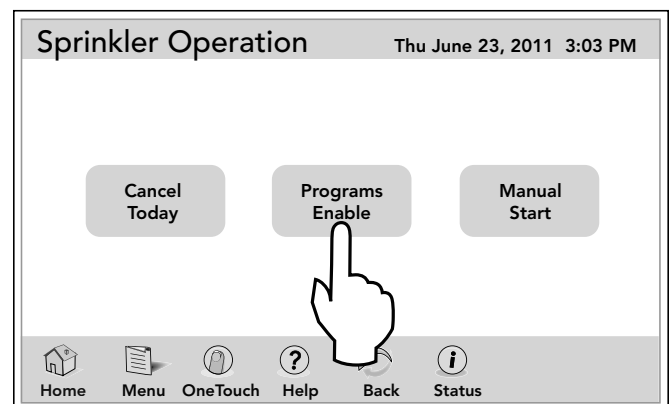


### 12.1.3 Manually Starting a Sprinkler Program

Selecting MANUAL START presents the user with a screen providing the option to start all enabled programs, or any individual enabled program, or a single valve.

#### SPRINKLERS > SPRINKLER OPERATION > MANUAL START


Click the MANUAL START button, on the SPRINKLER OPERATION screen.

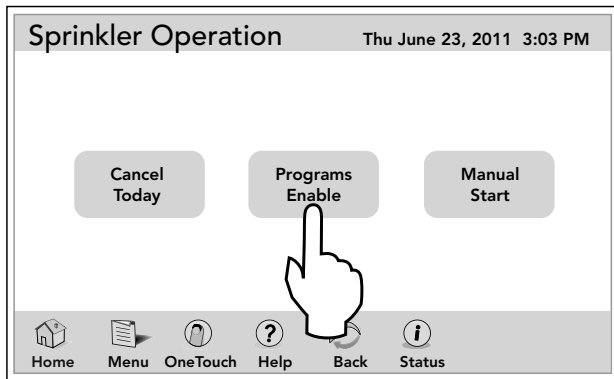

Continue on the screen shown below and click the desired PROGRAM # and click the START button. The program is started immediately and runs to completion unless interrupted by the user.

If ALL PROGRAMS is selected, all enabled programs are run in succession, in numerical order. The sprinkler system enters ENA state at the end of manually started programs.

**NOTE** If a program is not set to ON, it does not appear in the MANUAL START list.

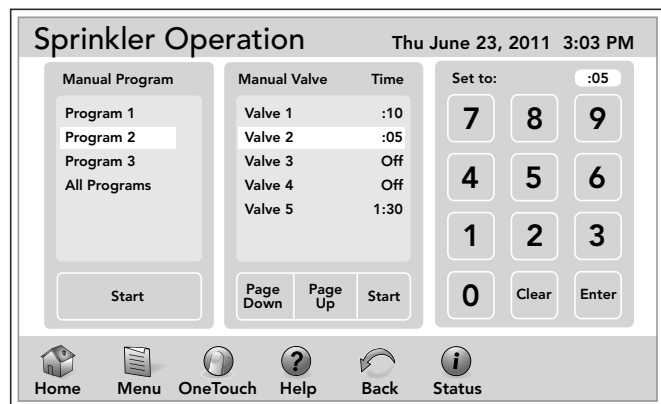


### 12.1.4 Disabling the Sprinkler System

When the sprinkler control system is disabled, all running programs are canceled and no programs will run, regardless of their individual ON/OFF setting.

#### OTHER DEVICES ON/OFF > SPRINKLERS > PROGRAMS

To disable the sprinkler system, click the PROGRAMS DISABLE button in the SPRINKLER OPERATION screen.

After DISABLE PROGRAMS is selected, the system enters the OFF state.

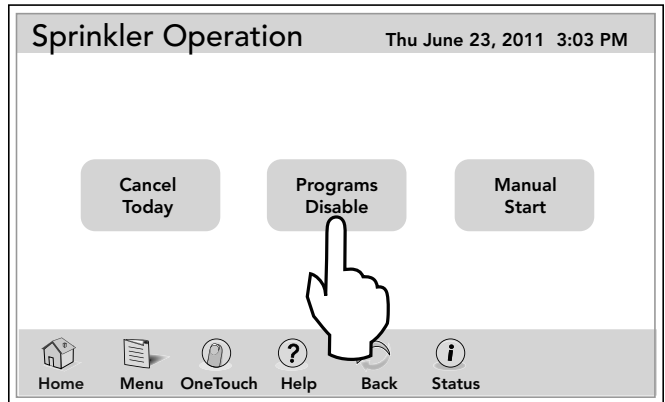


**NOTE** This equipment may not be part of your system. Please check with your installer.

## 12.2 Programming Sprinkler System

The AquaLink RS offers a versatile, easy to use features to program your sprinkler system. Up to three (3) programs can be scheduled with different Run Days, Start Times and Set Durations.

#### MENU > SYSTEM SETUP > SPRINKLER SETUP


On the SYSTEM SETUP screen, click the SPRINKLER SETUP button to display the screen shown below.

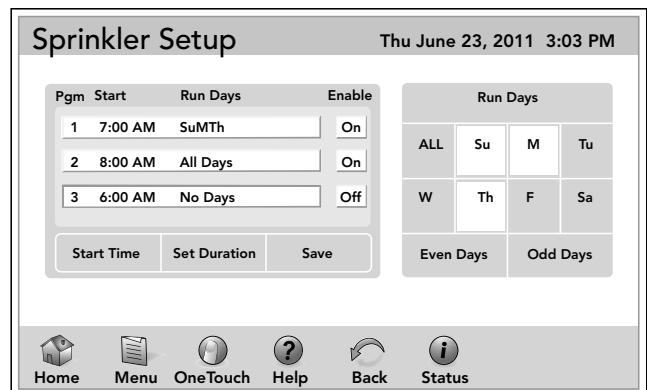

### 12.2.1 To Set Up the Water Days


You can choose All to run the program all week long, Even Days, Odd Days or select the desired day(s) to run the enable programs.

On the SPRINKLER SETUP screen, enable the program # by touching the ON button.

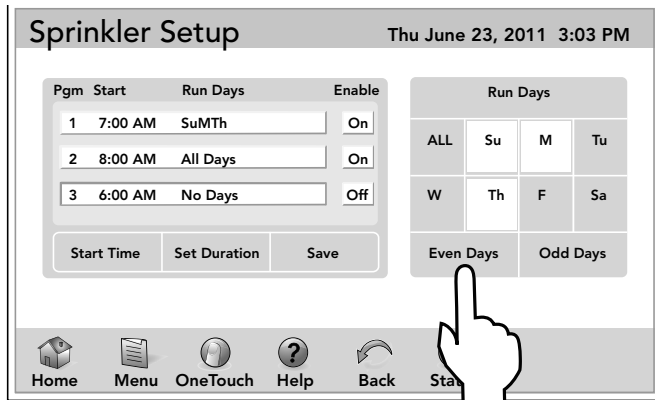

### 12.2.2 To Set Up the Sprinklers Program Start Time Menu

On the SPRINKLER SETUP screen, click the START TIME button to display the numeric keyboard. Enter the start time and click the ENTER button to save it.

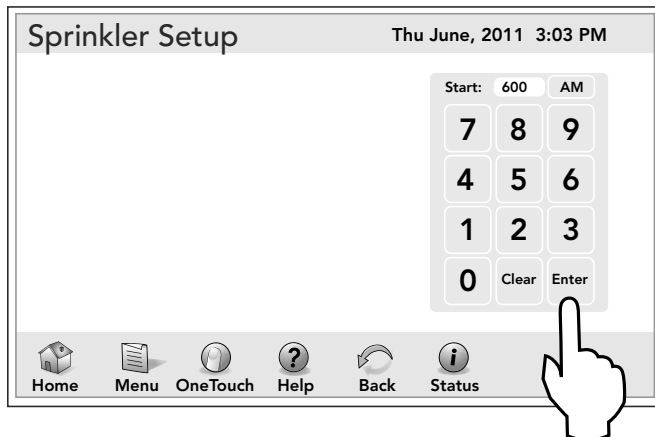


### 12.2.3 To Set Up the Sprinkler Valve Duration

The Sprinkler Control module will control up to eight (8) valves, plus one (1) master valve. When a program is run, the master valve always activates 1-2 seconds before the first programmed valve in the program. Valves are then activated in numerical order for a time equal to their duration setting. There is a 1-2 second delay between valve activations.


Valve durations are adjustable from OFF to 240 minutes, in increments of one (1) minute from OFF to 10 minutes, increments of 10 minutes from 10 to 60 minutes, and increments of 30 minutes from 60 to 240 minutes (4 hours).

After setting the water DAYS, click the DURATION button to display the SPRINKLER SET DURATION screen. Click the PROGRAM button to be set up.

Use PAGE UP/DOWN to scroll the list. Select the desired VALVE. Click the DURATION time and using the numeric keyboard enter the new duration time. Click the ENTER button when finished.

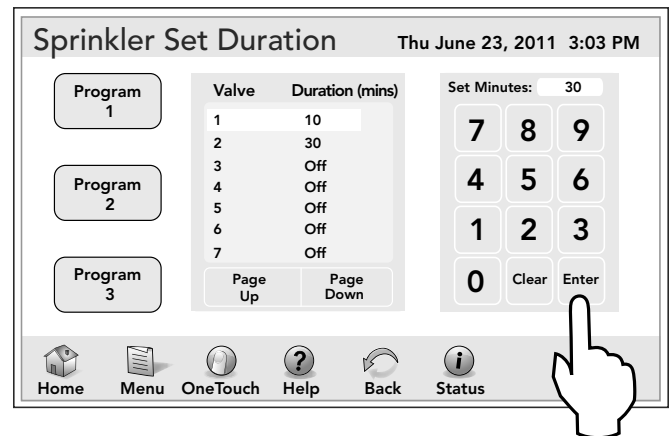

If you enter a value greater than 240 minutes, the following error screen will be displayed.

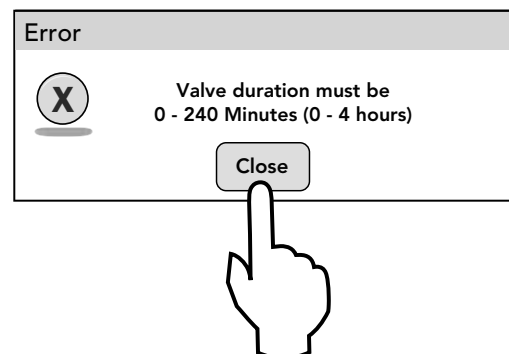

## Section 13. ChemLink™ Setup

The ChemLink controller automatically monitors and maintains both the sanitizer and the pH balance in swimming pools, spas, or any circulating water system that requires water chemistry management.

### 13.1 To Set Up the ChemLink


**NOTE** Check with the installer before making changes to the SYSTEM SETUP.

#### SYSTEM SETUP > SET CHEMLINK > CHEMLINK


On the SYSTEM SETUP screen, click the SET CHEMLINK button to display the CHEMLINK setup screen.

As shown below, the CHEMLINK setup screen provides links to set up the ORP/pH balances, ORP/pH manual feeds, and level switch. Also, provides the current values for the ORP and pH levels.

If only one chemLink is present in the system, the CHEMLINK setup screen is displayed automatically.

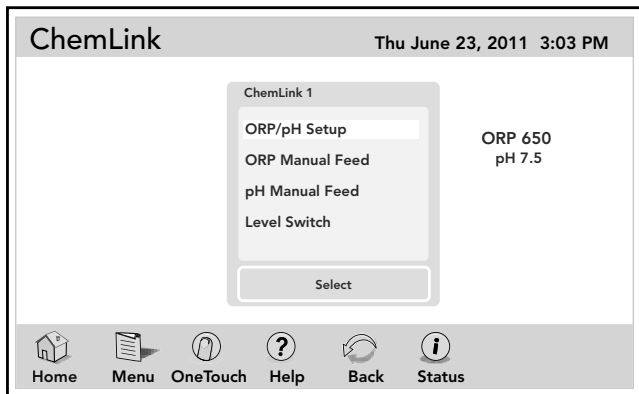


If more than one chemlink is present, the screen will display the links for additional chemlinks. To continue, click the button of the chemlink to be configured and the CHEMLINK ORP/pH setup screen will appear.

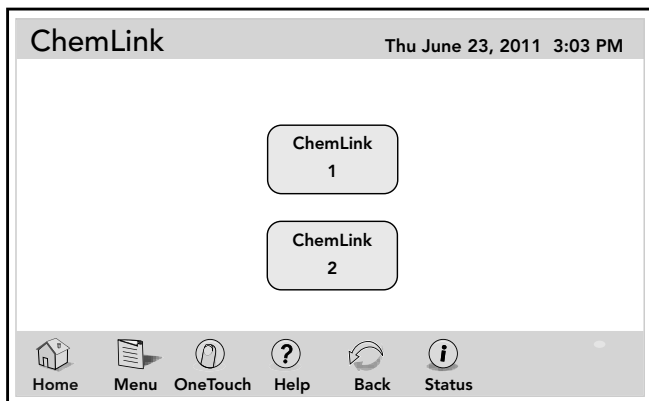

### 13.2 To Configure the ORP Controller


On the CHEMLINK setup screen, select the ORP/pH SETUP item and then click SELECT to display the CHEMLINK ORP/pH setup screen.

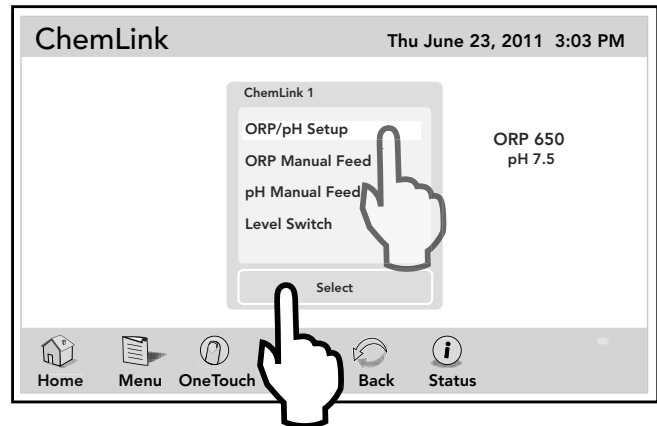

By default, the ORP configuration screen will appear as shown below. Use this screen as follows:

- Click ORP to configure the ORP controller (default).
- Click pH to configure the pH controller.
- Use PAGE UP/DOWN to see additional items.
- Select item to be configured.
- Use the UP/DOWN arrows to adjust values.
- Click SAVE when finished.

**NOTE** Make sure you click the SAVE button when finished. Otherwise, your new setting will be lost.

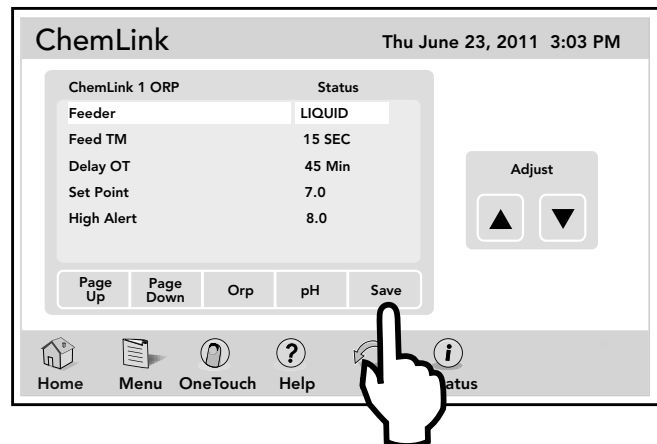


### 13.2.1 ORP Feeder Type

Depending on your installation, the iAquaLink may display the following feeders:

- NONE - Default setting.
- SALT - For salt water chlorinators.
- ERO LP - Non typical application.
- MBV - Non typical application.
- ERO HP - Non typical application.
- LIQUID - For liquid peristaltic pumps.
- GRAN - For Polaris® G1000 dichor feeders.


On the CHEMLINK ORP setup screen, select the FEEDER type. Use the UP and DOWN arrows to select the feeder type. Click SAVE when finished.

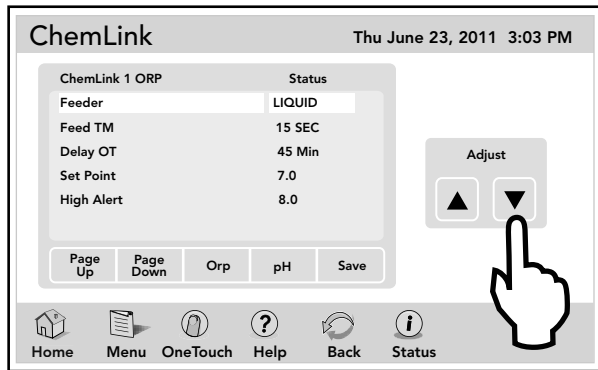

### 13.2.2 ORP Feeder Times

The feeders times, sets the amount of time the controller activates the feeder per dose.


On the CHEMLINK ORP setup screen, select the FEED TM values. Use the UP and DOWN arrows to adjust the feed times values. Click SAVE when finished.

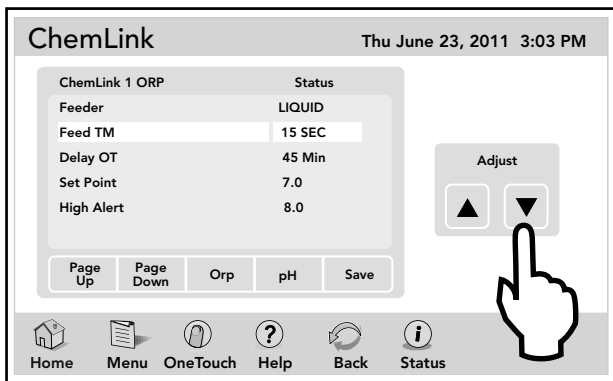

Type	ERO LP/MBV/ERO HP	Liquid
Default	Do not use	30 Sec
Range		.05 Sec to CONT

### 13.2.3 ORP Delay On Time

On the CHEMLINK ORP setup screen, select the DELAY OT time. Use the UP and DOWN arrows to adjust the delay on time. Click SAVE when finished.

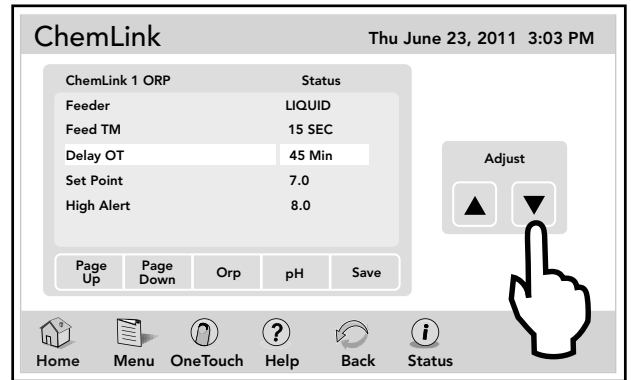

Type	Salt	ERO LP/ MBV/ ERO HP	Liquid	Gran
Default	Overfeed Off	Do not use	10 Min	30 Min
Range			1-99 Min	1-99 Min


OVERFEED: Salt only. Will alarm and not feed if ORP has activated for too long, preventing damage to the cell.

FEED DELAY: Sets the amount of time the controller waits to dose the pool again.

### 13.2.4 ORP Setpoint

This setting specifies the level of sanitizer to be maintained.

On the CHEMLINK ORP setup screen, select the SET POINT values. Use the UP and DOWN arrows to adjust the set point values. Click SAVE when finished.

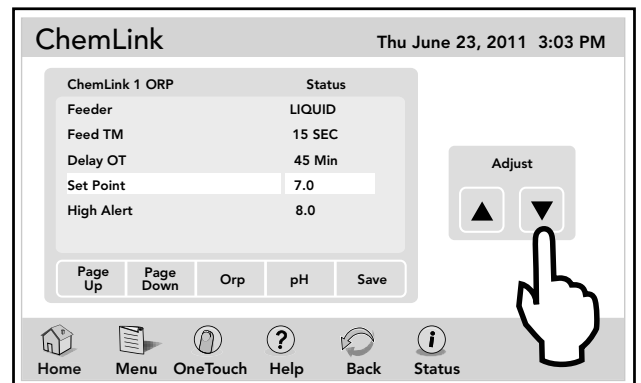


Default	650
Range	200 to 900

### 13.2.5 ORP Alarm - High Alert

The high alert alarm sets an alarm to deactivate the controller in the event of an ORP reading that is out of high range. This could be an indication of a mechanical malfunction in the feeding system.

On the CHEMLINK ORP setup screen, select the HI ALERT values. Use the UP and DOWN arrows to adjust the high alert values. Click SAVE when finished.

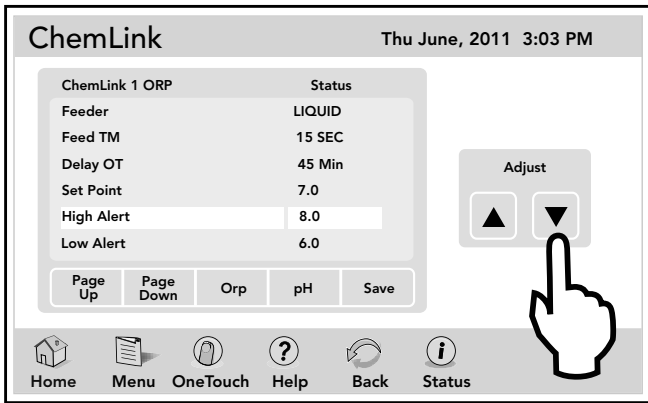


Default	950
Range	350 to 950

### 13.2.6 ORP Alarm - Low Alert

The low alert alarm sets an alarm to deactivate the controller in the event of an ORP reading that is out of low range. This could be an indication of a mechanical malfunction in the feeding system.


On the CHEMLINK ORP setup screen, select the LOW ALERT values. Use the UP and DOWN arrows to adjust the low alert values. Click SAVE when finished.

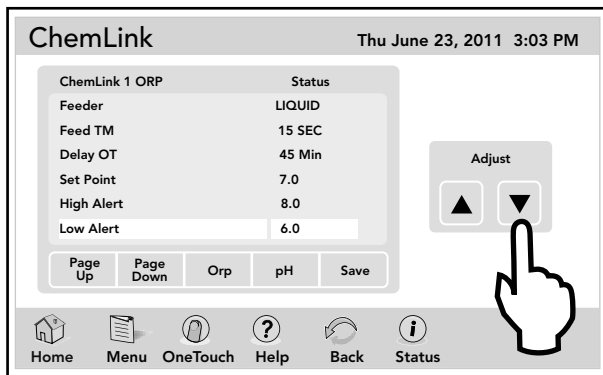

Default	100
Range	100 to 650

### 13.2.7 Wait or Stop pH

On the CHEMLINK ORP setup screen, select the WAIT PH/STOP PH entry. Use the UP and DOWN arrows to adjust the wait/stop pH entry. Click SAVE when finished.

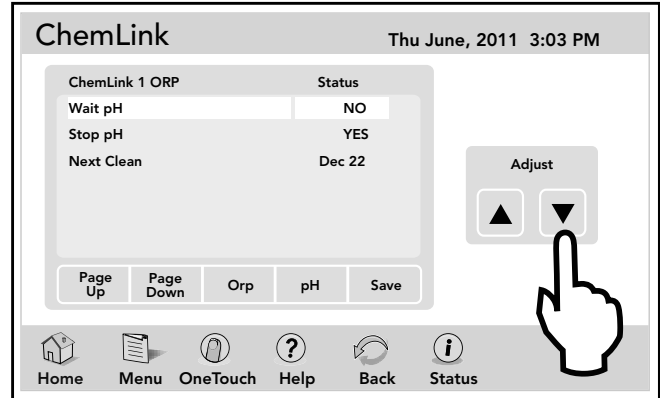

Wait for pH:

- YES= ORP will not feed at the same time as pH.
- NO= ORP will feed regardless of when pH feeds.
- Default= YES

Stop for pH:

- YES= ORP will not feed if the pH is out of range.
- NO= ORP will feed regardless of pH.
- Default= YES



### 13.2.8 ORP Next Cleaning


Manually set reminder to clean the ORP sensor. Enter Month, then Year for automatic reminder.

- Default - JAN 01 (essentially OFF).

On the CHEMLINK ORP setup screen, select the NEXT CLN date. Click the UP or DOWN arrows to display numeric keyboard screen.


Using the numeric keyboard, click clear to erase existing date. Enter new date in Month/Year format.

Click ENTER when finished.

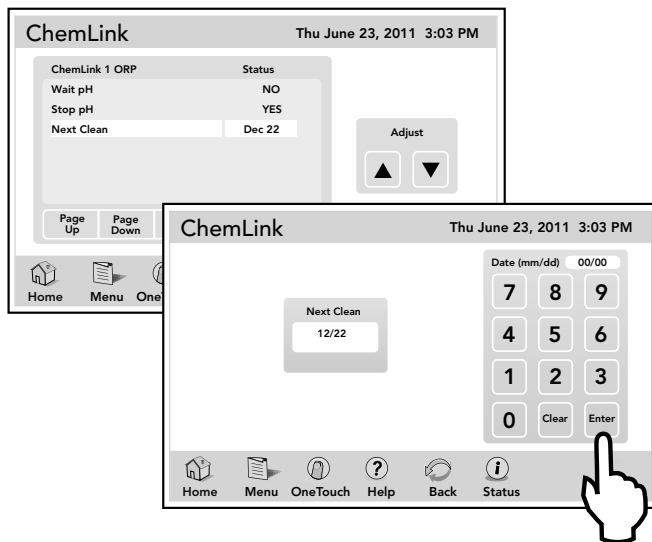

### 13.3 To Configure the pH Controller

On the CHEMLINK setup screen, click the pH button to display the CHEMLINK pH setup screen. This screen provides the current settings for the pH levels.

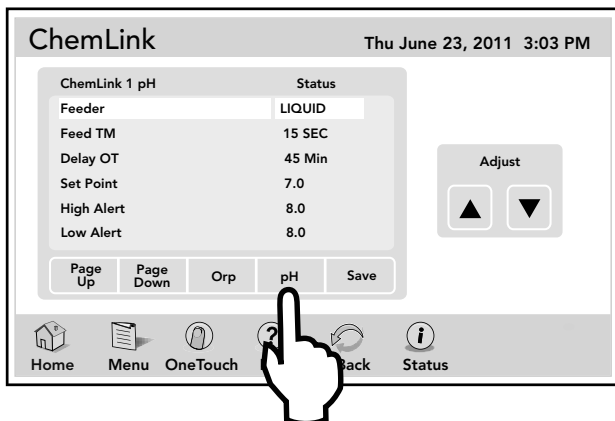


### 13.3.1 pH Feeder Type

Depending on your installation, the iAquaLink may display the following feeders:

- NONE - Default setting.
- ERO LP - Non typical application.
- MBV - Non typical application.
- ERO HP - Non typical application.
- GRAN - Non typical application.
- LIQUID - For liquid peristaltic pumps.


On the CHEMLINK pH setup screen, select the FEEDER type. Use the UP and DOWN arrows to select the feeder type. Click SAVE when finished.

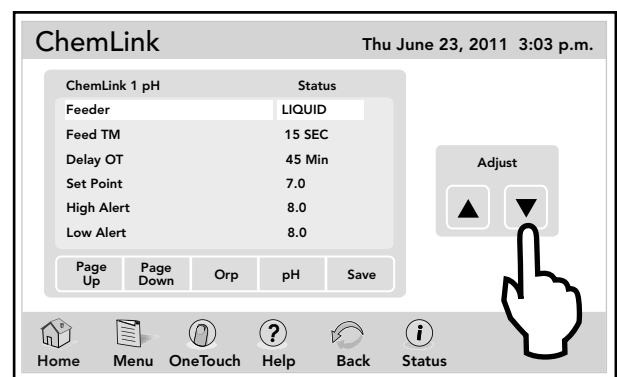

### 13.3.2 pH Feeder Times

The feeder times sets the amount of time the controller activates the feeder per dose.

On the CHEMLINK pH setup screen, select the FEED TM time. Use the UP and DOWN arrows to adjust the feed time. Click SAVE when finished.

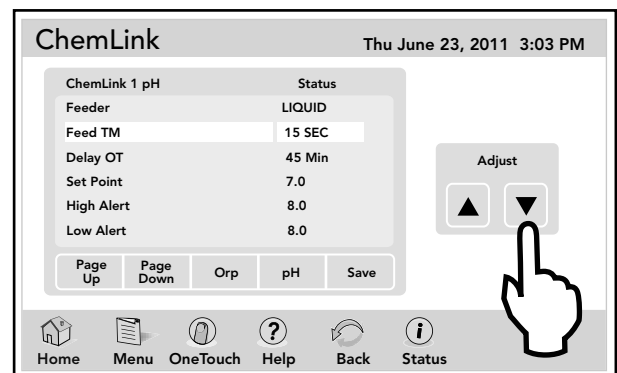


Type	ERO LP/MBV/ERO HP	Liquid
Default	Do not use	30 Sec
Range		.05 Sec to CONT

### 13.3.3 pH Delay On Time

The delay on time sets the amount of time the controller waits to dose the pool again.

On the CHEMLINK pH setup screen, select the DELAY OT time. Use the UP and DOWN arrows to change this time. Click SAVE when finished.

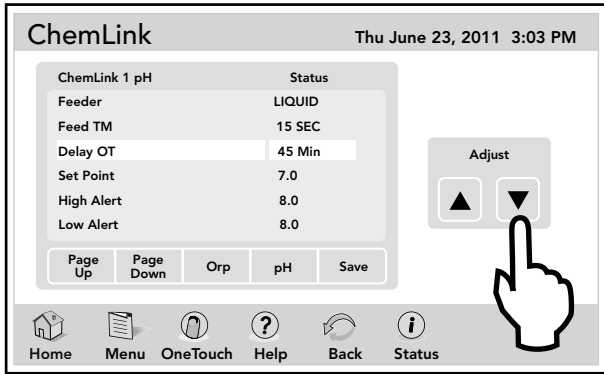


Type	ERO LP/MBV/ERO HP	Liquid
Default	Do not use	30 Sec
Range		.05 Sec to CONT

### 13.3.4 pH Setpoint

This setting specifies the level of sanitizer to be maintained.

On the CHEMLINK pH setup screen, select the SET POINT values. Use the UP and DOWN arrows to adjust the SET POINT values.

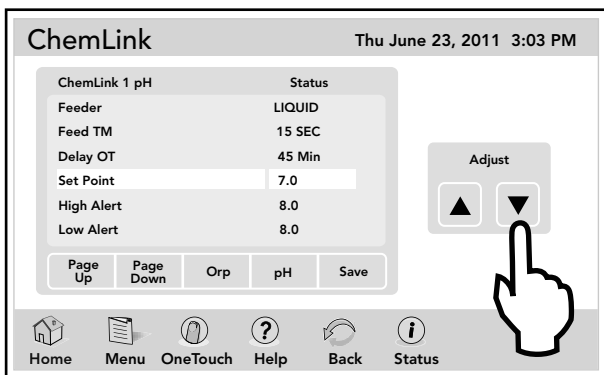


Default	7.5
Range	7.0 to 8.2

### 13.3.5 pH Alarm - High Alert

The high alert alarm sets an alarm to deactivate the controller in the event of a pH reading that is out of high range. This could be an indication of a mechanical malfunction in the feeding system.

On the CHEMLINK pH setup screen, select the HI ALERT values. Use the UP and DOWN arrows to change values. Click SAVE when finished.

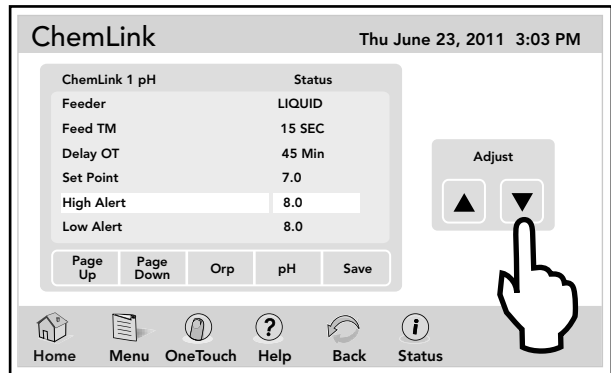


Default	8.4
Range	7.5 to 8.4

### 13.3.6 pH Alarm - Low Alert

The low alert alarm sets an alarm to deactivate the controller in the event of a pH reading that is out of low range. This could be an indication of a mechanical malfunction in the feeding system.

On the CHEMLINK pH setup screen, select the LOW ALERT setting. Use the UP and DOWN arrows to change this setting. Click SAVE when finished.

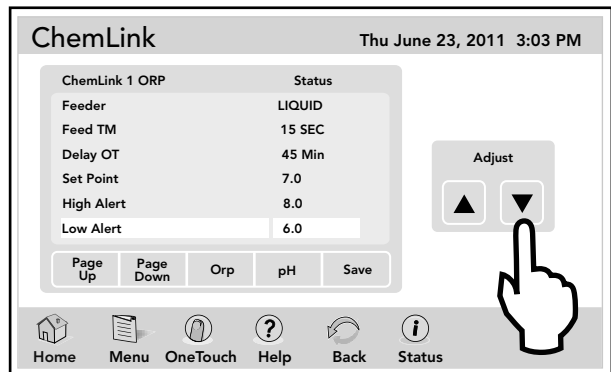


Default	6.8
Range	6.8 to 7.4

### 13.3.7 pH Acid or Base Feed

On the CHEMLINK pH setup screen, select the ACID/BASE entry. Use the UP and DOWN arrows to select new entry. Click SAVE when finished.

- DEFAULT - Acid.
- ACID - Feeds acid to lower the pH.
- BASE - Feeds base material to raise the pH.

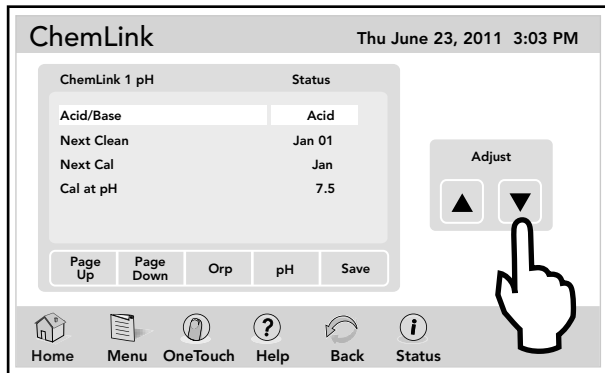

### 13.3.8 pH Next Cleaning


Manually set reminder to clean the pH sensor. Enter Month, then Year for automatic reminder.

- DEFAULT - JAN 01 (essentially OFF)

On the CHEMLINK pH set up screen, select the NEXT CLEAN date. Click the UP or DOWN arrows to display numeric keyboard screen.

Using the numeric keyboard, click clear to erase existing date. Enter new date in Month/Year format.

Click ENTER when finished.

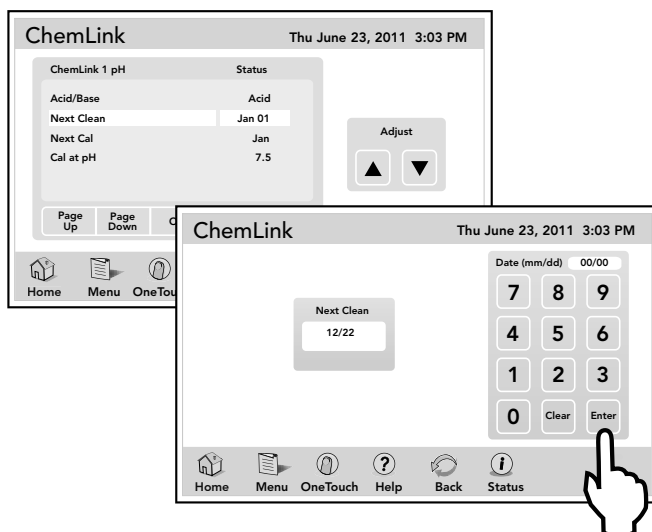

### 13.3.9 pH Next Calibration


Manually set reminder to clean the pH sensor. Enter Month, then Year for automatic reminder.

- DEFAULT - JAN 01 (essentially OFF)

On the CHEMLINK pH setup screen, Select the NEXT CAL date. Click the UP or DOWN arrows to display numeric keyboard screen.

Using the numeric keyboard, click clear to erase existing date. Enter new date in Month/Year format.

Click ENTER when finished.

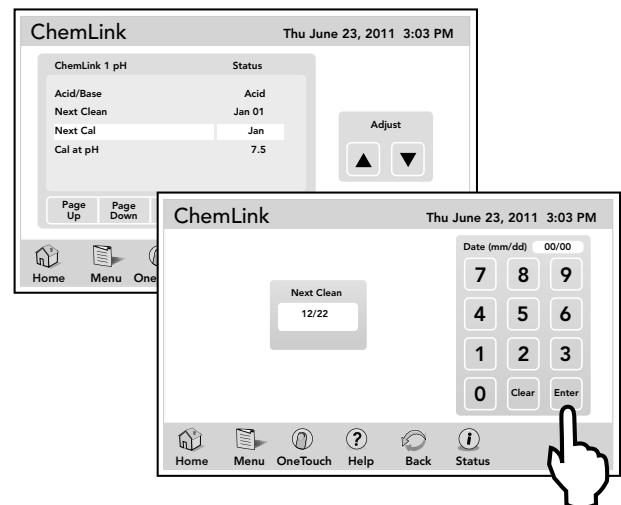


### 13.3.10 pH Calibration

This is calibration for pH reading. You can enter the actual pH here to adjust sensor reading.

- DEFAULT - 7.5

On the CHEMLINK pH setup screen, select the CAL AT PH settings. Use the UP and DOWN arrows to change this setting. Click SAVE when finished.

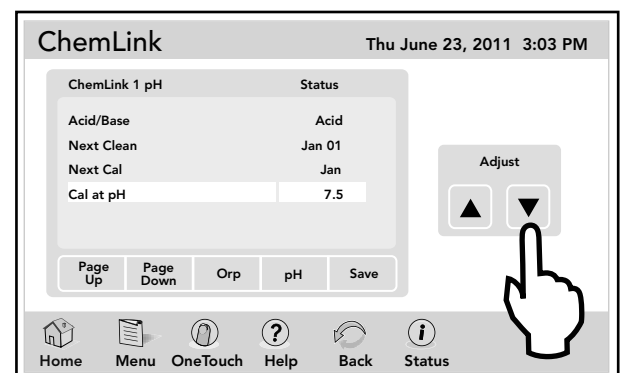


## 13.4 Manual Feed Activation

### 13.4.1 To Perform an ORP Manual Feed

On the CHEMLINK setup screen, select the ORP MANUAL FEED entry.


A CONFIRM dialog box will appear, click the YES button to proceed with the manual ORP feed.

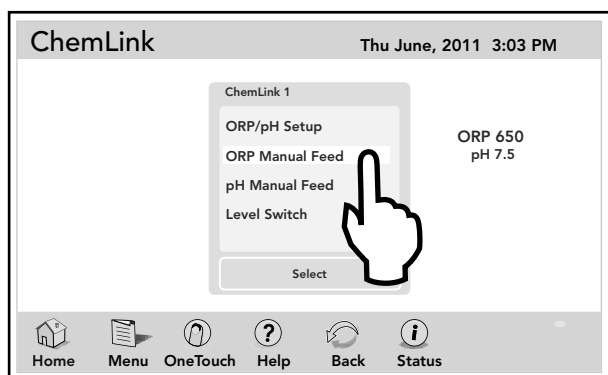

### 13.4.2 To Perform a pH Manual Feed

On the CHEMLINK setup screen, select the pH MANUAL FEED entry.

A CONFIRM dialog box will appear. Click the YES button to proceed with the manual pH feed.

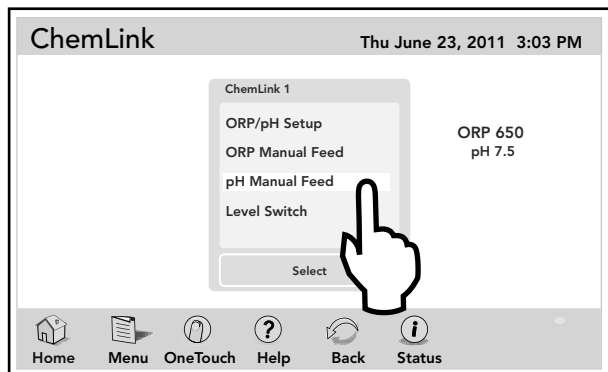

### 13.4.3 To Enable the ChemLink™ Feeder Tank Level Switch


This feature allows the use of an external, tank-mounted level switch to indicate when a liquid tank is empty to prevent the dry feeding of a peristaltic pump.

These switches are an after-market product and not available through Jandy. There are only provisions for one (1) switch. The switch must be normally closed (NC).

On the CHEMLINK setup screen, select the LEVEL SWITCH entry.

An 'X' on the display indicates the Level Switch is enabled.

Click the LEVEL SWITCH again to disable it.

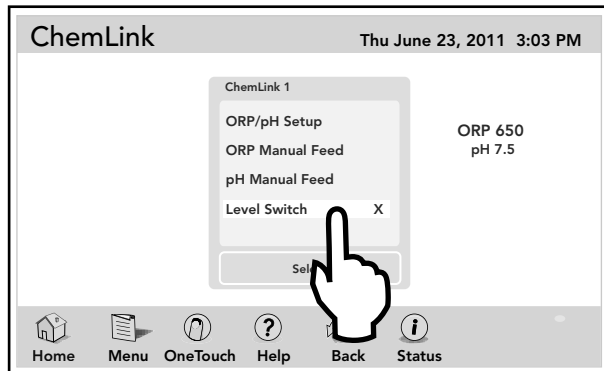

## Section 14. Glossaries

### 14.1 Safety Delays and Lockouts

#### Lockouts

Any device can be locked out. This will prevent the locked out device from being turned on manually. However, the device will turn on/off when it is being controlled by a program.

#### Pool/Spa Switching Filter Pump Delay

The filter pump turns off while valves rotate between pool and spa to prevent damage to the pool equipment. The valves take 35 seconds to rotate between pool and spa; the filter pump will activate as soon as the valves have finished turning.

#### Heater Cool Down Delay

When the system is heating (water is circulating to the spa) and the Spa button is pressed, the system will remain in Spa Mode for five (5) minutes, and will continue to circulate the water. This delay allows water to cool the heater down by circulating water through it, preventing equipment damage.

#### Heater Start-up

The heater will only come on if the water is circulating (e.g., filter pump is on and has been circulating for 15 seconds) to the corresponding body of water (e.g., spa for spa heater) and the actual water temperature is below the temperature you set with TEMP SET in the Menu. If these conditions are not met, the heater will be enabled (ready to go), but will not fire.

#### Heater "Short Cycling" Prevention

When the heater is activated and the desired temperature is reached, heater will turn off and remain off for three (3) minutes, even if the temperature falls below the desired temperature. This feature prevents heater short cycling (i.e., heater turning off and on in rapid succession).

#### Cleaner Lockout

The pool cleaner will only activate if the system is in pool mode (i.e., water circulating to pool). The pool cleaner requires that water is circulating to the pool in order for it to operate. Return to pool mode to activate the cleaner.

#### Spillover Lockout

The spillover will only activate if the system is in pool mode (i.e., water circulating to pool). The spillover requires that water is circulating to the pool in order for it to operate. Return to pool mode to activate the spillover. Also, if the pool cleaner is on, it will turn off during spillover operation.

#### Spillover

When DIP Switch S1-3 is in the ON position, the Aux. 3 relay socket is activated and the return valve actuator turns. The spillover is disabled while the spa is on. A message is displayed when spillover is turned on while in spa mode (water circulation is to spa). The spillover requires that water circulation is to pool in order to operate. The spillover will activate when the system switches back to pool mode.

#### Enabled

When activated allows the function to work.

#### Disabled

When activated does not allow the function to work.

### 14.2 Special Auxiliary Labels

#### Spare AUX

With DIP switch S1-6 turned **OFF**, the spare auxiliary socket is energized in "Pool Mode" and off in "Spa Mode". With DIP switch **ON**, the spare auxiliary socket is energized in the "Spa Mode" and off in the "Pool Mode". Operates only with Pool/Spa combination units.

#### Extra AUX

System features (for example, light dimming, software labeling, and timed aux) can be assigned to the extra AUX button. Only freeze protection cannot be assigned to the extra auxiliary.

#### Air Blower

When an AUX button labeled "Air Blower" is pressed, it will turn on the air blower for 30 minutes, then automatically turn it off. An air blower may be programmed like any other auxiliary, except that you can program only the **ON** time. The air blower will turn on at the programmed **ON** time, and turn off 30 minutes later.

This is to protect the blower motor from overheating during extended operation. To change the **ON** time from the default value of 30 minutes, refer to the **DEVICE RUNTIME** feature.

### Fill Line

When an AUX button labeled “Fill Line” is pressed, it will turn on the fill line for 30 minutes, and then automatically turn it off. A fill line may be programmed like any other auxiliary, except that you can program only the **ON** time. The fill line will turn on at the programmed **ON** time, and turn off 30 minutes later. This is to avoid overfilling the pool. Choose the appropriate number of "fill" programs during the week to keep your pool at the appropriate level. To change the **ON** time from the default value of 30 minutes, refer to the **DEVICE RUNTIME** feature.

## 14.3 Controller Messages

### CLEANER CANNOT BE TURNED ON WHILE SPA IS ON

This message is displayed if the pool cleaner is activated when in spa mode (i.e., water is circulating to spa). The pool cleaner requires that water be circulating to the pool in order for it to operate. Return to pool mode to activate the cleaner.

### CLEANER CANNOT BE TURNED ON WHILE SPILLOVER IS ON

The return valve has been rotated to the spa position to give the spa spillover effect.

### FREEZE PROTECT

This message indicates that freezing conditions have been detected by the freeze protection sensor, and that equipment assigned to freeze protection (e.g., filter pump) are active.

See Section 9.11, "**Freeze Protection**".

**NOTE** If a freeze protected Auxiliary is turned off during freeze protection, a message will be displayed indicating that item is off but will turn on in X amount of minutes. The minutes will vary depending on how long freeze mode has been active from 1 to 15 minutes.

### SENSOR OPEN

This error message indicates that the sensor is not installed properly or is malfunctioning. Call your pool service person to resolve this problem.

**NOTE** If the message reads **WATER TEMP OPEN**, the heater will not fire. If message **AIR TEMP OPEN** is displayed, freeze protection will not operate correctly.

### POOL HEATER ENABLED

This message indicates that the pool heater is ready to use but is not actually firing. The filter pump must be on, and the water temperature must be below the setting for the heater to fire.

### PUMP WILL REMAIN ON WHILE SPILLOVER IS ON

This message is displayed when you attempt to turn off the filter pump while a spa spillover is on. Since the filter pump is necessary for spillover operation, the pump will remain on until the spillover is turned off.

### PUMP WILL TURN OFF AFTER COOL DOWN CYCLE

This message indicates that the filter pump is circulating water to cool down the heater. The filter pump will continue to run for five (5) minutes to protect the heater from damage, whenever the heater has fired and has been off for less than five (5) minutes.

### PUMP WILL TURN ON AFTER DELAY

This message is displayed during pool/spa switching. The AquaLink RS waits 35 seconds while the valves turn from pool position to spa position (or vice-versa) before activating the filter pump.

### SERVICE MODE

This message indicates that the Controller has been locked out from the power center and is not operational. Service mode is used by the pool service person to aid them in servicing the pool. The Controller will not be functional until the switch at the power center is moved back to **AUTO** mode.

## SENSOR SHORT

This error message indicates that the sensor is not installed properly or is malfunctioning. Call your pool service person to resolve this problem.

**NOTE** If the message reads WATER TEMP SHORT, the heater will not fire. If the message AIR TEMP SHORT is displayed, freeze protection will not operate correctly.

## SPA WILL TURN OFF AFTER COOL DOWN CYCLE

When the system is in Spa Mode (water is circulating to the spa) and the Spa button is pressed to switch water circulation to the pool, the system will not switch to Pool Mode for five (5) minutes, and will continue to circulate the water [if the heater has fired and has been off for less than five (5) minutes]. This delay allows water to cool the heater down by circulating water through it, preventing equipment damage.

## TIMED AUX ON, WILL TURN OFF AFTER 30 MINUTES

This message indicates that a timed auxiliary (usually a blower) has been activated and will turn off after 30 minutes. Some labels (e.g., blower, fill line) have a built-in 30 minute shut off.


## TIMEOUT MODE

This message indicates that the Controller has been locked out from the Power Center and is not operational. TIME OUT mode is used by the pool service person to aid them in servicing the pool. The Controller will not be functional for three (3) hours, or until the switch at the power center is turned back to AUTO mode.

## SPILLOVER DISABLED WHILE SPA IS ON


This message is displayed when the spa spillover is pressed while in spa mode (water circulation is to spa). The spillover requires that water circulation is to pool in order to operate. The spillover will activate when the system switches back to pool mode.

# Section 15. iAquaLink Menu Flow Chart

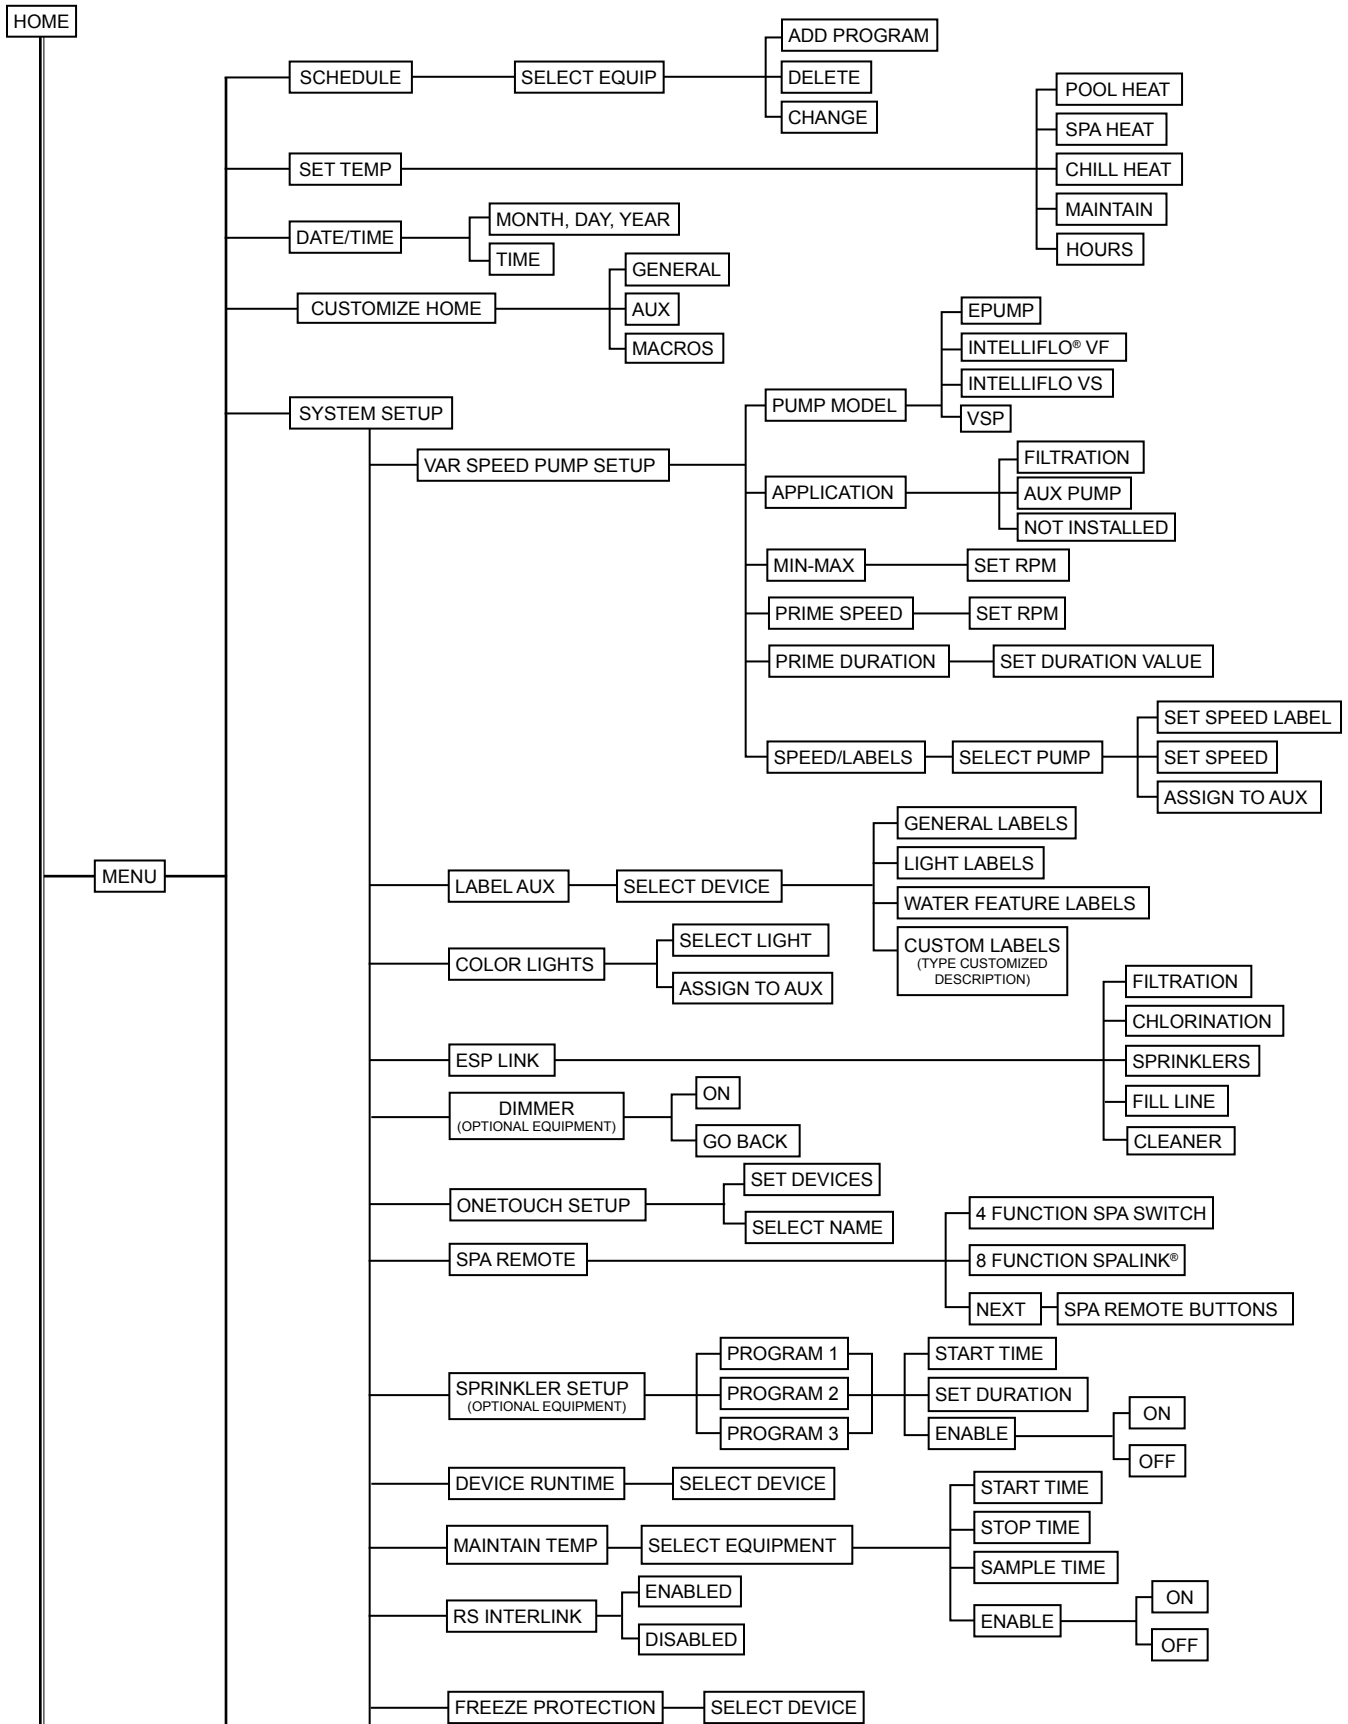


Continued on next page



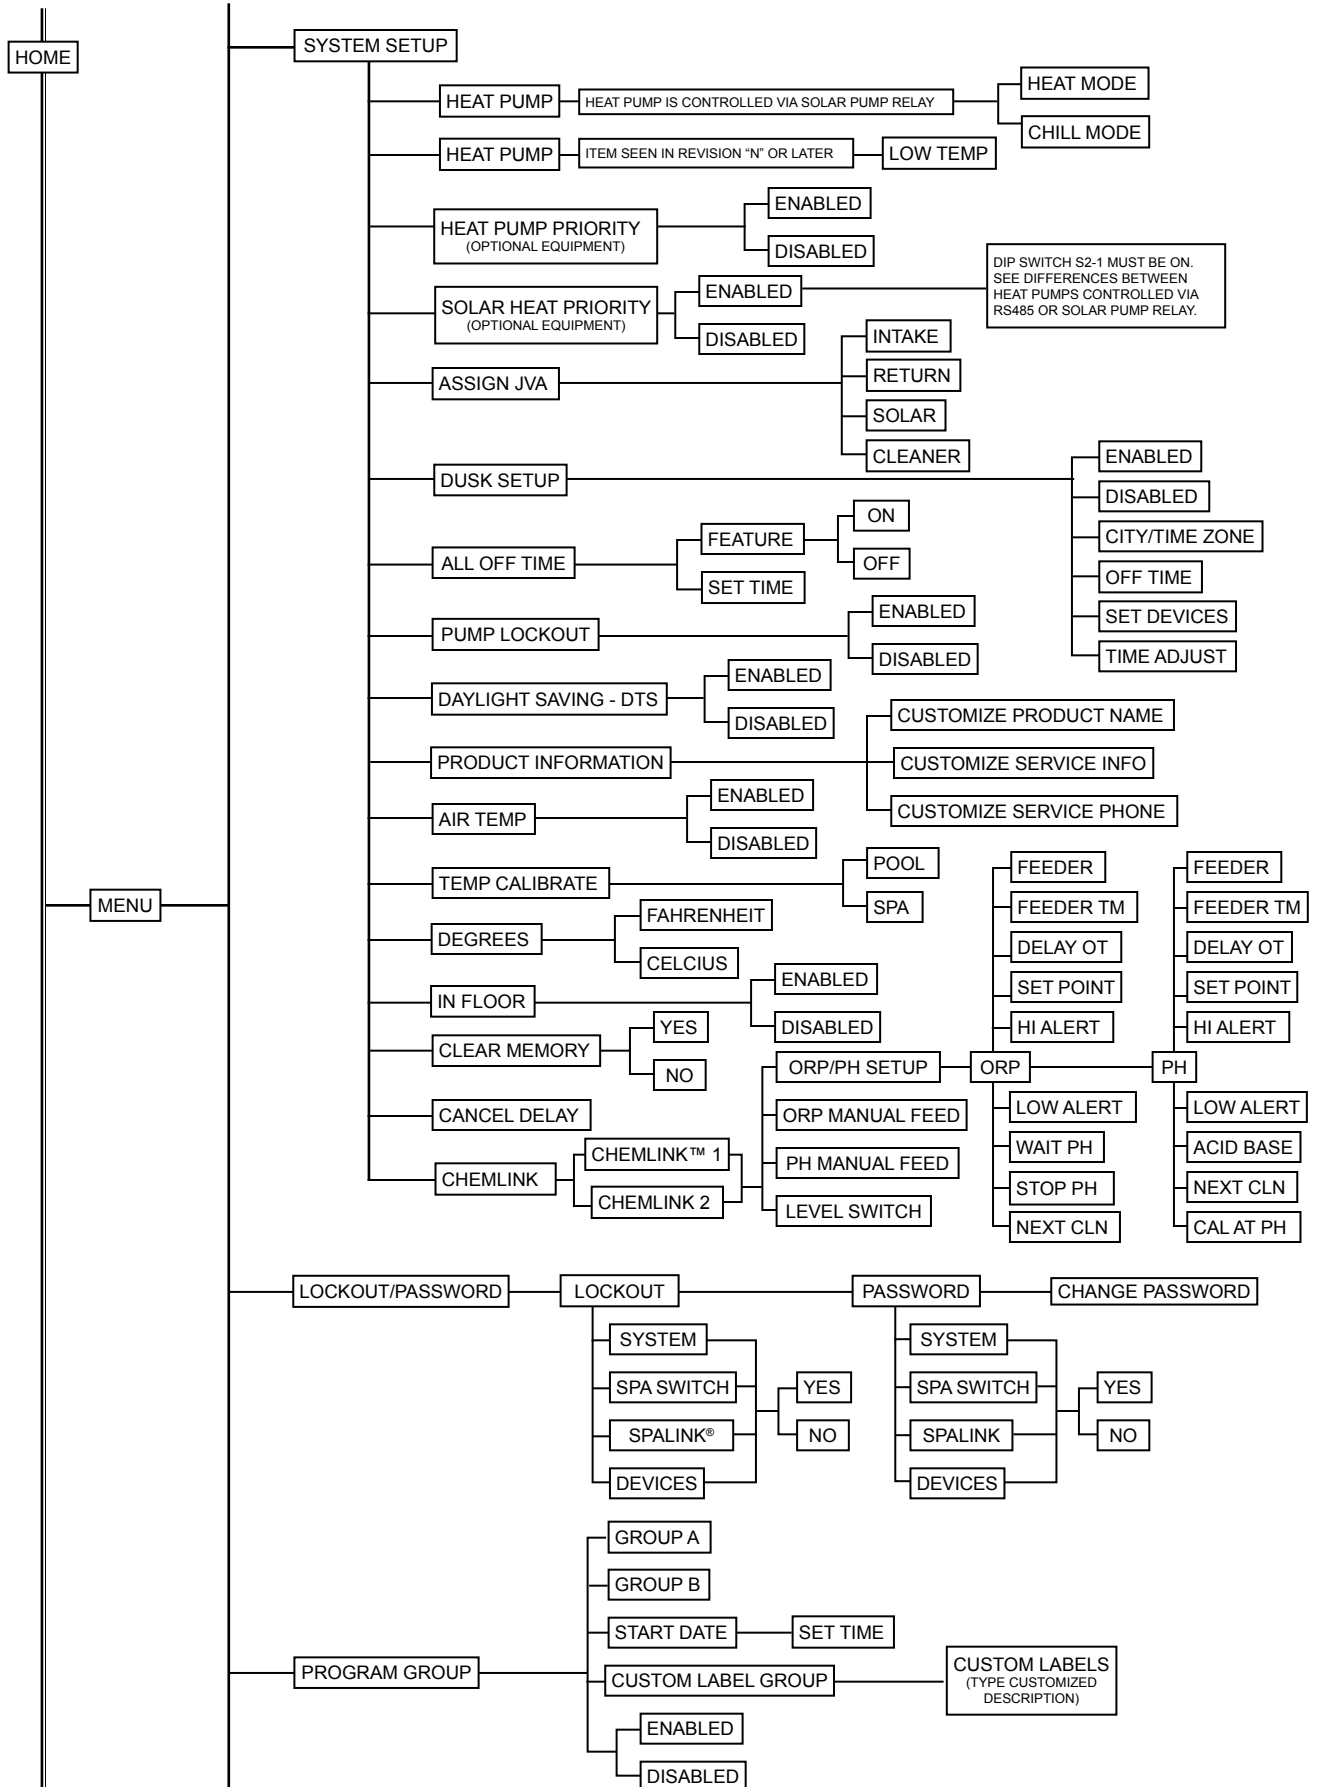

Continued on next page

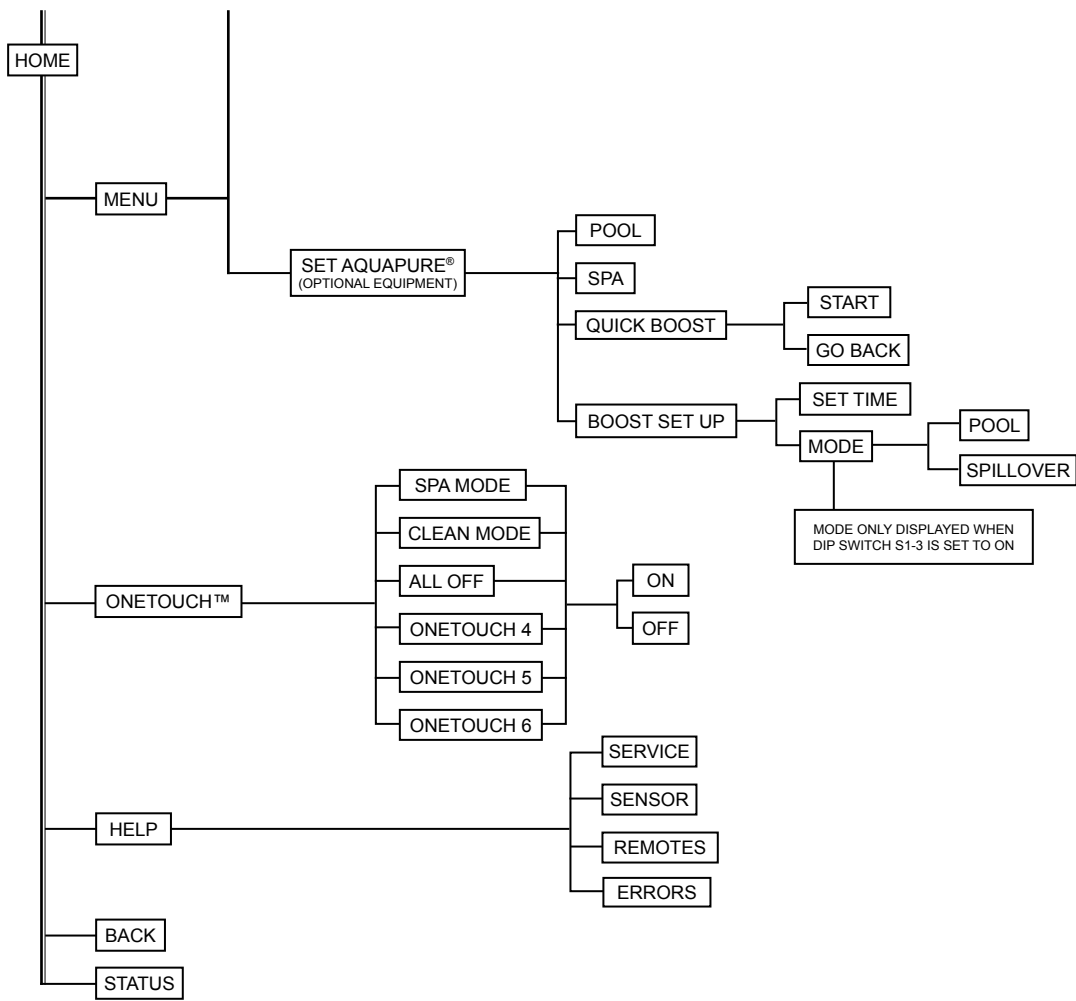

**NOTES**

**Zodiac Pool Systems Canada, Inc.**

2115 South Service Road West, Unit 3 Oakville, ON L6L 5W2  
1.888.647.4004 | [www.ZodiacPoolSystems.ca](http://www.ZodiacPoolSystems.ca)

**Zodiac Pool Systems, Inc.**

2620 Commerce Way, Vista, CA 92081  
1.800.822.7933 | [www.ZodiacPoolSystems.com](http://www.ZodiacPoolSystems.com)

*ZODIAC® is a registered trademark of Zodiac International, S.A.S.U., used under license.  
All trademarks referenced herein are the property of their respective owners.*

©2012 Zodiac Pool Systems, Inc. H00364200 Rev A 1201

